ROHDE&SCHWARZ

DOCUMENTATION

DOCUMENTATION

DOCUMENTATION

DOCUMENTATION

DOCUMENTATION

DOCUMENTATION

DOCUMENTATION

DOCUMENTATION

DOCUMENTATION

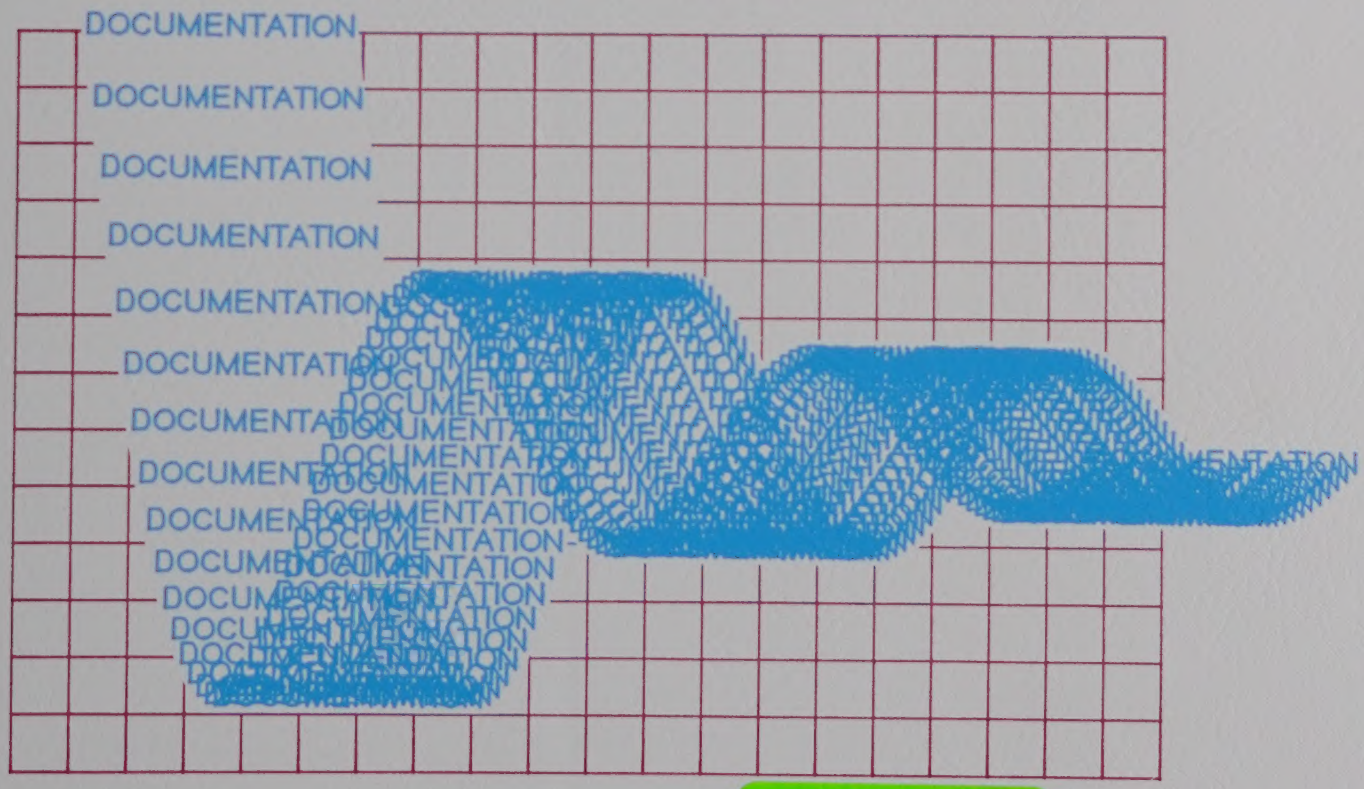

MP MASTER

ROHDE&SCHWARZ
Test and Measurement
Division

Operating Manual

3GPP FDD Base Station Test
3GPP FDD-HSDPA Base Station Test

Application Firmware Module R&S FS-K72/K74

1154.7000.02
1300.7156.02

Printed in the Federal
Republic of Germany

8
9
10
11
12
13
14
15
16
17
18
19
20
22
23
24
25
26
27
45
57
58
59
64

Contents

Safety Instructions
Certificate of Quality
Support Center Address
List of R&S Representatives

Contents of Application Firmware FS-K72/K74 Manual

3GPP FDD Base Station Test - Application Firmware FS-K72/K74 9

1 Enabling the Firmware Option 9

2 Getting Started 10

Basic Settings in Code Domain Measurement Mode 11
Measurement 1: Measurement of the Signal Channel Power 11
Measurement 2: Measurement of the Spectrum Emission Mask 12
Measurement 3: Measurement of the Relative Code Domain Power 13
Setting: Synchronization of the Reference Frequencies 13
Setting: Behaviour with Deviating Center Frequency Setting 14
Setting: Behaviour with Incorrect Scrambling Code 14
Measurement 4: Triggered Measurement of Relative Code Domain Power 15
Setting: Trigger Offset 15
Measurement 5: Measurement of the Composite EVM 16
Measurement 6: Measurement of Peak Code Domain Error 17
Measurement 7: Measurement of the Trigger To Frame Time 18
Resolution of the TTF time measurement 18
Absolute accuracy of theTTF time measurement 19
Trace statistic in the result summary display 20

3 Setup for Base Station Tests 22

Standard Test Setup 22
Presetting 23

4 3GPP FDD Test Models 24

5 Menu Overview 26

6 Configuration of 3GPP FDD Measurements 28

Measurement of Channel Power 29
Measurement of Adjacent-Channel Power - ACLR 30
Measurement of Multi Carrier Adjacent-Channel Power – MULT CARR ACLR 37
Signal Power Check – SPECTRUM EM MASK 44
Measurement of Occupied Bandwidth - OCCUPIED BANDWIDTH 49
Signal Statistics 51
Code Domain Measurements on 3GPP FDD Signals 55
Display Mode – *RESULTS* hotkey 57
Measurement Configuration – *CHAN CONF* hotkey 78
Configuration of CDP Measurement – *SETTINGS* hotkey 83
Frequency Settings – *FREQ* key 91
Span Settings – *SPAN* key 91
Level Settings – *AMPT* key 92
Marker Settings – *MKR* key 93
Changing Instrument Settings – *MKR→* key 94
Marker Functions – MKR *FCTN* key 95

Bandwidth Setting – *BW* key 95
Measurement Control – *SWEEP* key 95
Measurement Selection – *MEAS* key 95
Trigger Settings – *TRIG* key 95
Trace Settings – *TRACE* key 96
Display Lines – *LINES* key 98
Settings of Measurement Screen – *DISP key* 98
Storing and Loading of Unit Data – *FILE key* 98

7 Remote Control Commands 99
CALCulate:FEED - Subsystem 99
CALCulate:LIMit – Subsystem 101
CALCulate:LIMit:ACPower Subsystem 101
CALCulate:LIMit:SPECtrum Subsystem 106
CALCulate:MARKer – Subsystem 107
CALCulate:PEAKsearch – Subsystem 110
CALCulate:STATistics – Subsystem 111
CONFigure:WCDPower – Subsystem 113
DISPlay – Subsystem 117
FORMat – Subsystem 118
INSTrument – Subsystem 119
MMEMory – Subsystem 120
SENSe:CDPower – Subsystem 121
SENSe:Power – Subsystem 125
SENSe:SWEep – Subsystem 130
STATus-QUEStionable:SYNC Register 131
TRACe – Subsystem 132
Table of Softkeys with Assignment of IEC/IEEE Commands 139

8 Performance Test 147
Required Measuring Equipment and Accessories 147
Test Procedure 147

9 Glossary 150

10 Index 151

Figures

Fig. 3-1 BTS test setup 22
Fig. 5-1 Overview of menus - code domain power 26
Fig. 5-2 Overview of menus - measurements 27
Fig. 6-1 Power measurement in the 3.84 MHz transmission channel 29
Fig. 6-2 Adjacent-channel power measurement of a 3GPP FDD base station 30
Fig. 6-3 Measurement of spectrum emission mask 44
Fig. 6-4 Peak list of spectrum emission mask 47
Fig. 6-5 Measurement of occupied bandwidth 49
Fig. 6-6 CCDF of a 3GPP FDD signal 51
Fig. 6-7 Indication of measurement parameters 58
Fig. 6-8 CDP diagram with all channels recognized as active 60
Fig. 6-9 CDP diagram with one of the channels recognized as inactive 60
Fig. 6-10 CDP diagram with some channels including an incorrect pilot sequence 61
Fig. 6-11 CDP diagram for test model 5 61
Fig. 6-12 Composite EVM - all channels are recognized as active 62
Fig. 6-13 Composite EVM - one channel is recognized as inactive 62
Fig. 6-14 Peak domain error - all channels are recognized as active 63
Fig. 6-15 Peak domain error - one channel is not recognized as active 63
Fig. 6-16 Power versus slot for a channel with power control (timing offset 22528 chips) 64
Fig. 6-17 Power versus slot for a channel with incorrect pilot symbols at channel slots 10 and 13. 65
Fig. 6-18 Result summary 66
Fig. 6-19 Composite constellation diagram 68
Fig. 6-20 Code domain error display of a correct WCDMA signal 69
Fig. 6-21 Code domain error display of an incorrect WCDMA signal 69
Fig. 6-22 Channel table of FS-K72 and measuring test model 1. 71
Fig. 6-23 Channel table including HSDPA channels of FS-K74 and measuring test model 5 72
Fig. 6-24 Power versus symbol for one slot of a channel with 20 symbols 73
Fig. 6-25 Symbol constellation diagram 74
Fig. 6-26 Symbol constellation diagram for 16QAM 74
Fig. 6-27 Error vector magnitude for the selected slot of the selected channel 75
Fig. 6-28 Demodulated bits for the selected slot of the selected channel 75
Fig. 6-29 Demodulated bits with pilot symbols 76
Fig. 6-30 Demodulated bits for the selected slot of the selected channel in the case of 16QAM 76
Fig. 6-31 Table for editing a channel configuration 79
Fig. 6-32 Creating a new channel configuration 82
Fig. 6-33 Channel table of a signal with compressed channels 86
Fig. 6-34 Code domain power and power versus slot of a compressed channel 87
Fig. 6-35 Data scheme of the captured and analyzed frames 88
Fig. 6-36 Parameters of marker info field 93
Fig. 6-37 Result summary with applied average mode 97

Tables

Table 2-1: Default settings for code domain measurement 11
Table 4-1: Test model 1 24
Table 4-2: Test model 2 24
Table 4-3: Test model 3 24
Table 4-4: Test model 4 25
Table 4-5: Test model 5 25
Table 6-1: Maximum compensated frequency error 66
Table 6-2: Maximum number of captured frames 89
Table 7-1: Definition of the error bits of the SYNC register 131
Table 8-1 Required measuring equipment and accessories 147

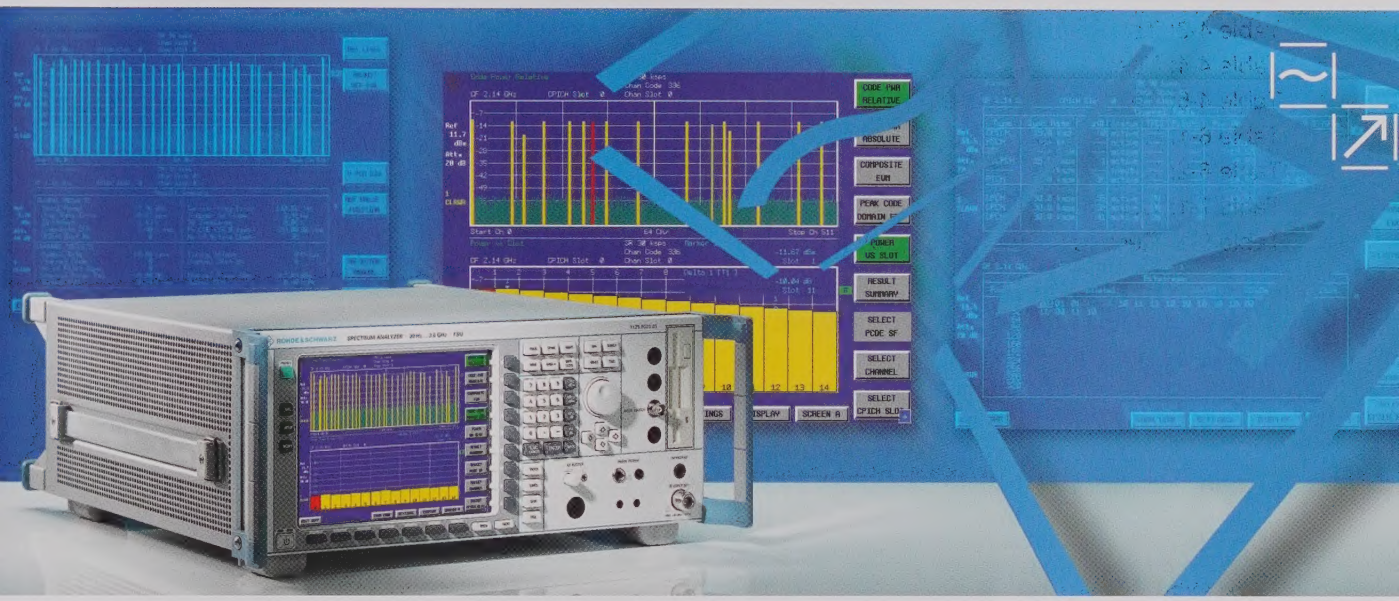

WCDMA 3GPP Application Firmware R&S FS-K72/-K73

3GPP transmitter measurements on base stations and modules with Signal Analyzer R&S FSQ and Spectrum Analyzers R&S FSU and R&S FSP

- Adds measurement functions to the R&S FSU, R&S FSQ and R&S FSP analyzer families in line with the 3GPP specifications for the FDD mode
- Application Firmware R&S FS-K72 provides the functionality needed for base station testing. Application Firmware R&S FS-K73 provides user equipment (UE) functionality:
  - Code domain power (code domain analyzer)
  - Code domain power versus time
  - Error vector magnitude (EVM)
  - Peak code domain error
  - Timing offset

ROHDE&SCHWARZ

Application Firmware R&S FS-K72/-K73 can be installed on all models of the Signal Analyzer R&S FSQ and Spectrum Analyzers R&S FSU and R&S FSP, and enhances the range of applications to include code domain power and modulation measurements on 3GPP FDD signals.

Featuring wide dynamic range for adjacent channel power, the R&S FSU and the R&S FSQ are ideal tools for WCDMA base station transmitter measurements in development and production.

The R&S FSP is the ideal development tool with easy-to-use measurement functions integrated into a cost-effective analyzer, especially in mobile radio development.

Code domain power measurements

The main application of R&S FS-K72/-K73 is the determination of the power in the individual code channels referred to as code domain power measurement. The power ratios between the individual channels, for instance, can be checked for compliance with the nominal values. Moreover, this measurement is a very efficient tool for detecting impairments such as clipping or intermodulation that are not obvious from the spectrum alone. The power of the different codes is shown versus the code number.

To investigate power control, the power characteristic in a code channel can be displayed versus all slots of a frame (10 ms).

The R&S FSP requires the option R&S FSP-B70 to perform measurements over more than one slot in the code domain.

Measurement of modulation quality: peak code domain error and EVM

Two different measurements are stipulated in the 3GPP specifications for determining the modulation quality:

- EVM (error vector magnitude)
- Peak code domain error

The code domain power measurement offers an in-depth analysis for a WCDMA signal with several active channels. The composite EVM measurement returns a modulation error value for the total signal, whereas the symbol EVM function yields the individual vector errors of the active channels.

To obtain the peak code domain error (PCDE), the vector error between the measured signal and the ideal reference signal is determined and projected to the codes of a specific spreading factor. With R&S FS-K72, the spreading factor for the PCDE measurement can be selected by the user.

Automatic detection of active channels and their data rate

The scrambling code, which is user-selectable in the application firmware, must be known for the code domain power measurement. 3GPP FDD signals may use different spreading factors and data rates in the various channels. The data rates are automatically detected by R&S FS-K72/-K73 and need not be known beforehand.

Spectrum emission mask

To perform the spectrum emission mask measurement in line with the 3GPP specifications, the R&S FS-K72/-K73 provides an automatic function that gives a pass/fail result.

Spectrum measurements over wide dynamic range

The RMS detector integrated as standard allows precise transmitter power measurements irrespective of the waveform.

Owing to their extremely wide dynamic range, the R&S FSU and the R&S FSQ are the ideal analyzers for out-of-band emissions that have to be detected for instance by means of adjacent-channel power measurements. Noise correction yields a value of 84 dB in the adjacent channel which exceeds by far the values prescribed by the specification.

Measurement	R&S FSU/ FSP	R&S FSU/ FSP with R&S FS-K72	R&S FSU/ FSP with R&S FS-K73
Maximum output power	x		
CPICH power accuracy		x	N/A
Frequency error		x	x[1]
Power control dynamic range		x	
Total power dynamic range		x	N/A
Occupied bandwidth	x		
Spectrum emission mask	x	x	x
ACLR	x		
Spurious emissions	x		
Error vector magnitude		x	x
Peak code domain error		x	x

[1] Frequency relative to frequency received from BS.

Measurements cannot only be performed on systems but also on individual components such as amplifiers which have to meet more stringent requirements.

Remote control

All measurements can be remote-controlled. The results and demodulated data bits can be transferred via the IEEE bus. Ideal for use in production.

Other standards

Application Package R&S FS-K5 (GSM and EDGE measurements) turn the R&S FSP/R&S FSU/R&S FSQ into multi-standard signal analyzers for base stations as well as for mobiles.

Applications and examples

Code domain power measurement on a signal with 32 active channels (1)

Active and inactive channels are marked in different colours. Inactive channels (noise, interference) are displayed with the highest spreading factor.

The table also shows the main parameters of the total signal at a glance, e.g. total power, frequency error and error of chip rate, as well as the parameters of the marked code channel such as timing offset and code power.

Peak code domain error measurement (2)

The peak code domain error is projected to the codes of the highest spreading factors. The maximum value of all codes per slot is displayed.

Automatic detection of channels and decoding of information (3)

Information about the active channels is presented in a list. In addition, the user data transmitted on each physical channel can be analyzed.

1

2

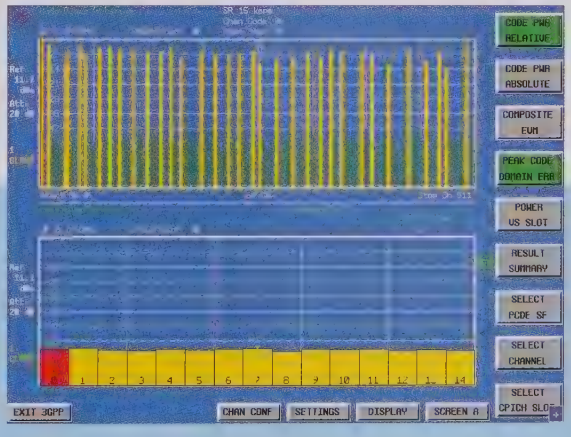

3

Measurement of code domain power versus time (4)
The code power can additionally be displayed versus the 15 slots of a frame to determine the accuracy of power control.

Spectrum emission mask measurement (5)
The measurement is defined with a 30 kHz measurement bandwidth at 2.5 MHz to 3.5 MHz offset from the carrier. From 3.5 MHz to 12.5 MHz , the measurement is performed in a 1 MHz measurement bandwidth. The limit values are according to 3GPP Specifications TS 34.121.

Multicode UE transmission (6)
The mapping of the active channels on the I and Q branches is automatically detected and displayed.

4

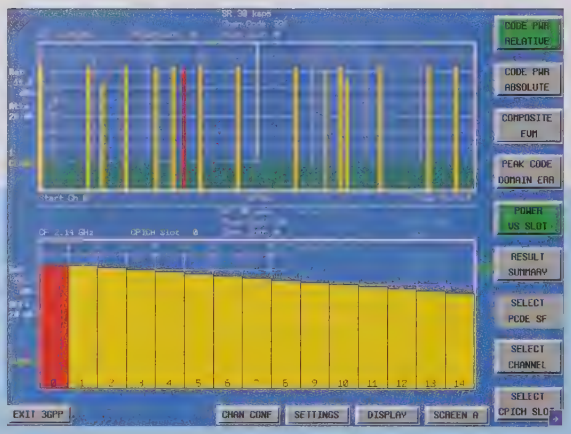

5

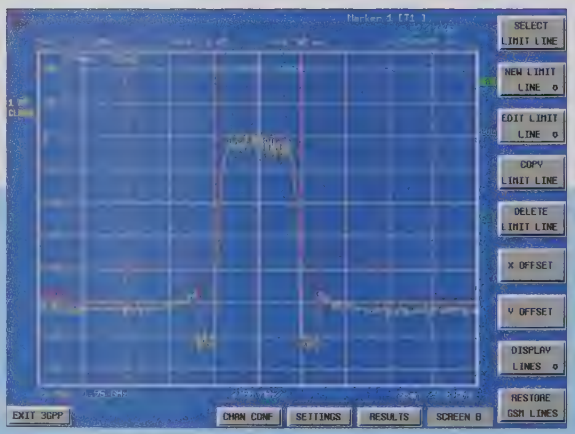

6

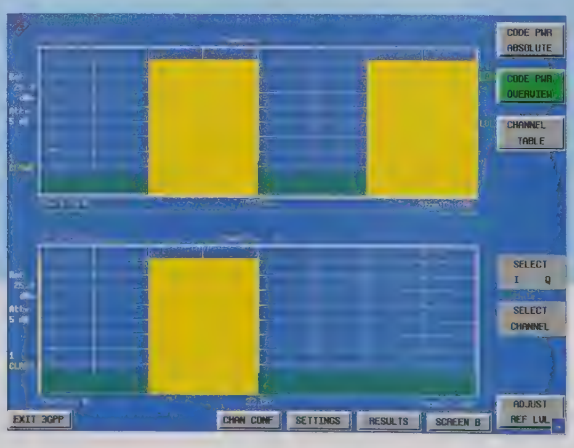

Specifications R&S FS-K72

The specifications below apply to the R&S FSQx (R&S FSQ3/8/26), R&S FSUx (R&S FSU3/8/26) und R&S FSPx (R&S FSP3/7/13/30/40). They are based on the data sheet specifications of the Spectrum Analyzers R&S FSQ, R&S FSU and R&S FSP and have not been checked separately. Specifications apply under the following conditions: 15 minutes warmup time at ambient temperature, specified environmental conditions met, calibration cycle adhered to and internal calibration performed. Data with tolerances are measurement uncertainties with a confidence level of 95%. The specified level measurement errors do not take into account systematic errors due to reduced S/N ratio.
The R&S FSPx analyzer has to be equipped with options R&S FSP-B15 and R&S FSP-B70.

Measurement	R&S FSP	R&S FSQ/R&S FSU	Test specifications and permissible measurement uncertainty of 3GPP TS 25.141
Code domain power (applies to code domain power and code domain power versus slot)			
Total signal power, measurement uncertainty	<0.5 dB	<0.3 dB	**6.2.1** <0.7 dB
CPICH power, measurement uncertainty	<0.6 dB	<0.4 dB	**6.2.2** <0.8 dB
Code power; measurement uncertainty Absolute Relative	<0.6 dB <0.1 dB	<0.4 dB <0.1 dB	<0.1 dB
Frequency error Measurement range Measurement uncertainty (S/N >40 dB)	<1 kHz <1.5 Hz + error of reference frequency	<1 kHz <1.5 Hz + error of reference frequency	**6.3, 6.7.1** <12 Hz
Composite EVM			
Measurement range	2% to 25%	1.5% to 25%	12.5% to 25%
Inherent EVM	<2%	<1.5%	
Measurement uncertainty	<1%	<0.5%	<2.5%
Peak code domain error			**6.7.3**
Measurement range	0 dB to –55 dB	0 dB to –60 dB	–33 dB
Inherent PCDE	–55 dB	–60 dB	
Measurement uncertainty	<1 dB (0 dB to 40 dB)	<1 dB (0 dB to 40 dB)	<1 dB
Output power			**6.2.1**
Measurement uncertainty Absolute Relative	<0.5 dB <0.2 dB	<0.3 dB <0.1 dB	<0.7 dB
Occupied bandwidth (99 %)			**6.5.1**
Measurement uncertainty	<85 kHz	<85 kHz	<100 kHz
ACLR (adjacent-channel leakage ratio) (3.84 MHz BW)			**6.5.2.2**
5 MHz offset			45 dB
Dynamic range Without noise correction	65 dB	77 dB	
Measurement uncertainty	<0.3 dB + error due to S/N	<0.2 dB + error due to S/N	<0.8 dB
Spurious emissions			**6.5.2.3**
Level uncertainty <3.6 GHz 3.6 GHz to 13 GHz	<0.5 dB <2.5 dB	<0.5 dB <2.5 dB	
Spectrum emission mask	<1.5 dB	<1 dB	<1.5 dB

Specifications R&S FS-K73

The specifications below apply to the R&S FSQx (R&S FSQ3/8/26), R&S FSUx (R&S FSU3/8/26) und R&S FSPx (R&S FSP3/7/13/30/40). They are based on the data sheet specifications of Spectrum Analyzers R&S FSP and R&S FSU, and have not been checked separately. Specifications apply under the following conditions: 15 minutes warmup time at ambient temperature, specified environmental conditions met, calibration cycle adhered to and internal calibration performed. Data with tolerances are measurement uncertainties with a confidence level of 95%. Data without tolerances are typical values. The specified level measurement errors do not take into account systematic errors due to reduced S/N ratio.
The R&S FSPx analyzer has to be equipped with option R&S FSP-B15.

Measurement	R&S FSP	R&S FSQ/R&S FSU	Test specifications and permissible measurement uncertainty to 3GPP TS 34.121
Code domain power (applies to code domain power and code domain power vs slot)			
Maximum output power	<0.5 dB	<0.3 dB	**5.2** <0.7 dB
Minimum output power	<0.5 dB	<0.4 dB	**5.4.3** <1 dB
Code power; measurement uncertainty Absolute Relative	<0.6 dB <0.1 dB <0.3 dB	<0.4 dB <0.1 dB <0.3 dB	<0.1 dB over a 1.5 dB range <0.3 dB over a 12 dB range
Frequency error Measurement range Measurement uncertainty (S/N > 40 dB)	<1 kHz <1.5 Hz + error of reference frequency	<1 kHz <1.5 Hz + error of reference frequency	**5.3** <10 Hz
Composite EVM			
Measurement range	2% to 25%	1.5% to 25%	12.5% to 25%
Inherent EVM	<2%	<1.5%	
Measurement uncertainty	<1%	<0.5%	0%
Peak code domain error			**5.13**
Measurement range	0 dB to –55 dB	0 dB to –60 dB	–15 dB
Inherent PCDE	–55 dB	–60 dB	
Measurement uncertainty	<1 dB (0 dB to 40 dB)	<1 dB (0 dB to 40 dB)	<1 dB
Output power			**5.2**
Measurement uncertainty Absolute Relative	<0.5 <0.2	<0.3 dB <0.1 dB	<0.7 dB
Occupied bandwidth (99 %)			**5.8**
Measurement uncertainty	<85 kHz	<85 kHz	<100 kHz
ACLR (adjacent-channel leakage ratio) (3.84 MHz BW), test model 1 with 32 DPCH			**6.5.2.2**
5 MHz offset			32.2 dB
Dynamic range Without noise correction	65 dB	77 dB	
Measurement uncertainty	<0.3 dB + error due to S/N	<0.2 dB + error due to S/N	<0.8 dB
Spurious emissions			
Level uncertainty <3.6 GHz 3.6 GHz to 13 GHz	<0.5 dB <2.5 dB	<0.5 dB <2.5 dB	
Spectrum emission mask	<1.5 dB	<1 dB	<1.5 dB

Configuration overview

	Base station		User equipment (UE)	
	R&S FSQ/R&S FSU	R&S FSP	R&S FSQ/R&S FSU	R&S FSP
R&S FS-K72	●	●		
R&S FS-K73			●	●
R&S FSP-B15		●		●
R&S FSP-B70		●		○[1]

[1] Extends measurement range from one slot to one frame.

Ordering information

R&S FS-K72

Application Firmware R&S FS-K72 can be integrated into any member of the R&S FSU and R&S FSQ family. Options R&S FSP-B70 and option R&S FSP-B15 are prerequisites for operating the application firmware on any member of the R&S FSP spectrum analyzer family.

Designation	Type	Order No.
WCDMA 3GPP Application Firmware	R&S FS-K72	1154.7000.02
Pulse Calibrator for R&S FSP	R&S FSP-B15	1155.1006.02
Demodulator Hardware for R&S FSP	R&S FSP-B70	1157.0559.02

R&S FS-K73

Application Firmware R&S FS-K73 can be integrated into any member of the R&S FSQ & R&S FSU family. Option R&S FSP-B15 is a prerequisite for operating the application firmware on any member of the R&S FSP spectrum analyzer family.

Designation	Type	Order No.
WCDMA 3GPP Application Firmware	R&S FS-K73	1154.7252.02
Pulse Calibrator for R&S FSP	R&S FSP-B15	1155.1006.02

Recommended extras

R&S FSP-B70 extends the measurement range of the Application Firmware R&S FS-K73 for the Spectrum Analyzer R&S FSP from one slot to one frame.

Designation	Type	Order No.
Demodulator Hardware for R&S FSP	R&S FSP-B70	1157.0559.02

Certified Environmental System ISO 14001 REG. NO 1954

Certified Quality System ISO 9001

PD 0... 22 WCDMA 3GPP Application Firmware R&S FS-K72/-K73 · Trade names are trademarks of the owners · Subject to chang... without tolerances: typical values

Printed in Germany 070...

ROHDE&SCHWARZ GmbH & Co. KG · Mühldorfstraße 15 · 81671 München · Germany · P.O.B. 80 14 69 · 81614 München · Germany · Telephone +49 89 4129-0
www.rohde-schwarz.com · Customer Support: Tel. +49 1805124242, Fax +49 89 4129-13777, E-mail: CustomerSupport@rohde-schwarz.com

Safety Instructions

This unit has been designed and tested in accordance with the EC Certificate of Conformity and has left the manufacturer's plant in a condition fully complying with safety standards.

To maintain this condition and to ensure safe operation, the user must observe all instructions and warnings given in this operating manual.

Safety-related symbols used on equipment and documentation from R&S:

Observe operating instructions

Weight indication for units >18 kg

PE terminal

Ground terminal

Danger! Shock hazard

Warning! Hot surfaces

Ground

Attention! Electrostatic sensitive devices require special care

1. The unit may be used only in the operating conditions and positions specified by the manufacturer. Unless otherwise agreed, the following applies to R&S products:

   IP degree of protection 2X, pollution severity 2 overvoltage category 2, only for indoor use, altitude max. 2000 m.

   The unit may be operated only from supply networks fused with max. 16 A.

   Unless specified otherwise in the data sheet, a tolerance of ±10% shall apply to the nominal voltage and of ±5% to the nominal frequency.

2. For measurements in circuits with voltages V_{rms} > 30 V, suitable measures should be taken to avoid any hazards.

   (using, for example, appropriate measuring equipment, fusing, current limiting, electrical separation, insulation).

3. If the unit is to be permanently wired, the PE terminal of the unit must first be connected to the PE conductor on site before any other connections are made. Installation and cabling of the unit to be performed only by qualified technical personnel.

4. For permanently installed units without built-in fuses, circuit breakers or similar protective devices, the supply circuit must be fused such as to provide suitable protection for the users and equipment.

5. Prior to switching on the unit, it must be ensured that the nominal voltage set on the unit matches the nominal voltage of the AC supply network.

   If a different voltage is to be set, the power fuse of the unit may have to be changed accordingly.

6. Units of protection class I with disconnectible AC supply cable and appliance connector may be operated only from a power socket with earthing contact and with the PE conductor connected.

7. It is not permissible to interrupt the PE conductor intentionally, neither in the incoming cable nor on the unit itself as this may cause the unit to become electrically hazardous.

   Any extension lines or multiple socket outlets used must be checked for compliance with relevant safety standards at regular intervals.

8. If the unit has no power switch for disconnection from the AC supply, the plug of the connecting cable is regarded as the disconnecting device. In such cases it must be ensured that the power plug is easily reachable and accessible at all times (length of connecting cable approx. 2 m). Functional or electronic switches are not suitable for providing disconnection from the AC supply.

   If units without power switches are integrated in racks or systems, a disconnecting device must be provided at system level.

9. Applicable local or national safety regulations and rules for the prevention of accidents must be observed in all work performed.

   Prior to performing any work on the unit or opening the unit, the latter must be disconnected from the supply network.

   Any adjustments, replacements of parts, maintenance or repair may be carried out only by authorized R&S technical personnel.

   Only original parts may be used for replacing parts relevant to safety (eg power switches, power transformers, fuses). A safety test must be performed after each replacement of parts relevant to safety.

   (visual inspection, PE conductor test, insulation-resistance, leakage-current measurement, functional test).

continued overleaf

10. Ensure that the connections with information technology equipment comply with IEC950 / EN60950.
11. Lithium batteries must not be exposed to high temperatures or fire.

    Keep batteries away from children.

    If the battery is replaced improperly, there is danger of explosion. Only replace the battery by R&S type (see spare part list).

    Lithium batteries are suitable for environmentally-friendly disposal or specialized recycling. Dispose them into appropriate containers, only.

    Do not short-circuit the battery.
12. Equipment returned or sent in for repair must be packed in the original packing or in packing with electrostatic and mechanical protection.
13. Electrostatics via the connectors may damage the equipment. For the safe handling and operation of the equipment, appropriate measures against electrostatics should be implemented.
14. The outside of the instrument is suitably cleaned using a soft, lint-free dustcloth. Never use solvents such as thinners, acetone and similar things, as they may damage the front panel labeling or plastic parts.
15. Any additional safety instructions given in this manual are also to be observed.

Qualitätszertifikat

Sehr geehrter Kunde,

Sie haben sich für den Kauf eines Rohde & Schwarz-Produktes entschieden. Hiermit erhalten Sie ein nach modernsten Fertigungsmethoden hergestelltes Produkt. Es wurde nach den Regeln unseres Qualitätsmanagementsystems entwickelt, gefertigt und geprüft. Das Rohde & Schwarz-Qualitätsmanagementsystem ist u.a. nach ISO 9001 und ISO 14001 zertifiziert.

Certificate of quality

Dear Customer,

You have decided to buy a Rohde & Schwarz product. You are thus assured of receiving a product that is manufactured using the most modern methods available. This product was developed, manufactured and tested in compliance with our quality management system standards. The Rohde & Schwarz quality management system is certified according to standards such as ISO 9001 and ISO 14001.

Certificat de qualité

Cher client,

Vous avez choisi d'acheter un produit Rohde & Schwarz. Vous disposez donc d'un produit fabriqué d'après les méthodes les plus avancées. Le développement, la fabrication et les tests respectent nos normes de gestion qualité. Le système de gestion qualité de Rohde & Schwarz a été homologué, entre autres, conformément aux normes ISO 9001 et ISO 14001.

ROHDE&SCHWARZ

Support Center

Telefon / Telephone: **+49 (0)180 512 42 42**

Fax: **+49 89 41 29 137 77**

E-mail: **CustomerSupport@rohde-schwarz.com**

Für technische Fragen zu diesem Rohde & Schwarz-Gerät steht Ihnen die Hotline der Rohde & Schwarz Vertriebs-GmbH, Support Center, zur Verfügung.

Unser Team bespricht mit Ihnen Ihre Fragen und sucht Lösungen für Ihre Probleme.

Die Hotline ist Montag bis Freitag von 8.00 bis 17.00 Uhr MEZ besetzt.

Bei Anfragen außerhalb der Geschäftszeiten hinterlassen Sie bitte eine Nachricht oder senden Sie eine Notiz per Fax oder E-Mail. Wir setzen uns dann baldmöglichst mit Ihnen in Verbindung.

Um Ihr Gerät stets auf dem neuesten Stand zu halten, abonnieren Sie bitte Ihren persönlichen Newsletter unter

http://www.rohde-schwarz.com/www/response.nsf/newsletterpreselection.

Sie erhalten dann regelmäßig Informationen über Rohde & Schwarz-Produkte Ihrer Wahl, über Firmware-Erweiterungen, neue Teiber und Applikationsschriften.

Should you have any technical questions concerning this Rohde & Schwarz product, please contact the hotline of Rohde & Schwarz Vertriebs-GmbH, Support Center.

Our hotline team will answer your questions and find solutions to your problems.

You can reach the hotline Monday through Friday from 8:00 until 17:00 CET.

If you need assistance outside office hours, please leave a message or send us a fax or e-mail. We will contact you as soon as possible.

To keep your instrument always up to date, please subscribe to your personal newsletter at

http://www.rohde-schwarz.com/www/response.nsf/newsletterpreselection.

As a subscriber, you will receive information about your selection of Rohde & Schwarz products, about firmware extensions, new drivers and application notes on a regular basis.

ROHDE&SCHWARZ

Adressen/Addresses

FIRMENSITZ/HEADQUARTERS

Phone
Fax
E-mail

Rohde & Schwarz GmbH & Co. KG
Mühldorfstraße 15 · D-81671 München
Postfach 80 14 69 · D-81614 München
+49 (89) 41 29-0
+49 89 4129-121 64
info@rohde-schwarz.com

WERKE/PLANTS

Rohde & Schwarz Messgerätebau GmbH
Riedbachstraße 58 · D-87700 Memmingen
Postfach 1652 · D-87686 Memmingen
+49 (8331) 108-0
+49 (8331) 108-11 24
info.rsmb@rohde-schwarz.com

Rohde & Schwarz GmbH & Co. KG
Werk Teisnach
Kaikenrieder Straße 27 · D-94244 Teisnach
Postfach 1149 · D-94240 Teisnach
+49 (9923) 857-0
+49 (9923) 857-11 74
info.rsts@rohde-schwarz.com

Rohde & Schwarz GmbH & Co. KG
Dienstleistungszentrum Köln
Graf-Zeppelin-Straße 18 · D-51147 Köln
Postfach 98 02 60 · D-51130 Köln
+49 (2203) 49-0
+49 (2203) 49 51-308
info.rsdc@rohde-schwarz.com
service.rsdc@rohde-schwarz.com

TOCHTERUNTERNEHMEN/SUBSIDIARIES

Rohde & Schwarz Vertriebs-GmbH
Mühldorfstraße 15 · D-81671 München
Postfach 80 14 69 · D-81614 München
+49 (89) 41 29-137 74
+49 (89) 41 29-137 77

Rohde & Schwarz International GmbH
Mühldorfstraße 15 · D-81671 München
Postfach 80 14 60 · D-81614 München
+49 (89) 41 29-129 84
+49 (89) 41 29-120 50
info.rsi@rohde-schwarz.com

Rohde & Schwarz Engineering and Sales GmbH
Mühldorfstraße 15 · D-81671 München
Postfach 80 14 29 · D-81614 München
+49 (89) 41 29-137 11
+49 (89) 41 29-137 23
info.rse@rohde-schwarz.com

Rohde & Schwarz BICK Mobilfunk GmbH
Fritz-Hahne-Str. 7 · D-31848 Bad Münder
Postfach 2062 · D-31844 Bad Münder
+49 (5042) 998-0
+49 (5042) 998-105
info.bick@rohde-schwarz.com

Rohde & Schwarz FTK GmbH
Wendenschlossstraße 168, Haus 28
D-12557 Berlin
+49 (30) 658 91-122
+49 (30) 655 50-221
info.ftk@rohde-schwarz.com

Rohde & Schwarz SIT GmbH
Agastraße 3
D-12489 Berlin
+49 (30) 658 84-0
+49 (30) 658 84-183
info.sit@rohde-schwarz.com

ADRESSEN WELTWEIT/ADDRESSES WORLDWIDE

Albania siehe/see Austria

Algeria
Rohde & Schwarz
Bureau d'Alger
5B Place de Laperrine
16035 Hydra-Alger
+213 (21) 48 20 18
+213 (21) 69 46 08

Argentina
Precision Electronica S.R.L.
Av. Pde Julio A. Roca 710 - 6° Piso
(C1067ABP) Buenos Aires
+541 (14) 331 41 99
+541 (14) 334 51 11
alberto_lombardi@prec-elec.com.ar

Australia
Rohde & Schwarz (Australia) Pty. Ltd.
Sales Support
Unit 6
2-8 South Street
Rydalmere, N.S.W. 2116
+61 (2) 88 45 41 00
+61 (2) 96 38 39 88
lyndell.james@rsaus.rohde-schwarz.com

Austria
Rohde & Schwarz-Österreich Ges.m.b.H.
Am Europlatz 3
Gebäude B
1120 Wien
+43 (1) 602 61 41-0
+43 (1) 602 61 41-14
rs-austria@rsoe.rohde-schwarz.com

Azerbaijan
Rohde & Schwarz Azerbaijan
Liaison Office Baku
ISR Plaza
340 Nizami Str.
370000 Baku
+994 (12) 93 31 38
+994 (12) 93 03 14
rs-azerbaijan@rus.rohde-schwarz.com

Baltic Countries siehe/see Denmark

Bangladesh
BIL Consortium Ltd.
Corporate Office
House-33, Road-4, Block-F
Banani
Dhaka-1213
+880 (2) 881 06 53
+880 (2) 882 82 91

Belgium
Rohde & Schwarz Belgium N.V.
Excelsiorlaan 31 Bus 1
1930 Zaventem
+32 (2) 721 50 02
+32 (2) 725 09 36
info@rsb.rohde-schwarz.com

Bosnia-Herzegovina siehe/see Slovenia

Brazil
Rohde & Schwarz Do Brasil Ltda.
Av. Alfredo Egidio de Souza Aranha n° 177,
1° andar - Santo Amaro
04726-170 Sao Paulo - SP
+55 (11) 56 44 86 11 (general)
+55 (11) 56 44 86 25 (sales)
+55 (11) 56 44 86 36
sales-brazil@rsdb.rohde-schwarz.com

Brunei
GKL Equipment Pte Ltd.
#11-01 BP Tower
396 Alexandra Road
Singapore 119954
+65 (6) 276 06 26
+65 (6) 276 06 29
gkleqpt@singnet.com.sg

Bulgaria
Rohde & Schwarz
Representation Office Bulgaria
39, Fridtjof Nansen Blvd.
1000 Sofia
+359 (2) 96 343 34
+359 (2) 96 321 97
rs-bulgaria@rsbg.rohde-schwarz

Canada
Rohde & Schwarz Canada Inc.
555 March Rd.
Kanata, Ontario K2K 2M5
+1 (613) 592 80 00
+1 (613) 592 80 09
cgirwarnauth@rscanada.ca

Tektronix Canada Inc.
Test and Measurement
4929 Place Olivia
Saint-Laurent, Pq
Montreal H4R 2V6
+1 (514) 331 43 34
+1 (514) 331 59 91

Chile
Dymeq Ltda.
Av. Larrain 6666
Santiago
+56 (2) 339 20 00
+56 (2) 339 20 10
dymeq@dymeq.com

China
Rohde & Schwarz China Ltd.
Representative Office Beijing
Room 602, Parkview Center
2 Jiangtai Road
Chao Yang District
Beijing 100016
+86 (10) 64 31 28 28
+86 (10) 64 37 98 88
info.rschina@rsbp.rohde-schwarz.com

Rohde & Schwarz China Ltd.
Representative Office Shanghai
Central Plaza
227 Huangpi North Road
RM 807/809
Shanghai 200003
+86 (21) 63 75 00 18
+86 (21) 63 75 91 70

Rohde & Schwarz China Ltd.
Representative Office Guangzhou
Room 2903, Metro Plaza
183 Tianhe North Road
Guangzhou 510075
+86 (20) 87 55 47 58
+86 (20) 87 55 47 59

Rohde & Schwarz China Ltd.
Representative Office Chengdu
Unit G, 28/F, First City Plaza
308 Shuncheng Avenue
Chengdu 610017
+86 (28) 86 52 76 05 to 09
+86 (28) 86 52 76 10
rsbpc@mail.sc.cninfo.net

Rohde & Schwarz China Ltd.
Representative Office Xi'an
Room 10125, Jianguo Hotel Xi'an
No. 2, Huzhu Road
Xi'an 710048
+86 (29) 321 82 33
+86 (29) 329 60 15
sherry.yu@rsbp.rohde-schwarz.com

Adressen/Addresses

China
Rohde & Schwarz China Ltd.
Representative Office Shenzhen
No. 2002 Jiabin Road
Luohu District
Shenzhen 518001
+86 (755) 25 18 50 18
+86 (755) 25 18 50 18
jessica.lia@rsbp.rohde-schwarz.com

Croatia
siehe/see Slovenia

Cyprus
Hinis Telecast Ltd.
Agiou Thoma 18
Kiti
Larnaca 7550
+357 (24) 42 51 78
+357 (24) 42 46 21
hinis@logos.cy.net

Czech Republic
Rohde & Schwarz Praha s.r.o.
Hadovka Office Park
Evropská 33c
16000 Praha 6
+420 (2) 24 31 12 32
+420 (2) 24 31 70 43
office@rscz.rohde-schwarz.com

Denmark
Rohde & Schwarz Danmark A/S
Ejby Industrivej 40
2600 Glostrup
+45 (43) 43 66 99
+45 (43) 43 77 44

Ecuador
Representaciones Manfred Weinzierl
Vía Láctea No. 4 y Via Sta. Inés
P.O.Box 17-22-20309
1722 Cumbayá-Quito
+593 (22) 89 65 97
+593 (22) 89 65 97
mweinzierl@plus.net.ec

Egypt
U.A.S. Universal Advanced Systems
31 Manshiet El-Bakry Street
Heliopolis
11341 Cairo
+20 (2) 455 67 44
+20 (2) 256 17 40
an_uas@link.net

El Salvador
siehe/see Mexico

Estonia
Rohde & Schwarz Danmark A/S
Estonian Branch Office
Narva mnt. 13
10151 Tallinn
+372 (6) 14 31 23
+372 (6) 14 31 21
margo.fingling@rsdk.rohde-schwarz.com

Finland
Orbis Oy
P.O.Box 15
00421 Helsinki 42
+358 (9) 47 88 30
+358 (9) 53 16 04
info@orbis.fi

France
Rohde & Schwarz France
Immeuble "Le Newton"
9-11, rue Jeanne Braconnier
92366 Meudon La Forêt Cédex
+33 (1) 41 36 10 00
+33 (1) 41 36 11 73
contact@rsf.rohde-schwarz.com

Niederlassung/Subsidiary Rennes
37 Rue du Bignon
Bât. A
F-35510 Cesson Sevigne
+33 (0) 299 51 97 00
+33 (0) 299 51 98 77

Niederlassung/Subsidiary Toulouse
Technoparc 3
B.P. 501
F-31674 Labège Cédex
+33 (0) 561 39 10 69
+33 (0) 561 39 99 10

Office Aix-en-Provence
+33 (0) 494 07 39 94
+33 (0) 494 07 55 11

Office Lyon
+33 (0) 478 29 88 10
+33 (0) 478 79 18 57

Office Nancy
+33 (0) 383 54 51 29
+33 (0) 383 54 82 09

Germany
Zweigniederlassungen der Rohde & Schwarz Vertriebs-GmbH/Branch offices of Rohde & Schwarz Vertriebs-GmbH

Zweigniederlassung Nord, Geschäftsstelle Berlin
Ernst-Reuter-Platz 10 · D-10587 Berlin
Postfach 100620 · D-10566 Berlin
+49 (30) 34 79 48-0
+49 (30) 34 79 48 48
info.rsv@rohde-schwarz.com

Germany
Zweigniederlassung Büro Bonn
Josef-Wirmer-Straße 1-3 · D-53123 Bonn
Postfach 140264 · D-53057 Bonn
+49 (228) 918 90-0
+49 (228) 25 50 87
info.rsv@rohde-schwarz.com

Zweigniederlassung Nord, Geschäftsstelle Hamburg
Steilshooper Alle 47 · D-22309 Hamburg
Postfach 60 22 40 · D-22232 Hamburg
+49 (40) 63 29 00-0
+49 (40) 630 78 70
info.rsv@rohde-schwarz.com

Zweigniederlassung Mitte, Geschäftsstelle Köln
Niederkasseler Straße 33 · D-51147 Köln
Postfach 900 149 · D-51111 Köln
+49 (2203) 807-0
+49 (2203) 807-650
info.rsv@rohde-schwarz.com

Zweigniederlassung Süd, Geschäftsstelle München
Mühldorfstraße 15 · D-81671 München
Postfach 80 14 69 · D-81614 München
+49 (89) 41 86 95-0
+49 (89) 40 47 64
info.rsv@rohde-schwarz.com

Zweigniederlassung Süd, Geschäftsstelle Nürnberg
Donaustraße 36
D-90451 Nürnberg
+49 (911) 642 03-0
+49 (911) 642 03-33
info.rsv@rohde-schwarz.com

Zweigniederlassung Mitte, Geschäftsstelle Neu-Isenburg
Siemensstraße 20
D-63263 Neu-Isenburg
+49 (6102) 20 07-0
+49 (6102) 20 07 12
info.rsv@rohde-schwarz.com

Ghana
Kop Engineering Ltd.
P.O. Box 11012
3rd Floor Akai House, Osu
Accra North
+233 (21) 77 89 13
+233 (21) 701 06 20

Greece
Mercury S.A.
6, Loukianou Str.
10675 Athens
+302 (10) 722 92 13
+302 (10) 721 51 98
mercury@hol.gr

Guatemala
siehe/see Mexico

Honduras
siehe/see Mexico

Hong Kong
Electronic Scientific Engineering
9/F North Somerset House
Taikoo Place
979 King's Road
Hong Kong
+852 (25) 07 03 33
+852 (25) 07 09 25
stephenchau@ese.com.hk

Hungary
Rohde & Schwarz
Budapesti Iroda
Váci út 169
1138 Budapest
+36 (1) 412 44 60
+36 (1) 412 44 61
rs-hungary@rshu.rohde-schwarz.com

Iceland
siehe/see Denmark

India
Rohde & Schwarz India Pvt. Ltd.
Bangalore Office
No. 24, Service Road, Domlur
2nd Stage Extension
Bangalore - 560 071
+91 (80) 535 23 62
+91 (80) 535 03 61
rsindiab@rsnl.net

India
Rohde & Schwarz India Pvt. Ltd.
Hyderabad Office
302 & 303, Millenium Centre
6-3-1099/1100, Somajiguda
Hyderabad - 500 016
+91 (40) 23 32 24 16
+91 (40) 23 32 27 32
rsindiah@nd2.dot.net.in

India
Rohde & Schwarz India Pvt. Ltd.
RS India Mumbai Office
B-603, Remi Bizcourt, Shah Industrial Estate, Off Veera Desai Road
Mumbai - 400 058
+91 (22) 26 30 18 10
+91 (22) 26 73 20 81
rsindiam@rsnl.net

Indonesia
PT Rohde & Schwarz Indonesia
Graha Paramita 5th Floor
Jln. Denpasar Raya Blok D-2
Jakarta 12940
+62 (21) 252 36 08
+62 (21) 252 36 07
sales@rsbj.rohde-schwarz.com
services@rsbj.rohde-schwarz.com

Adressen/Addresses

Iran

Rohde & Schwarz Iran
Groundfloor No. 1, 14th Street
Khaled Eslamboli (Vozara) Ave.
15117 Tehran
+98 (21) 872 42 96
+98 (21) 871 90 12
rs-tehran@neda.net

Ireland

siehe/see United Kingdom

Israel

Eastronics Ltd.
Messtechnik/T&M Equipment
11 Rozanis St.
P.O.Box 39300
Tel Aviv 61392
+972 (3) 645 87 77
+972 (3) 645 86 66
david_hasky@easx.co.il

J.M. Moss (Engineering) Ltd.
Kommunikationstechnik/ Communications Equipment
9 Oded Street
P.O.Box 967
52109 Ramat Gan
+972 (3) 631 20 57
+972 (3) 631 40 58
jmmoss@zahav.net.il

Italy

Rohde & Schwarz Italia S.p.a.
Centro Direzionale Lombardo
Via Roma 108
20060 Cassina de Pecchi (MI)
+39 (02) 95 70 42 03
+39 (02) 95 30 27 72
ornella.crippa@rsi.rohde-schwarz.com

Rohde & Schwarz Italia S.p.a.
Via Tiburtina 1182
00156 Roma
+39 (06) 41 59 82 18
+39 (06) 41 59 82 70

Japan

Rohde & Schwarz
Support Center Japan K.K.
711 bldg., Room 501 (5th floor)
7-11-18 Nishi-Shinjuku
Shinjuku-ku
Tokyo 160-0023
+81 (3) 59 25 12 88
+81 (3) 59 25 12 90

Advantest Corp.
Sales Promotion Department
Shinjuku-NS bldg.
2-4-1, Nishi-Shinjuku
Shinjuku-ku
Tokyo 160-0880
+81 (3) 33 42 75 52
+81 (3) 53 22 72 70
mkoyama@ns.advantest.co.jp

Jordan

Jordan Crown Engineering & Trading Co.
Jabal Amman, Second Circle
Youssef Ezzideen Street
P.O.Box 830414
Amman, 11183
+962 (6) 462 17 29
+962 (6) 465 96 72
jocrown@go.com.jo

Kazakhstan

Rohde & Schwarz Kazakhstan
Representative Office Almaty
Pl. Respubliki 15
480013 Almaty
+7 (32) 72 67 23 54
+7 (32) 72 67 23 46
rs-kazakhstan@rus-rohde-schwarz.com

Kenya

Excel Enterprises Ltd
Dunga Road
P.O.Box 42 788
Nairobi
+254 (2) 55 80 88
+254 (2) 54 46 79

Korea

Rohde & Schwarz Korea Ltd.
83-29 Nonhyun-Dong, Kangnam-Ku
Seoul 135-010
+82 (2) 3485 1900
+82 (2) 3485 1900
sales@rskor.rohde-schwarz.com
service@rskor.rohde-schwarz.com

Kuwait

Group Five Trading & Contracting Co.
Mezanine Floor
Al-Bana Towers
Ahmad Al Jaber Street
Sharq
+965 (244) 91 72/73/74
+965 (244) 95 28
jk_agarwal@yahoo.com

Latvia

Rohde & Schwarz Danmark A/S
Latvian Branch Office
Merkela iela 21-301
1050 Riga
+371 (7) 50 23 55
+371 (7) 50 23 60
rsdk@rsdk.rohde-schwarz.com

Lebanon

Rohde & Schwarz
Liaison Office Riyadh
P.O.Box 361
Riyadh 11411
+966 (1) 465 64 28 Ext. 303
+966 (1) 465 64 28 Ext. 229
chris.porzky@rsd.rohde-schwarz.com

Lebanon

Netcom
P.O.Box 55199
Op. Ex-Presidential Palace
Horsh Tabet
Beirut
+961-1-48 69 99
+961-1-49 05 11
netcom@inco.com.lb

Liechtenstein

siehe/see Switzerland

Lithuania

Rohde & Schwarz Danmark A/S
Lithuanian Office
Lukiskiu 5-228
2600 Vilnius
+370 (5) 239 50 10
+370 (5) 239 50 11

Luxembourg

siehe/see Belgium

Macedonia

siehe/see Slovenia

Malaysia

Dagang Teknik Sdn. Bhd.
No. 9, Jalan SS 4D/2
Selangor Darul Ehsan
47301 Petaling Jaya
+60 (3) 27 03 55 68
+60 (3) 27 03 34 39
maryanne@danik.com.my

Malta

ITEC International Technology Ltd
B'Kara Road
San Gwann SGN 08
+356 (21) 37 43 00 or 37 43 29
+356 (21) 37 43 53
sales@itec.com.mt

Mexico

Rohde & Schwarz de Mexico
Av. Prol. Americas No. 1600, 2° Piso
Col. Country Club
Guadalajara, Jal.
Mexico CP, 44610
+52 (33) 36 78 91 70
+52 (33) 36 78 92 00

Rohde & Schwarz de Mexico
S. de R.L. de C.V.
German Centre Oficina 4-2-2
Av. Santa Fé 170
Col. Lomas de Santa Fé
01210 Mexico D.F.
+52 (55) 85 03 99 13
+52 (55) 85 03 99 16
latinoamerica@rsd.rohde-schwarz.com

Moldavia

siehe/see Romania

Nepal

ICTC Pvt. Ltd.
Hattisar, Post Box No. 660
Kathmandu
+977 (1) 443 48 95
+977 (1) 443 49 37
ictc@mos.com.np

Netherlands

Rohde & Schwarz Nederland B.V.
Perkinsbaan 1
3439 ND Nieuwegein
+31 (30) 600 17 00
+31 (30) 600 17 99
info@rsn.rohde-schwarz.com

New Zealand

Nichecom
1 Lincoln Ave.
Tawa, Wellington
+64 (4) 232 32 33
+64 (4) 232 32 30
rob@nichecom.co.nz

Nicaragua

siehe/see Mexico

Nigeria

Ferrostaal Abuja
Plot 3323, Barada Close
P.O.Box 8513, Wuse
Off Amazon Street
Maitama, Abuja
+234 (9) 413 52 51
+234 (9) 413 52 50
fsabuja@rosecom.net

Norway

Rohde & Schwarz Norge AS
Enebakkveien 302 B
1188 Oslo
+47 (23) 38 66 00
+47 (23) 38 66 01

Oman

Mustafa Sultan Science & Industry Co.LLC.
Test & Measurement Products
Way No. 3503
Building No. 241
Postal Code 112
Al Khuwair, Muscat
+968 63 60 00
+968 60 70 66
m-aziz@mustafasultan.com

Pakistan

Siemens Pakistan
23, West Jinnah Avenue
Islamabad
+92 (51) 227 22 00
+92 (51) 227 54 98
reza.bokhary@siemens.com.pk

Adressen/Addresses

Panama siehe/see Mexico

Papua New Guinea siehe/see Australia

Philippines
Rohde & Schwarz (Philippines) Ltd.
PBCom Tower
Ayala Ave. cor. Herrera Sts.
Makati City
+63 (2) 755 88 70
+63 (2) 755 88 67

Poland
Rohde & Schwarz SP.z o.o.
Przedstawicielstwo w Polsce
ul. Stawki 2, Pietro 28
00-193 Warszawa
+48 (22) 860 64 94
+48 (22) 860 64 99
rs-poland@rspl.rohde-schwarz.com

Portugal
Rohde & Schwarz Portugal, Lda.
Alameda Antonio Sergio
7-R/C - Sala A
2795-023 Linda-a-Velha
+351 (21) 415 57 00
+351 (21) 415 57 10
info@rspt.rohde-schwarz.com

Romania
Rohde & Schwarz
Representation Office Bucharest
Str. Uranus 98
Sc. 2, Et. 5, Ap. 36
76102 Bucuresti, Sector 5
+40 (21) 410 68 46
+40 (21) 411 20 13
rs-romania@rsro.rohde-schwarz.com

Russian Federation
Rohde & Schwarz
Representative Office Moscow
119180, Yakimanskaya nab., 2
Moscow
+7 (095) 745 88 50 to 53
+7 (095) 745 88 54
rs-russia@rsru.rohde-schwarz.com

Saudi Arabia
Rohde & Schwarz Liaison Office Riyadh
c/o Haji Abdullah Alireza Co. Ltd.
P.O.Box 361
Riyadh 11411
+966 (1) 465 64 28 Ext. 303
+966 (1) 465 6428 Ext. 229
chris.porzky@rsd.rohde-schwarz.com

Saudi Arabia
Gentec
Haji Abdullah Alireza & Co. Ltd.
P.O.Box 43054
Riyadh
+966 (1) 465 64 28
+966 (1) 465-64 28
akanbar@gentec.com.sa

Serbia-Montenegro
Representative Office Belgrade
Tose Jovanovica 7
11030 Beograd
+381 (11) 305 50 25
+381 (11) 305 50 24

Singapore
Rohde & Schwarz
Regional Headquarters Singapore Pte. Ltd.
1 Kaki Bukit View
#05-01/02 Techview
Singapore 415 941
+65 (6) 846 1872
+65 (6) 846 1252
rsca@rssg.rohde-schwarz.com

Slovak Republic
Specialne systemy a software, a.s.
Svrcia ul.
841 04 Bratislava
+421 (2) 65 42 24 88
+421 (2) 65 42 07 68
stefan.lozek@special.sk

Slovenia
Rohde & Schwarz
Representation Ljubljana
Tbilisijska 89
1000 Ljubljana
+386 (1) 423 46 51
+386 (1) 423 46 11
rs-slovenia@rssi.rohde-schwarz.com

South Africa
Protea Data Systems (Pty.) Ltd.
Communications and Measurement Division
Private Bag X19
Bramley 2018
+27 (11) 719 57 00
+27 (11) 786 58 91
unicm@protea.co.za

South Africa
Protea Data Systems (Pty.) Ltd.
Cape Town Branch
Unit G9, Centurion Business Park
Bosmandam Road
Milnerton
Cape Town, 7441
+27 (21) 555 36 32
+27 (21) 555 42 67
unicm@protea.co.za

Spain
Rohde & Schwarz Espana S.A.
Salcedo, 11
28034 Madrid
+34 (91) 334 10 70
+34 (91) 329 05 06
rses@rses.rohde-schwarz.com

Sri Lanka
Dynatel Communications (PTE) Ltd.
451/A Kandy Road
Kelaniya
+94 (1) 90 80 01
+94 (1) 91 04 69
dyna-svc@sltnet.lk

Sudan
SolarMan Co. Ltd.
P.O.Box 11 545
North of Fraouq Cementry 6/7/9 Bldg. 16
Karthoum
+249 (11) 47 31 08
+249 (11) 47 31 38
solarman29@hotmail.com

Sweden
Rohde & Schwarz Sverige AB
Marketing Div.
Flygfältsgatan 15
128 30 Skarpnäck
+46 (8) 605 19 00
+46 (8) 605 19 80
info@rss.se

Switzerland
Roschi Rohde & Schwarz AG
Mühlestr. 7
3063 Ittigen
+41 (31) 922 15 22
+41 (31) 921 81 01
sales@roschi.rohde-schwarz.com

Syria
Electro Scientific Office
Baghdad Street
Dawara Clinical Lab. Bldg
P.O.Box 8162
Damascus
+963 (11) 231 59 74
+963 (11) 231 88 75
memo@hamshointl.com

Taiwan
Rohde & Schwarz Taiwan (Pvt.) Ltd.
Floor 14, No. 13, Sec. 2, Pei-Tou Road
Taipei 112
+886 (2) 28 93 10 88
+886 (2) 28 91 72 60
celine.tu@rstw.rohde-schwarz.com

Tanzania
SSTL Group
P.O. Box 7512
Dunga Street Plot 343/345
Dar es Salaam
+255 (22) 276 00 37
+255 (22) 276 02 93
sstl@ud.co.tz

Thailand
Schmidt Electronics (Thailand) Ltd.
63 Government Housing Bank Bldg.
Tower II, 19th floor, Rama 9 Rd.
Huaykwang, Bangkapi
Bangkok 10320
+66 (2) 643 13 30 to 39
+66 (2) 643 13 40
kamthoninthuyot@schmidtthailand.com

Trinidad &Tobago siehe/see Mexico

Tunisia
Teletek
71, Rue Alain Savary
Residence Alain Savary (C64)
1003 Tunis
+216 (71) 77 22 88
+216 (71) 77 05 53

Turkey
Rohde & Schwarz International GmbH
Liaison Office Istanbul
Bagdad Cad. 191/3, Arda Apt. B-Blok
81030 Selamicesme-Istanbul
+90 (216) 385 19 17
+90 (216) 385 19 18
rsturk@superonline.com

Ukraine
Rohde & Schwarz
Representative Office Kiev
4, Patris Loumoumba ul
01042 Kiev
+38 (044) 268 60 55
+38 (044) 268 83 64
rsbkiev@public.ua.net

United Arab Emirates
Rohde & Schwarz International GmbH
Liaison Office Abu Dhabi
P.O. Box 31156
Abu Dhabi
+971 50 62 40 197
+971 (4) 3944 794
michael.rogler@rsd.rohde-schwarz.com

United Arab Emirates
Rohde & Schwarz Bick Mobile Communication
P.O.Box 17466
Dubai
+971 (4) 883 71 35
+971 (4) 883 71 36

United Arab Emirates
Rohde & Schwarz Emirates L.L.C.
Ahmed Al Nasri Building, Mezzanine Floor,
P.O.Box 31156
Off old Airport Road
Behind new GEMACO Furniture
Abu Dhabi
+971 (2) 631 20 40
+971 (2) 631 30 40
rsuaeam@emirates.net.ae

Adressen/Addresses

United Kingdom	Rohde & Schwarz UK Ltd. Ancells Business Park Fleet Hampshire GU 51 2UZ England	+44 (1252) 81 88 88 (sales) +44 (1252) 81 88 18 (service) +44 (1252) 81 14 47 sales@rsuk.rohde-schwarz.com
Uruguay	Aeromarine S.A. Cerro Largo 1497 11200 Montevideo	+598 (2) 400 39 62 +598 (2) 401 85 97 mjn@aeromarine.com.uy
USA	Rohde & Schwarz, Inc. Broadcast & Comm. Equipment 8661-A Robert Fulton Drive Columbia, MD 21046-2265	+1 (410) 910 78 00 +1 (410) 910 78 01 rsatv@rsa.rohde-schwarz.com rsacomms@rsa.rohde-schwarz.com
USA	Rohde & Schwarz, Inc. Marketing & Support Center/T&M Equipment 2540 SW Alan Blumlein Way M/S 58-925 Beaverton, OR 97077-0001	+1 (503) 627 26 84 +1 (503) 627 25 65 info@rsa.rohde-schwarz.com
USA	Rohde & Schwarz, Inc. Systems & EMI Products 8080 Tristar Drive Suite 120 Irving, Texas 75063	+1 (469) 713 53 00 +1 (469) 713 53 01 info@rsa.rohde-schwarz.com
Venezuela	Equilab Telecom C.A. Centro Seguros La Paz Piso 6, Local E-61 Ava. Francisco de Miranda Boleita, Caracas 1070	+58 (2) 12 34 46 26 +58 (2) 122 39 52 05 r_ramirez@equilabtelecom.com
Venezuela	Representaciones Bopic S.A. Calle C-4 Qta. San Jose Urb. Caurimare Caracas 1061	+58 (2) 129 85 21 29 +58 (2) 129 85 39 94 incotr@cantv.net
Vietnam	Schmidt Vietnam Co. (H.K.) Ltd., Representative Office Hanoi Intern. Technology Centre 8/F, HITC Building 239 Xuan Thuy Road Cau Giay, Tu Liem Hanoi	+84 (4) 834 61 86 +84 (4) 834 61 88 svnhn@schmidtgroup.com
West Indies	siehe/see Mexico	

Contents of Operating Manual for Application Firmware FS-K72/K74

This manual contains all information about the operation of an FSU equipped with Application Firmware FS-K72/K74. It covers operation via menus and the remote control commands for the 3GPP FDD base station test.

This manual consists of the data sheet and 10 chapters:

Data sheet	Lists the guaranteed specifications and the firmware characteristics.
Chapter 1	Describes the procedure for enabling the application firmware module.
Chapter 2	Provides typical examples of measurements by means of tests.
Chapter 3	Describes the measurement setup for base station tests.
Chapter 4	Describes the 3GPP FDD test models as stipulated in the BTS test (3G TS 25.141 V3.7.0).
Chapter 5	Provides a schematic overview of the FS-K72/K74 control menus.
Chapter 6	Contains a detailed description of the possible base station test measurements as a reference for manual operation. This chapter also presents a list of remote control commands associated with each function.
Chapter 7	Describes all remote control commands defined for the code domain measurement. An alphabetic list of all remote control commands and a table of softkeys with the assignment of commands are provided at the end of this chapter.
Chapter 8	Contains the performance test.
Chapter 9	Contains an explanation of terms related to measured quantities of the code domain measurement.
Chapter 10	Contains the index for this operating manual.

This manual is a supplement to the FSU operating manual. It exclusively includes functions of Application Firmware FS-K72/K74. For all other descriptions, please refer to the FSU operating manual.

3GPP FDD Base Station Test - Application Firmware FS-K72/K74

The Spectrum Analyzer FSU equipped with Application Firmware FS-K72 performs code domain power measurements on downlink signals according to the 3GPP standard (FDD mode). The application firmware is in line with the 3GPP standard (Third Generation Partnership Project) with Release 5. Signals that meet the conditions for channel configuration of test models 1 to 4 according to the 3GPP standard can be measured with FS-K72. In addition to the code domain measurements specified by the 3GPP standard, the application firmware offers measurements with predefined settings in the frequency domain, e.g. power and ACLR measurements. The FSU equipped with Application Firmware FS-K74 additionally allows measurements to be performed on test model 5 (HSDPA). FS-K72 must be installed before FS-K74 is installed on the FSU.

1 Enabling the Firmware Option

Firmware option FS-K72/K74 is enabled in the *GENERAL SETUP* menu by entering a keyword. The keyword is delivered together with the option. FS-K72 and FS-K74 have different keywords. FS-72 must be installed before FS-K74 is installed. If the options are factory-installed, they are already enabled.

GENERAL SETUP menu:

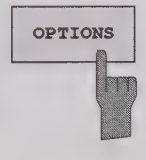

The *OPTIONS* softkey opens a submenu where keywords for new firmware options (application firmware modules) can be entered. Available options are displayed in a table, which is opened during submenu entry.

The *INSTALL OPTION* softkey activates the keyword entry for a firmware option.

One or more keywords can be entered in the entry field. When a valid keyword is entered, *OPTION KEY OK* is displayed in the message line and the option is entered in the *FIRMWARE OPTIONS* table.

In case of invalid keywords, *OPTION KEY INVALID* is displayed on the message line.

2 Getting Started

This chapter explains basic 3GPP FDD base station tests by means of a setup with a Signal Generator R&S SMIQ. It describes how operating and measurement errors can be avoided using correct presetting. The measurements are performed with an analyzer equipped with FS-K72. Additionally Installing FS-K74 is not required.
The measurement screen is presented in chapter 6 for each measurement.

Key settings are shown as examples to avoid measurement errors. Following the correct setting, the effect of an incorrect setting is shown. The following measurements are performed:

- Measurement 1: Measurement of the spectrum
- Measurement 2: Measurement of the spectrum emission mask
- Measurement 3: Measurement of the relative code domain power
  - Setting: Analyzer center frequency set to the DUT frequency
  - Setting: Scrambling code of signal
- Measurement 4: Triggered measurement of the relative code domain power
  -Setting: Trigger offset
- Measurement 5: Measurement of the composite EVM
- Measurement 6: Measurement of the peak code domain error

The measurements are performed using the following units and accessories:

- The Spectrum Analyzer FSU with Application Firmware FS-K72: 3GPP FDD base station test
- The Vector Signal Generator SMIQ with option SMIQB45: digital standard 3GPP (options SMIQB20 and SMIQB11 required)
- 1 coaxial cable, 50 Ω, approx. 1 m, N connector
- 1 coaxial cable, 50 Ω, approx. 1 m, BNC connector

- Conventions for displaying settings on the FSU:

[***<KEY>***]	Press a key on the front panel, e.g. ***[SPAN]***.
[<SOFTKEY>]	Press a softkey, e.g. *[MARKER -> PEAK]*.
[<nn unit>]	Enter a value and terminate by entering the unit, e.g. *[12 kHz]*.

- Conventions for displaying settings on the SMIQ:

[***<KEY>***]	Press a key on the front panel, e.g. ***[FREQ]***.
<MENU>	Select a menu, parameter or a setting, e.g. *DIGITAL STD.* The menu level is marked by an indentation.
<nn unit>	Enter a value and terminate by entering the unit, e.g. *12 kHz*.

Basic Settings in Code Domain Measurement Mode

In the default mode after a PRESET, the FSU is in the analyzer mode. The following default settings of the code domain measurement are activated provided that the code domain measurement mode is selected.

Table 2-1: Default settings for code domain measurement

Parameter	Setting
Digital standard	W-CDMA 3GPP FWD
Sweep	CONTINUOUS
CDP mode	CODE CHAN AUTOSEARCH
Trigger settings	FREE RUN
Trigger offset	0
Scrambling code	0
Threshold value	-60 dB
Symbol rate	15 ksps
Code number	0
Slot number	0
Display	Screen A: CODE PWR RELATIVE Screen B: RESULT SUMMARY

Measurement 1: Measurement of the Signal Channel Power

The FSU measures the unweighted RF signal power in a bandwidth of:

$f_{BW} = 5MHz \geq (1+\alpha) \cdot 3.84MHz \quad | \quad \alpha = 0.22$

The power is measured in the zero span mode (time domain measurement) using a digital channel filter of 5 MHz in bandwidth. According to the 3GPP standard, the measurement bandwidth is 5 MHz.

Test setup

➢ Connect the RF output of the SMIQ to the RF input of the FSU (coaxial cable with N connectors).

.

Settings on the SMIQ:

[PRESET]
[LEVEL: *0 dBm]*
[FREQ: *2.1175 GHz]*
DIGITAL STD
WCDMA/3GPP
TEST MODELS ...
TEST1_32
STATE: ON

Settings on the FSU:

[PRESET]
[CENTER: *2.1175 GHz]*
[AMPT: *0 dBm]*
[3G FDD BS]
[MEAS: *POWER]*

Measurement on the FSU:

The following is displayed:

- Time domain trace of the WCDMA signal.
- Signal channel power within a bandwidth of 5 MHz (in the marker info field)

Measurement 2: Measurement of the Spectrum Emission Mask

The 3GPP specification defines a measurement that monitors compliance with a spectral mask in a range of at least ±12.5 MHz around the WCDMA carrier. To assess the power emissions in the specified range, the signal power is measured in the range near the carrier by means of a 30 kHz filter, and in the ranges far away from the carrier by means of a 1 MHz filter. The resulting trace is compared to a limit line defined in the 3GPP specification.

Test setup

➢ Connect the RF output of the SMIQ to the RF input of the FSU (coaxial cable with N connectors).

Settings on the SMIQ:

[PRESET]
[LEVEL: *0 dBm]*
[FREQ: *2.1175 GHz]*
DIGITAL STD
WCDMA/3GPP
TEST MODELS ...
TEST1_32
STATE: ON

Settings on the FSU:

[PRESET]
[CENTER: *2.1175 GHz]*
[AMPT: *0 dBm]*
[3G FDD BS]
[MEAS: *SPECTRUM EM MASK]*

Measurement on the FSU:

The following items are displayed:

- Spectrum of the 3GPP FDD signal
- Limit line defined in the standard
- Information on limit line violations (passed/failed)

Measurement 3: Measurement of the Relative Code Domain Power

A code domain power measurement on one of the test models (model 1 with 32 channels) is shown in the following. To demonstrate the effects, the basic parameters of the CDP measurements permitting an analysis of the signal are changed one after the other from values adapted to the measurement signal to non-adapted values.

Test setup

- Connect the RF output of the SMIQ to the input of the FSU.
- Connect the reference input (EXT REF IN/OUT) on the rear panel of the analyzer to the reference input (REF) on the rear panel of the SMIQ (coaxial cable with BNC connectors).

Settings on the SMIQ:

[PRESET]
[LEVEL: *0 dBm]*
[FREQ: *2.1175 GHz]*
DIGITAL STD
WCDMA 3GPP
TEST MODELS ...
TEST1_32
STATE: ON

Settings on the FSU:

[PRESET]
[CENTER: *2.1175 GHz]*
[AMPT: *10 dBm]*
[3G FDD BS]
[SETTINGS: SCRAMBLING CODE 0]

Measurement on the FSU:

The following is displayed:
Screen A: Code domain power of signal (test model 1 with 32 channels)
Screen B: Numeric results of CDP measurement

Setting: Synchronization of the Reference Frequencies

Synchronization of the reference oscillators both of the DUT and the analyzer strongly reduces the measured frequency error.

Test setup

- Connect the reference input (EXT REF IN/OUT) on the rear panel of the analyzer to the reference output (REF) on the rear panel of the SMIQ (coaxial cable with BNC connectors).

Settings on the SMIQ: *Same as for measurement 2*

Settings on the FSU:

Same as for measurement 2 plus
[SETUP: *REFERENCE EXT]*

Measurement on the FSU:

Frequency error — The displayed frequency error should be <10 Hz.

The reference frequencies of the analyzer and of the DUT should be synchronized.

Setting: Behaviour with Deviating Center Frequency Setting

In the following, the behaviour of the DUT and the analyzer with an incorrect center frequency setting is shown.

Settings on the SMIQ: ➢ Tune the center frequency of the signal generator in 0.5 kHz steps and watch the analyzer screen:

Measurement on the FSU:

- A CDP measurement on the analyzer is still possible with a frequency error of up to approx. 1 kHz. Up to 1 kHz, a frequency error causes no apparent difference in the accuracy of the code domain power measurement.
- Above a frequency error of 1 kHz, the probability of impaired synchronization increases. With continuous measurements, all channels are at times displayed in blue with almost the same level.
- Above a frequency error of approx. 2 kHz, a CDP measurement cannot be performed. The FSU displays all possible codes in blue with a similar level.

Settings on the SMIQ: ➢ Set the signal generator center frequency to 2.1175 GHz again:
[FREQ: *2.1175 GHz]*

The analyzer center frequency should not differ from the DUT frequency by more than 2 kHz.

Setting: Behaviour with Incorrect Scrambling Code

A valid CDP measurement can be carried out only if the scrambling code set on the analyzer is identical to that of the transmitted signal.

Test setup *SELECT BS/MS*
BS 1: ON
SCRAMBLING CODE: 0001
(the scrambling code is set to 0000 on the analyzer)

Settings on the SMIQ: The CDP display shows all possible codes with approximately the same level.

Settings on the FSU: Set scrambling code to new value:
[SETTINGS: SCRAMBLING CODE 1]

Measurement on the FSU: The CDP display again shows the test model.

The scrambling code setting of the analyzer must be identical to that of the measured signal.

Measurement 4: Triggered Measurement of Relative Code Domain Power

If the code domain power measurement is performed without external triggering, a section of approximately 20 ms of the test signal is recorded at an arbitrary moment to detect the start of a 3GPP FDD frame in this section. Depending on the position of the frame start, the required computing time can be quite long. Applying an external (frame) trigger can reduce the computing time.

Test setup

- Connect the RF output of the SMIQ to the input of the FSU.
- Connect the reference input (EXT REF IN/OUT) on the rear panel of the FSU to the reference input (REF) on the rear panel of the SMIQ (coaxial cable with BNC connectors).
- Connect the external trigger input on the rear panel of the FSU (EXT TRIG GATE) to the external trigger output on the rear panel of the SMIQ (TRIGOUT1 of PAR DATA).

Settings on the SMIQ: *Same as for measurement 3*

Settings on the FSU: *Same as for measurement 3 plus*
[TRIG EXTERN]

Measurement on the FSU: The following is displayed:

Screen A: Code domain power of signal (test model 1 with 32 channels)

Screen B: Numeric results of CDP measurement

Trigger to Frame: Offset between trigger event and start of 3GPP FDD frame

The repetition rate of the measurement increases considerably compared to the repetition rate of a measurement without an external trigger.

Setting: Trigger Offset

A delay of the trigger event referenced to the start of the 3GPP FDD frame can be compensated by modifying the trigger offset.

Settings on the FSU: *TRIG TRIGGER OFFSET 100 µs]*

Measurement on the FSU: The Trigger to Frame parameter in the numeric results table (screen B) changes:
Trigger to Frame -100 µs

A trigger offset compensates analog delays of the trigger event.

Measurement 5: Measurement of the Composite EVM

The 3GPP specification defines the composite EVM measurement as the average square deviation of the total signal:
An ideal reference signal is generated from the demodulated data. The test signal and the reference signal are compared with each other. The square deviation yields the composite EVM.

Test setup

- Connect the RF output of the SMIQ to the input of the FSU.
- Connect the reference input (EXT REF IN/OUT) on the rear panel of the FSU to the reference input (REF) on the rear panel of the SMIQ (coaxial cable with BNC connectors).
- Connect the external trigger input on the rear panel of the FSU (EXT TRIG GATE) to the external trigger output on the rear panel of the SMIQ (TRIGOUT1 of PAR DATA).

Settings on the SMIQ:

[PRESET]
[LEVEL: *0 dBm]*
[FREQ: *2.1175 GHz]*
DIGITAL STD
WCDMA 3GPP
TEST MODELS ...
TEST4
SELECT BS/MS
BS 1 ON
CPICH STATE ON
STATE: ON

Settings on the FSU:

[PRESET]
[CENTER: *2.1175 GHz]*
[REF: *10 dBm]*
[3G FDD BS]
[TRIG *EXTERN]*
[RESULTS *COMPOSITE EVM]*

Measurement on the FSU:

The following is displayed:
Screen A: Code domain power of signal (Test model 4)
Screen B: Composite EVM (EVM for total signal)

Measurement 6: Measurement of Peak Code Domain Error

The peak code domain error measurement is defined in the 3GPP specification for WCDMA signals. An ideal reference signal is generated from the demodulated data. The test signal and the reference signal are compared with each other. The difference of the two signals is projected onto the classes of the different spreading factors. The peak code domain error measurement is obtained by summing the symbols of each difference signal slot and searching for the maximum error code.

Test setup

- Connect the RF output of the SMIQ to the input of the FSU.
- Connect the reference input (EXT REF IN/OUT) on the rear panel of the FSU to the reference input (REF) on the rear panel of the SMIQ (coaxial cable with BNC connectors).
- Connect the external trigger input on the rear panel of the FSU (EXT TRIG GATE) to the external trigger output on the rear panel of the SMIQ (TRIGOUT1 of PAR DATA).

Settings on the SMIQ:

[PRESET]
[LEVEL: *0 dBm]*
[FREQ: *2.1175 GHz]*
DIGITAL STD
WCDMA 3GPP
TEST MODELS ...
TEST1_32
STATE: ON

Settings on the FSU:

[PRESET]	
[CENTER:	*2.1175 GHz]*
[REF:	*0 dBm]*
[3G FDD BS]	
[TRIG	*EXTERN]*
[RESULTS	*PEAK CODE DOMAIN ERR]*
	SELECT PCDE SF 256

Measurement on the FSU:

The following items are displayed:

Screen A: Code domain power of signal (test model 1 with 32 channels)

Screen B: Peak code domain error (projection of error onto the class with spreading factor 256

Measurement 7: Measurement of the Trigger To Frame Time

The trigger to frame (TTF) time measurement yields the time between an external trigger event and the start of the 3GPP WCDMA frame. The result is diplayed in the result summary. The trigger event is expected in a time range of one slot (667us) before the frame start. The resolution and absolute accuracy depend on the analyzer type and the measurement mode.

Resolution of the TTF time measurement

The resolution of the TTF time depends on the analyzer type that is used and the applied trace statistic mode. By using an average mode, the resolution can be increased. The higher the number of sweeps, the higher the resolution at the expense of measurement time. In the average mode, the TTF time is averaged for a number of sweeps (TRACE→SWEEP COUNT). If the TTF time of the applied signal does not change during for this number of sweeps, the trigger resolution can be improved.

TTF time resolution in dependency of the analyzer type and the statistic mode:

Analyzer	Trace mode	TTF resolution	Number of sweeps
R&S - FSQ	CLEAR/WRITE	< 8 ns	1
R&S - FSQ	AVERAGE	< 0.5 ns	100
R&S - FSU	CLEAR/WRITE	< 65 ns	1
R&S - FSU	AVERAGE	< 4 ns	100
R&S - FSP	CLEAR/WRITE	< 65 ns	1
R&S - FSP	AVERAGE	< 4 ns	100

Absolute accuracy of theTTF time measurement

The absolute accuracy of the TTF time measurement depends on the level of the trigger pulse. The analyzer is calibrated to display the minimum deviation at a trigger pulse level of 4 V. The trigger threshold for an external trigger event is 1.4 V. Due to an internal lowpass between the back panel and the trigger detector, the trigger pulse is delayed in correlation to its own level.

The absolute error of the TTF time measurement as a function of the trigger level is as follows:

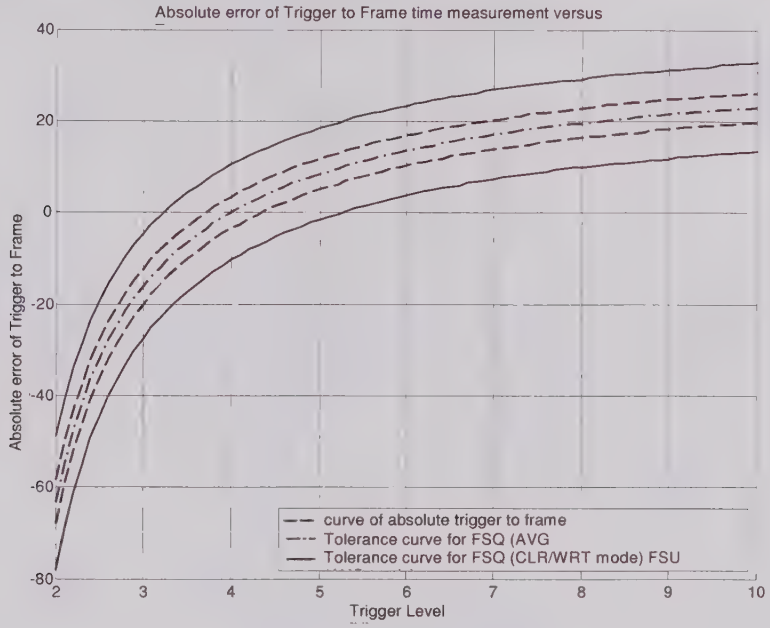

The red curve shows the error of the TTF measurement. The blue and green curves indicate the expected measurement uncertainty as a function of the analyzer type used and the applied trace statistic. To calculate the accurate TTF time, the error needs to be subtracted from the measured TTF value.

$$T_{TrgToFrame} = T_{Meas\_Analyser} - T_{Error}$$

where:
- $T_{TrgToFrame}$ - correct TTF time
- $T_{meas\_Analyzer}$ - TTF time displayed by the analyzer (K72/K73 result summary)
- T_{error} - absolute error

Trace statistic in the result summary display

The trace statistic functions can be enabled by selecting SCREEN B. After screen B is selected, the trace menu can be called (press hardkey TRACE). In the trace menu, the kind of trace statistic can be selected.

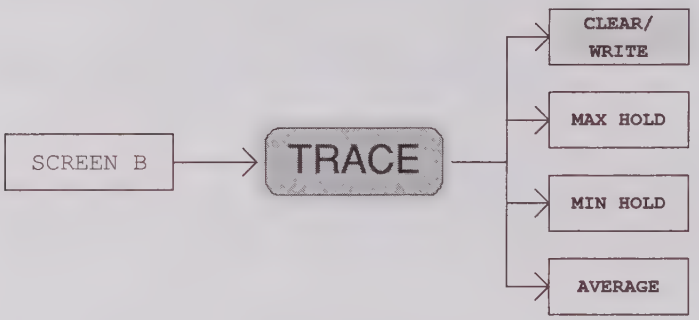

The parameter SWEEP COUNT determines the number of sweeps. The result values in the result summary of screen B are tagged with an abbreviation to indicate which kind of trace statistic is applied to the results. If measured with the trace statistic, the channel table is automatically switched to predefined mode. The last measured channel table is used and stored to "RECENT". In this case, any change in the signal channel configuration does not influence the displayed channel table.

The following trace statistic functions can be applied and are tagged with the corresponding abbreviations shown in the last column:

- CLEAR/WRITE: Displays the result value of the last sweep (<none>)
- MAX HOLD: Displays the maximum result values of a number of sweeps (<MAX>)
- MIN HOLD: Displays the minimum result value of a number of sweeps (<MIN>)
- AVERAGE: Displays the average result value of a number of sweeps (<AVG>)

Test setup

- Connect the RF output of the SMIQ to the input of the FSU.
- Connect the reference input (EXT REF IN/OUT) on the rear panel of the FSU to the reference input (REF) on the rear panel of the SMIQ (coaxial cable with BNC connectors).
- Connect the external trigger input on the rear panel of the FSU (EXT TRIG GATE) to the external trigger output on the rear panel of the SMIQ (TRIGOUT1 of PAR DATA).

Settings on the SMIQ:

[PRESET]
[LEVEL: *0 dBm]*
[FREQ: *2.1175 GHz]*
DIGITAL STD
WCDMA 3GPP
TEST MODELS ...
TEST1_32
STATE: ON

Settings on the FSU:

[PRESET]	
[CENTER:	*2.1175 GHz]*
[REF:	*0 dBm]*
[3G FDD BS]	
[TRIG	*EXTERN]*
[RESULTS	*RESULT SUMMARY]*
[SCREEN	*SCREEN B]*
[TRACE:	*AVERAGE]*
[	*CLEAR / WRITE]*
[SWEEP COUNT]	*<numeric value>*

Measurement on the FSU:

The following items are displayed:

Screen A:	Code domain power of signal (test model 1 with 32 channels)
Screen B:	Result summary with trace statistic evaluation

3 Setup for Base Station Tests

Caution:

Before turning the instrument on, the following conditions must be met:

- *Instrument covers are in place and all fasteners are tightened.*
- *Fan openings are free from obstructions.*
- *Signal levels at the input connectors are all below specified maximum values.*
- *Signal outputs are correctly connected and not overloaded.*

Noncompliance with these instructions may cause damage to the instrument.

This section describes how to set up the analyzer for 3GPP FDD base station tests. As a prerequisite for starting the test, the instrument must be correctly set up and connected to the AC power supply as described in chapter 1 of the operating manual for the analyzer. Furthermore, application firmware module FS-K72 and, in the case of measurements on test model 5, FS-K74 must be properly installed following the instructions provided in chapter 1 of this manual.

Standard Test Setup

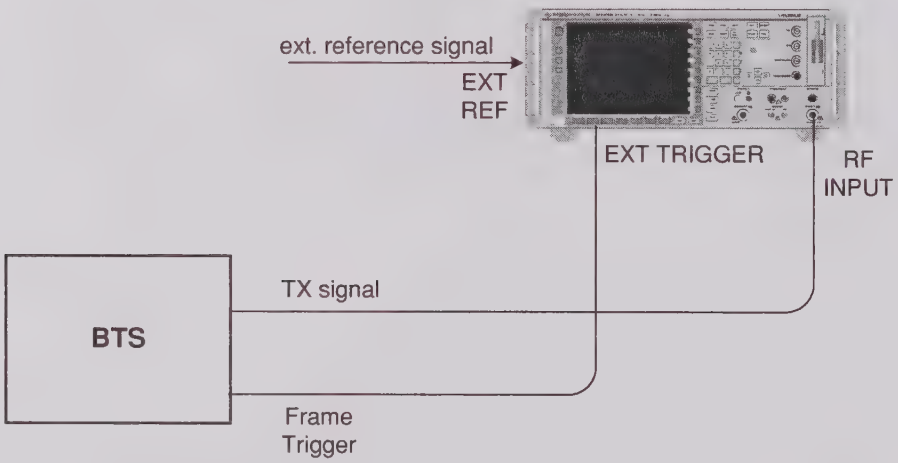

Fig. 3-1 BTS test setup

➢ Connect antenna output (or TX output) of BTS to RF input of the analyzer via a power attenuator of suitable attenuation.

The following values are recommended for the external attenuator to ensure that the RF input of the analyzer is protected and the sensitivity of the analyzer is not reduced too much.

Max. power	Recommended ext. attenuation
≥55 to 60 dBm	35 to 40 dB
≥50 to 55 dBm	30 to 35 dB
≥45 to 50 dBm	25 to 30 dB
≥40 to 45 dBm	20 to 25 dB
≥35 to 40 dBm	15 to 20 dB
≥30 to 35 dBm	10 to 15 dB
≥25 to 30 dBm	5 to 10 dB
≥20 to 25 dBm	0 to 5 dB
<20 dBm	0 dB

- For signal measurements at the output of two-port networks, connect the reference frequency of the signal source to the rear reference input of the analyzer (*EXT REF IN/OUT*).
- To ensure that the error limits specified by the 3GPP standard are met, the analyzer should use an external reference frequency for frequency measurements on base stations. For instance, a rubidium frequency standard may be used as a reference source.
- If the base station is provided with a trigger output, connect this output to the rear trigger input of the analyzer (*EXT TRIG GATE*).

Presetting

- Enter external attenuation (REF LVL OFFSET)
- Enter reference level
- Enter center frequency
- Set the trigger
- Select standard and measurement

4 3GPP FDD Test Models

For measurements on base-station signals in line with 3GPP, test models with different channel configurations are specified in the document "Base station conformance testing (FDD)" (3GPP TS 25.141 V5.7.0). An overview of the test models is provided in this chapter.

The channel configurations of test models 1 to 3 contain the special channel SCCPCH. With an anyalyzer equipped with FS-K72, this channel can only be automatically detected in CDP analysis if it contains pilot symbols. For measurements on signals with SCCPCH without pilot symbols, CDP analysis must be performed in the *CODE CHAN PREDEFINED* mode if the analyzer is equipped with FS-K72 only. In this mode, the 3GPP test models 1 to 4 can be used for the measurement at a keystroke (see softkey *CODE CHAN PREDEFINED* for a detailed description). If the analyzer is also equipped with FS-K74, SCCPCH will be detected properly as well in *CODE CHAN AUTOSEARCH* mode.

The channel configuration for test model 5 according to 3GPP contains channels in which the modulation type can vary. These channels can be measured both in *CODE CHAN AUTOSEARCH* and *CODE CHAN PREDEFINED* mode if the analyzer is equipped with FS-K74. In this case, test model 5 can be used as well at a keystroke in mode *CODE CHAN PREDEFINED.*
Test model 1

Table 4-1: Test model 1

Channel type	Number of channels	Power (%)	Level (dB)	Spreading code	Timing offset (x256T_{chip})
PCCPCH+SCH	1	10	-10	1	0
Primary CPICH	1	10	-10	0	0
PICH	1	1.6	-18	16	120
SCCPCH (SF=256)	1	1.6	-18	3	0
DPCH (SF=128)	16/32/64	76.8 total	see TS 25.141	see TS 25.141	see TS 25.141

Table 4-2: Test model 2

Channel type	Number of channels	Power(%)	Level (dB)	Spreading code	Timing offset (x256T_{chip})
PCCPCH+SCH	1	10	-10	1	0
Primary CPICH	1	10	-10	0	0
PICH	1	5	-13	16	120
SCCPCH (SF=256)	1	5	-13	3	0
DPCH (SF=128)	3	2 x 10, 1 x 50	2 x –10, 1 x –3	24, 72, 120	1, 7, 2

Table 4-3: Test model 3

Channel type	Number of channels	Power (%) 16/32	Level (dB) 16/32	Spreading code	Timing offset (x256T_{chip})
PCCPCH+SCH	1	12.6/7.9	-9 / -11	1	0
Primary CPICH	1	12.6/7.9	-9 / -11	0	0
PICH	1	5/1.6	-13 / -18	16	120
SCCPCH (SF=256)	1	5/1.6	-13 / -18	3	0
DPCH (SF=256)	16/32	63,7/80,4 total	see TS 25.141	see TS 25.141	see TS 25.141

Table 4-4: Test model 4

Channel type	Number of channels	Power (%) 16/32	Level (dB) 16/32	Spreading code	Timing offset ($x256T_{chip}$)
PCCPCH+SCH	1	50 to 1.6	-3 to -18	1	0
Primary CPICH*	1	10	-10	0	0

* The CPICH is optional.

Table 4-5: Test model 5

Channel type	Number of channels	Power (%)	Level (dB)	Spreading code	Timing offset ($x256T_{chip}$)
PCCPCH+SCH	1	7.9	-11	1	0
Primary CPICH	1	7.9	-11	0	0
PICH	1	1.3	-19	16	120
SCCPCH (SF=256)	1	1.3	-19	3	0
DPCH (SF=256)	30/14/6(*)	14/14.2/14.4 total	see TS 25.141	see TS 25.141	see TS 25.141
HS_SCCH	2	4 total	see TS 25.141	see TS 25.141	see TS 25.141
HS_PDSCH (16QAM)	8/4/2(*)	63.6/63.4/63.2 total	see TS 25.141	see TS 25.141	see TS 25.141

* 2 HS_PDSCH correspond to 6 DPCH, 4 HS_PDSCH to 14 DPCH and 8 HS_PDSCH to 30 DPCH

This test model can be measured with an analyzer equipped with FS-K74.

5 Menu Overview

Application Firmware Module FS-K72/K74 (3GPP FDD base station test) extends the analyzer by the code domain measurement mode for the 3GPP FDD standard. Additional softkeys are available that allow overview measurements in the analyzer mode.

The FS-K72/K74 application is started by clicking the 3G FDD BS hotkey:

The main settings of the code domain power measurements can be directly selected via the hotkey bar which changes after the application has been started.
When one of the hotkeys *CHAN CONF*, *SETTINGS*, *RESULTS* is selected, measurement is automatically switched to the Code Domain Power measurement mode.
If the *EXIT 3GPP* hotkey is selected, FS-K72/K74 is exited. The hotkey bar of the base unit is displayed again.

Fig. 5-1 Overview of menus - code domain power

The measurements available in FS-K72/K74 can be selected by means of the MEAS key:

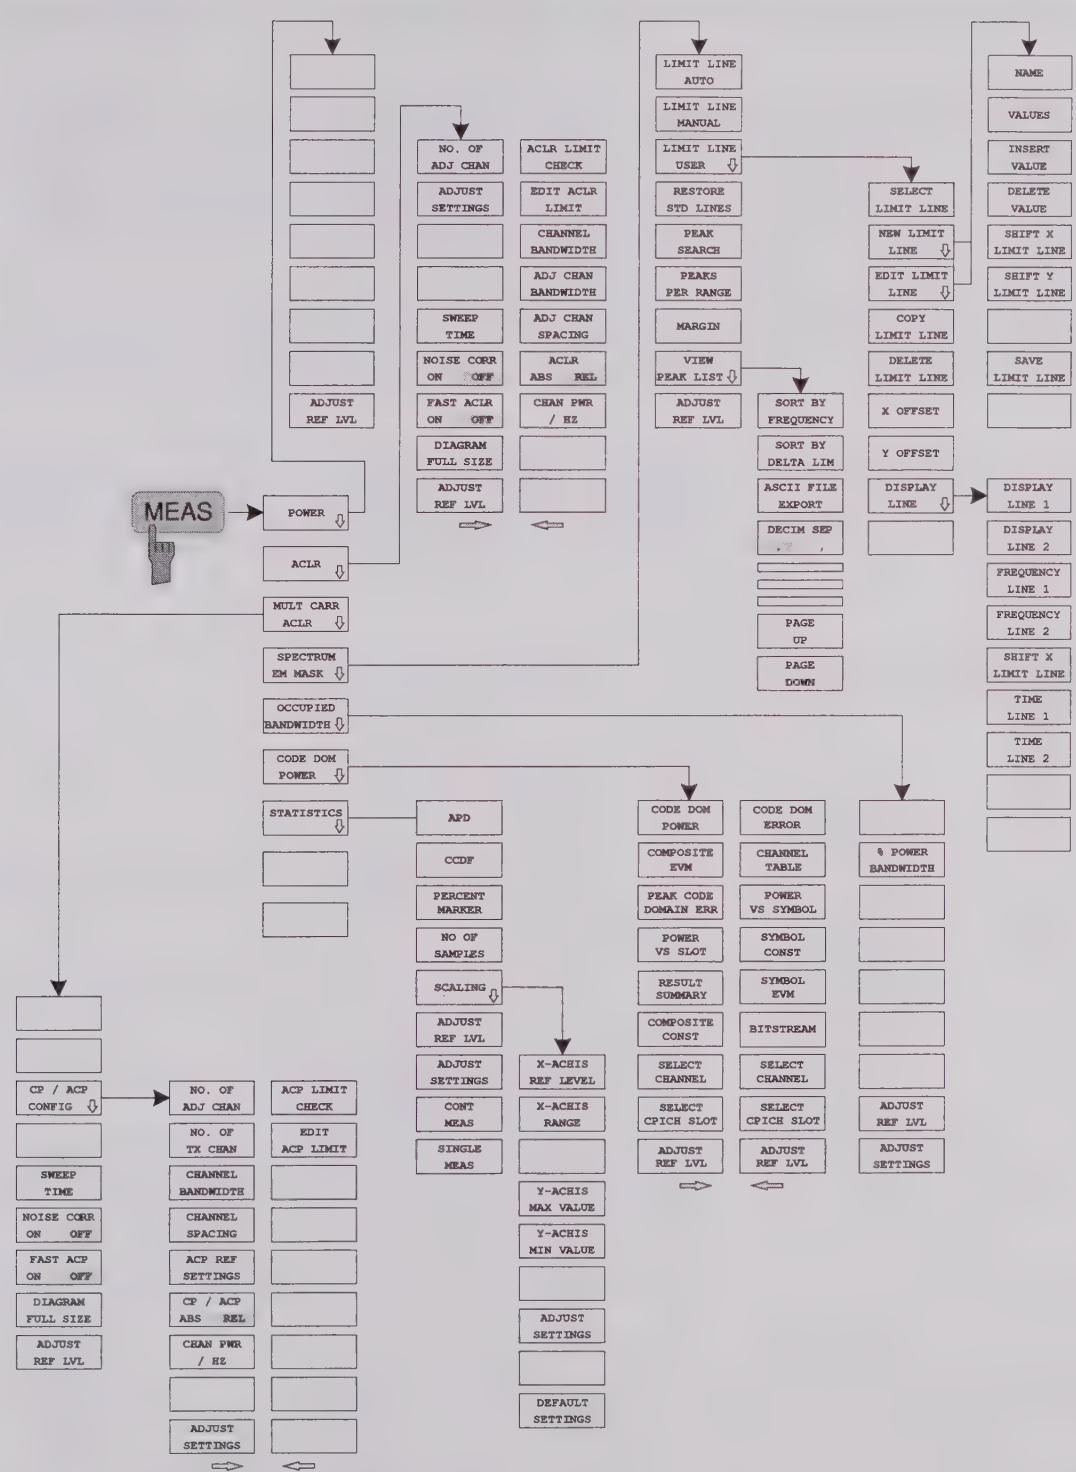

Fig. 5-2 Overview of menus - measurements

6 Configuration of 3GPP FDD Measurements

The most important parameters for the 3GPP FDD base station tests are summarized in the *MEAS* key submenu and explained below using the softkey functions. The measurements described for the softkeys can be performed both with an analyzer equipped with FS-K72 only and with an analyzer that also has FS-K74. The description of measurement functions and the corresponding graphics refer to FS-K72. If different behaviour for the measurement functions or additional information can be achieved by equipping the analyzer with FS-K72, this will be stated within the text.

The *CODE DOM POWER* softkey activates the code domain measurement mode and opens the submenus for setting the measurement. A change of the hotkey labels after the application has been started ensures that the most important parameters of the CDP (code domain power) measurements are directly accessible via the hotkey bar.

The *POWER*, *ACLR*, *SPECTRUM EM MASK*, *OCCUPIED BANDWIDTH* and *STATISTICS* softkeys activate base station tests in the analyzer mode. Pressing the associated softkey performs the settings required by 3GPP specifications. A subsequent modification of settings is possible. The other menus of the FSU correspond to the menus of this mode and are described in the operating manual for the FSU.

CONFIGURATION MODE menu

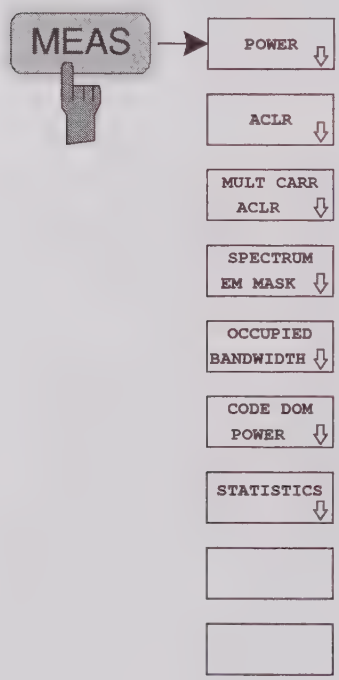

The *MEAS* key opens a submenu for setting the various measurement modes of option FS-K72/K74:

- *POWER* activates the channel power measurement with defined settings in the analyzer mode.
- *ACLR* activates the adjacent-channel power measurement with defined settings in the analyzer mode.
- *MULT CARR ACLR* activates the adjacent-channel power measurement for multi carrier signals with defined settings in the analyzer mode.
- *SPECTRUM EM MASK* compares the signal power in different carrier offset ranges with the maximum values specified by 3GPP.
- *OCCUPIED BANDWIDTH* activates the measurement of the occupied bandwidth (analyzer mode).
- *CODE DOM POWER* activates the code domain measurement mode and opens another submenu for selecting and configuring the parameters. All other menus of the FSU are adapted to the functions of the code domain measurement mode.
- *STATISTICS* evaluates the signal with regard to its statistical characteristics (distribution function of the signal amplitudes).

Measurement of Channel Power

MEAS key

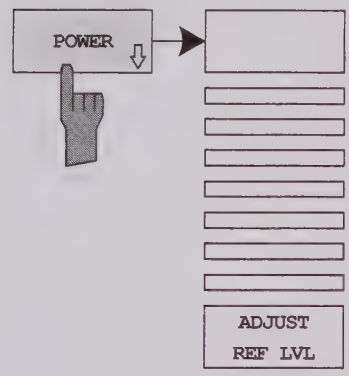

The *POWER* softkey activates the measurement of the 3GPP FDD signal channel power.

The FSU measures the unweighted RF signal power in a bandwidth of:

$f_{BW} = 5MHz \geq (1+\alpha) \cdot 3.84MHz \quad | \quad \alpha = 0.22$

The power is measured in zero span mode (time domain) using a digital channel filter of 5 MHz in bandwidth. According to the 3GPP standard, the measurement bandwidth (5 MHz) is slightly larger than the minimum required bandwidth of 4.7 MHz. The bandwidth is displayed numerically below the screen.

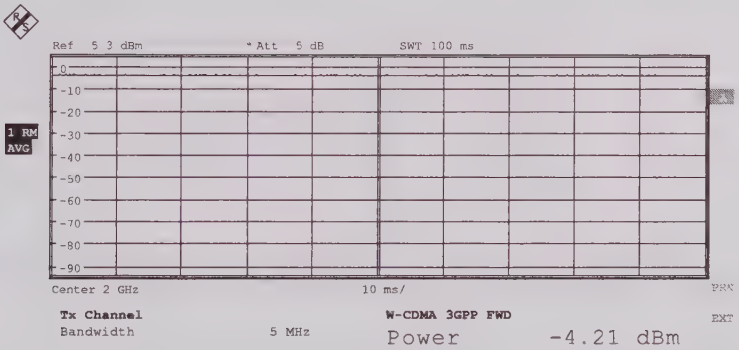

Fig. 6-1 Power measurement in the 3.84 MHz transmission channel

Pressing the softkey activates the analyzer mode with defined settings:

SYSTEM PRESET		
After PRESET, the following user-specific settings are restored, thus retaining the adaptation to the DUT:	Reference Level, Reference Level Offset Center Frequency, Frequency Offset Input Attenuation, Mixer Level All trigger settings	
CHAN PWR / ACP	CP / ACP ON	
CP / ACP STANDARD	W-CDMA 3GPP FWD	
CP / ACP CONFIG	NO. OF ADJ CHAN	0

Starting from these settings, the FSU can be operated in all functions available in the analyzer mode, i.e. all test parameters can be adapted to the requirements of the specific measurement.

IEC/IEEE bus command: `:CONFigure:WCDPower:MEASurement POWer`

Query of results: `:CALCulate:MARKer:FUNCtion:POWer:RESult? CPOWer`

The *ADJUST REF LVL* softkey adapts the reference level of the FSU to the measured channel power. This ensures that the settings for the RF attenuation and reference level are optimally adapted to the signal level so that the FSU is not overdriven or the dynamic range reduced by too low an S/N ratio.
Since the measurement bandwidth for adjacent-channel power measurements is clearly narrower than the signal bandwidth, the signal path can be overdriven although the measured trace is definitely below the reference level.

IEC/IEEE bus command: `SENS:POW:ACH:PRES:RLEV`

Measurement of Adjacent-Channel Power - ACLR

MEAS key

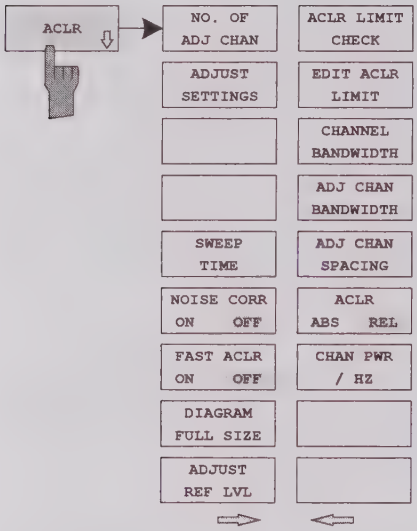

The *ACLR* softkey activates the adjacent-channel power measurement in the default setting according to 3GPP specifications (adjacent-channel leakage ratio).

The FSU measures the channel power and the relative power of the adjacent channels and of the alternate channels. The results are displayed below the screen.

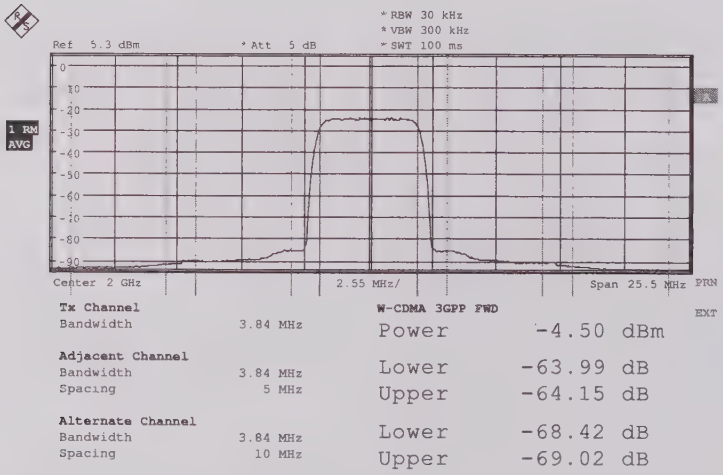

Fig. 6-2 Adjacent-channel power measurement of a 3GPP FDD base station

Pressing the softkey activates the analyzer mode with defined settings:

SYSTEM PRESET		
After PRESET the following user-specific settings are restored, thus retaining the adaptation to the DUT:	Reference Level, Reference Level Offset Center Frequency, Frequency Offset Input Attenuation, Mixer Level All trigger settings	
CHAN PWR / ACP	CP / ACP ON	
CP / ACP STANDARD	W-CDMA 3GPP FWD	
CP / ACP CONFIG	NO. OF ADJ CHAN	2

IEC/IEEE bus command: `:CONFigure:WCDPower:MEASurement ALCR`

Query of results: `:CALCulate:MARKer:FUNCtion:POWer:RESult? ACPower`

The *NO. OF ADJ CHAN* softkey activates the entry of the number ±n of adjacent channels to be considered in the adjacent-channel power measurement.
Numbers from 0 to 3 can be entered.

The following measurements are performed depending on the number of the channels.

0 Only the channel power is measured.

1 The channel power and the power of the upper and lower adjacent channels are measured.

2 The channel power, the power of the upper and lower adjacent channels and of the next higher and lower channels (alternate channel 1) are measured.

3 The channel power, the power of the upper and lower adjacent channels, the power of the next higher and lower channels (alternate channel 1) and of the next but one higher and lower adjacent channels (alternate channel 2) are measured.

IEC/IEEE bus command: `POW:ACH:ACP 1`

The *ADJUST SETTINGS* softkey automatically optimizes analyzer settings for the selected power measurement (see below). All analyzer settings relevant for power measurements within a specific frequency range (channel bandwidth) are optimally set depending on the channel configuration (channel bandwidth, channel spacing).

- Frequency span:

  The frequency span must cover at least all the channels that are to be considered.
  When the channel power is measured, the span is set to twice the channel bandwidth.
  The setting of the span for adjacent-channel power measurements depends on the channel spacing and the channel bandwidth of the adjacent channel with the largest distance from the transmission channel, ADJ, ALT1 or ALT2 .

- Resolution bandwidth RBW ≤1/40 of channel bandwidth
- Video bandwidth VBW ≥3 × RBW
- Detector RMS detector

The trace math and trace averaging functions are switched off.
The reference level is not influenced by *ADJUST SETTINGS*. It can be separately adjusted with *ADJUST REF LVL*.

The adjustment is only carried out once; if necessary, the instrument settings can be changed later.

IEC/IEEE bus command: `SENS:POW:ACH:PRES ACP|CPOW|OBW`

The *SWEEP TIME* softkey activates entry of the sweep time. When the RMS detector is used, a longer sweep time yields more stable results.
This setting is identical with the *SWEEP TIME MANUAL* setting in the *B*W menu.

IEC/IEEE bus command: `:SWE:TIM <value>`

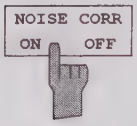

The *NOISE CORR ON/OFF* softkey switches on correction of measurement results by the residual instrument noise. When the softkey is switched on, first the residual instrument noise is measured. The measured noise is then deducted from the power in the observed channel.
Each time the measurement frequency, the resolution bandwidth, the measurement time or the level settings are changed, noise correction is switched off. To repeat the residual noise measurement with the new settings, the softkey must be pressed again.

IEC/IEEE bus command: `SENS:POW:NCOR ON`

The *FAST ACLR* softkey toggles between the measurement in line with the IBW method (FAST ACLR OFF) and the measurement in the time domain (FAST ACLR ON).

With *FAST ACLR ON* selected, the power is measured in the various channels in the time domain. The FSU sets its center frequency to the different channel center frequencies one after the other, and then measures the power at these frequencies with the set measurement time (= sweep time/number of measured channels). Suitable RBW filters are automatically used for the selected standard and frequency offset (root raised cosine at WCDMA).

The RMS detector is used for a correct power measurement. Software correction factors are not required in this case.

Measured values are output in a table; the power of the useful channel is specified in dBm and the power of the adjacent channels in dBm *(ACLR ABS)* or dB *(ACLR REL)*.

The selected sweep time (=measurement time) depends on the desired reproducibility of measurement results. The longer the selected sweep time, the better the reproducibility of results because, in this case, the power is measured over a longer period of time.

As a rule of thumb, it can be assumed that approx. 500 uncorrelated values are required for a reproducibility of 0.5 dB (99% of the measurements are within 0.5 dB of the true measured value). Measured values are considered uncorrelated if their time spacing corresponds to the reciprocal of the measurement bandwidth.

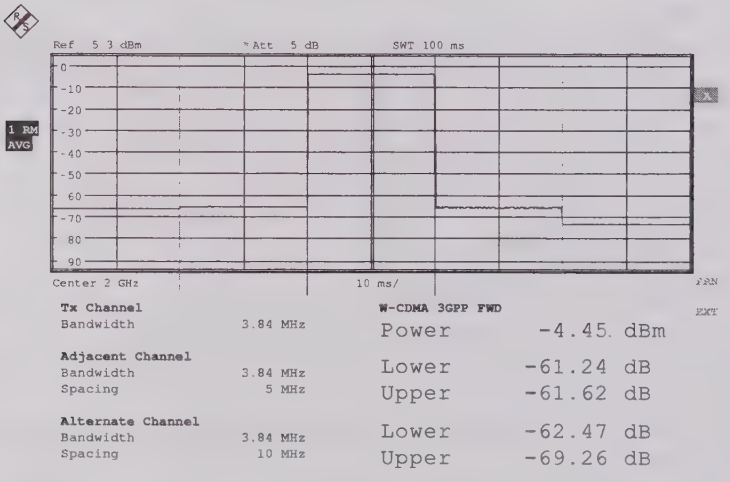

IEC/IEEE bus command: `SENS:POW:HSP ON`

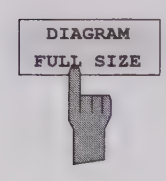

The *DIAGRAM FULL SIZE* softkey switches the diagram to full screen size.

IEC/IEEE bus command: -

The *ADJUST REF LVL* softkey adapts the reference level of the FSU to the measured channel power. This ensures that the settings for the RF attenuation and reference level are optimally adapted to the signal level so that the FSU is not overdriven or the dynamic range reduced by too low an S/N ratio.
Since the measurement bandwidth for adjacent-channel power measurements is clearly narrower than the signal bandwidth, the signal path can be overdriven although the measured trace is definitely below the reference level.

IEC/IEEE bus command: `SENS:POW:ACH:PRES:RLEV`

The *ACLR LIMIT CHECK* softkey switches the limit check for the ACLR measurement on or off.

IEC/IEEE bus command: `:CALC:LIM:ACP ON`

Query of LIMIT CHECK results for
Adjacent channel: `:CALC:LIM:ACP:ACH:RES?`
Alternate channel <1..2>: `:CALC:LIM:ACP:ALT<1..2>:RES?`

Result format:
Left sideband `[PASSED,FAILED]`
Right sideband `[PASSED,FAILED]`

EDIT ACLR LIMIT opens a table with limits for the ACLR measurement. The standard-specific default values are entered with the *ADJUST SETTINGS* softkey.

ACP LIMITS

CHAN	RELATIVE LIMIT CHECK		ABSOLUTE LIMIT CHECK	
	VALUE	ON	VALUE	ON
ADJ	-55 dBc	x	0 dBm	
ALT1	-70 dBc	x	0 dBm	
ALT2	0 dBc		0 dBm	

The following rules apply for limit values:

- A limit value can be defined for each of the adjacent channels. The limit value applies to the upper and the lower adjacent channel.
- A relative limit value and/or an absolute limit can be defined. The check can be activated separately for the two limit values.
- Compliance with active limit values is checked irrespective of whether absolute or relative limits are specified or whether the measurement itself is performed with absolute levels or a relative level ratio. If the two checks are active and the higher one of the two levels is exceeded, the respective value will be marked.

Note: *Measured values violating the limit are printed in red and preceded by a red asterisk.*

IEC/IEEE bus command:
```
:CALC:LIM:ACP ON
:CALC:LIM:ACP:ACH 0dB,0dB
:CALC:LIM:ACP:ACH:STAT ON
:CALC:LIM:ACP:ACH:ABS -10dBm,-10dBm
:CALC:LIM:ACP:ACH:ABS:STAT ON
:CALC:LIM:ACP:ALT1 0dB,0dB
:CALC:LIM:ACP:ALT1:STAT ON
:CALC:LIM:ACP:ALT1:ABS -10dBm,-10dBm
:CALC:LIM:ACP:ALT1:ABS:STAT ON
:CALC:LIM:ACP:ALT2 0dB,0dB
:CALC:LIM:ACP:ALT2:STAT ON
:CALC:LIM:ACP:ALT2:ABS -10dBm,-10dBm
:CALC:LIM:ACP:ALT2:ABS:STAT ON
```

The *CHANNEL BANDWIDTH* softkey activates the entry of the channel bandwidth for the transmission channel.

The useful channel bandwidth is generally defined by the transmission method. In the WCDMA default setting, measurements are performed with a channel bandwidth of 3.84 MHz.

When measuring according to the IBW method (*FAST ACP OFF),* the channel bandwidth is marked by two vertical lines to the left and right of the screen center. It can thus be visually checked whether the entire power of the signal to be measured is within the selected channel bandwidth.

With the time domain method (*FAST ACP ON)* the measurement is performed in zero span. The channel limits are not marked in this case. The FSU offers all available channel filters for selection of the channel bandwidth. Deviating channel bandwidths cannot be set. If deviating channel bandwidths are required, the IBW method should be used.

IEC/IEEE bus command: `SENS:POW:ACH:BWID 3.84MHz`

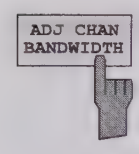

The ADJ *CHAN BANDWIDTH* softkey opens a table in which the channel bandwidths for the adjacent channels can be defined.

ACP CHANNEL BW	
CHAN	BANDWIDTH
ADJ	3.84 MHz
ALT1	3.84 MHz
ALT2	3.84 MHz

When measuring according to the IBW method (FAST ACP OFF), the bandwidths of the different adjacent channels are to be entered numerically. Since all adjacent channels often have the same bandwidth, the other channels ALT1 and ALT2 are set to the bandwidth of the adjacent channel on entering the adjacent-channel bandwidth (ADJ). Thus only one value needs to be entered in the case of equal adjacent channel bandwidths. The same holds true for the ALT2 channels (alternate channels 2) when the bandwidth of the ALT1 channel (alternate channel 1) is entered.

Note: *The bandwidths can be selected independently of each other by overwriting the table from top to bottom.*

With the time domain method (FAST ACP ON), the adjacent-channel bandwidths are selected from the list of available channel filters. For deviating adjacent-channel bandwidths, the IBW method should be used.

IEC/IEEE bus command:
```
SENS:POW:ACH:BWID:ACH 3.84MHz
SENS:POW:ACH:BWID:ALT1 3.84MHz
SENS:POW:ACH:BWID:ALT2 3.84MHz
```

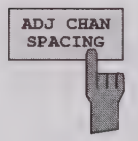

The ADJ *CHAN SPACING* softkey opens a table for defining the channel spacings.

ACP CHANNEL SPACING	
CHAN	SPACING
ADJ	5 MHz
ALT1	10 MHz
ALT2	15 MHz

Since all adjacent channels often have the same distance to each other, the entry of the adjacent-channel spacing (ADJ) causes channel spacing ALT1 to be set to twice and channel spacing ALT2 to three times the adjacent-channel spacing. Thus only one value needs to be entered in the case of equal channel spacing. The same holds true for the ALT2 channels when the bandwidth of the ALT1 channel is entered.

Note: *The channel spacings can be set separately by overwriting the table from top to bottom.*

IEC/IEEE bus command:
```
SENS:POW:ACH:SPAC:ACH 5MHz
SENS:POW:ACH:SPAC:ALT1 10MHz
SENS:POW:ACH:SPAC:ALT2 15MHz
```

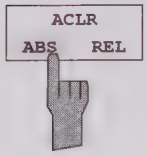

The *CP/ACP ABS/REL* softkey (channel power absolute/relative) switches between absolute and relative power measurement in the channel.

ACLR ABS The absolute power in the transmission channel and in the adjacent channels is displayed in the unit of the Y axis, e.g. in dBm.

ACLR REL In the case of adjacent-channel power measurements (*NO. OF ADJ CHAN* > 0), the level of the adjacent channels is displayed relative to the level of the transmission channel in dBc.
With linear scaling of the Y axis, the power of the new channel is displayed relative to the reference channel (CP/CP_{ref}). With dB scaling, the logarithmic ratio $10lg\ (CP/CP_{ref})$ is displayed.
The relative channel power measurement can thus also be used for universal adjacent-channel power measurements. Each channel can be measured individually.

IEC/IEEE bus command: `SENS:POW:ACH:MODE ABS`

The *CHAN PWR / HZ* softkey switches between the measurement of the total power in the channel and the power measurement with reference to 1 Hz bandwidth.

The conversion factor is $10 \cdot lg \frac{1}{Channel \cdot Bandwidth}$.

IEC/IEEE bus command: `:CALC:MARK:FUNC:POW:RES:PHZ ON|OFF`

For manual setting of test parameters differing from the settings made with *ADJUST SETTINGS,* the following should be observed:

Frequency span
The frequency span has to cover at least all channels to be measured.
This is the channel bandwidth for channel power measurement.
If the frequency span is large compared to the frequency section (or frequency sections) under test, only a few pixels are available to be measured.

Resolution bandwidth (RBW)
To ensure both an acceptable measurement speed and the required selection (to suppress spectral components outside the channel to be measured, especially of the adjacent channels), the resolution bandwidth that is selected must not be too small or too large. As a general approach, the resolution bandwidth is to be set to values between 1% and 4% of the channel bandwidth. A larger resolution bandwidth can be selected if the spectrum within the channel to be measured and around it has a flat characteristic.

Video bandwidth (VBW)
For a correct power measurement, the video signal must not be limited in bandwidth. A restricted bandwidth of the logarithmic video signal would cause signal averaging and thus result in a power indication that is too low (-2.51 dB at very low video bandwidths). The video bandwidth should therefore be selected at least three times the resolution bandwidth.
The *ADJUST SETTINGS* softkey sets the video bandwidth (VBW) as a function of the channel bandwidth as follows:

$VBW \geq 3 \times RBW$.

Detector
The *ADJUST SETTINGS* softkey selects the RMS detector.
The RMS detector is selected since it correctly indicates the power irrespective of the characteristics of the signal to be measured. In principle, the sample detector would be possible as well. Due to the limited number of trace pixels used to calculate the power in the channel, the sample detector would yield less stable results. Averaging, which is often performed to stabilize the measurement results, leads to an indication level that is too low and should therefore be avoided. The reduction in the displayed power depends on the number of averages and the signal characteristics in the channel to be measured.

Measurement of Multi Carrier Adjacent-Channel Power – MULT CARR ACLR

MEAS key

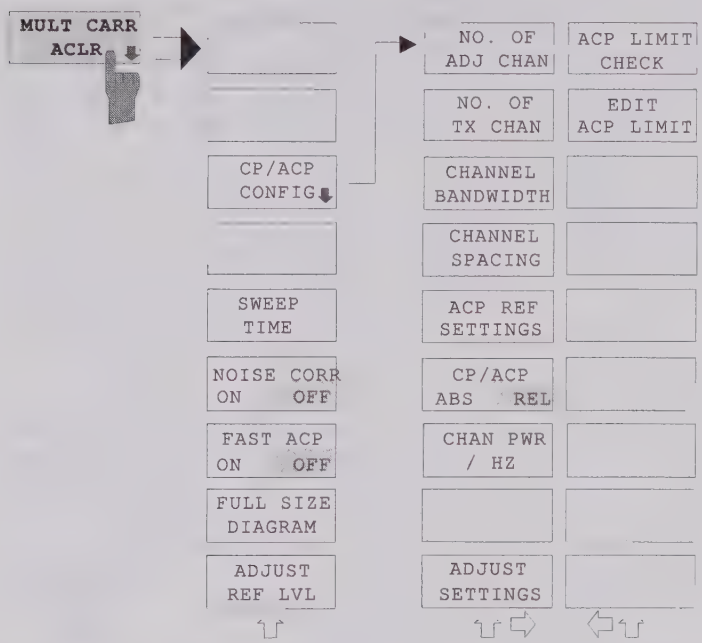

The *MULT CARR ACP* softkey activates adjacent-channel power measurement for several carrier signals. In addition, it opens a submenu for defining the parameters for channel power measurement. The softkey selected is shown in colour to indicate that an adjacent-channel power measurement is active.

IEC/IEEE-bus command:
:CONF:WCDP:MEAS MCAC

The *CP/ACP CONFIG* softkey opens a submenu for defining the parameters for MULT CARR ACLR measurement. The submenu is identical to the same one in analyzer mede. Please refer to analyzer manual for a description of the submenu.

The *SWEEP TIME* softkey activates the entry of the sweep time. With the RMS detector, a longer sweep time increases the stability of the measurement results.
The function of the softkey is identical to the softkey *SWEEP TIME MANUAL* in the menu *BW*.

IEC/IEEE-bus command: `SWE:TIM <value>`

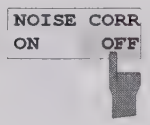

If the *NOISE CORR ON/OFF* softkey is activated, the results will be corrected by the instrument's inherent noise, which increases the dynamic range.
When the function is switched on, a reference measurement of the instrument's inherent noise is carried out. The noise power measured is then subtracted from the power in the channel that is being examined.
The inherent noise of the instrument depends on the selected center frequency, resolution bandwidth and level setting. Therefore, the correction function is disabled whenever one of these parameters is changed. A disable message is displayed on the screen.
To enable the correction function in conjunction with the changed setting, press the softkey once more. A new reference measurement is carried out.

IEC/IEEE-bus command: `SENS:POW:NCOR ON`

The *FAST ACP* softkey switches between the IBW method (*FAST ACP OFF*) and the time domain method (*FAST ACP ON*).

With *FAST ACP ON* the power measurement is performed in the different channels in the time domain. The analyzer sets the center frequency consecutively to the different channel center frequencies and measures the power with the selected measurement time (= sweep time/number of channels). The RBW filters suitable for the selected standard and frequency offset are automatically used (e.g. root raised cos with W-CDMA). The list of available channel filters is included in section "Setting of Bandwidths and Sweep Time – *BW key*".

The RMS detector is used for obtaining correct power measurement results. Therefore this requires no software correction factors.

Measured values are output as a list. The powers of the transmission channels are output in dBm, the powers of the adjacent channels in dBm *(CP/ACP ABS)* or dB *(CP/ACP REL)*.

The sweep time is selected depending on the desired reproducibility of results. Reproducibility increases with sweep time since power measurement is then performed over a longer time period.

As a general approach, it can be assumed that approx. 500 non-correlated measured values are required for a reproducibility of 0.5 dB (99% of the measurements are within 0.5 dB of the true measured value). This holds true for white noise. The measured values are considered as non-correlated when their time interval corresponds to the reciprocal of the measured bandwidth.

IEC/IEEE-bus command `SENS:POW:HSP ON`

The *FULL SIZE DIAGRAM* softkey switches the diagram to full screen size.

IEC/IEEE-bus command: `DISP:WIND1:SIZE LARG|SMAL-`

The *ADJUST REF LVL* softkey adjusts the reference level of the instrument to the measured channel power. This ensures that the settings of the RF attenuation and the reference level are optimally adjusted to the signal level without overloading the instrument or limiting the dynamic range by a too small S/N ratio.
Since the measurement bandwidth for channel power measurements is significantly lower than the signal bandwidth, the signal path may be overloaded although the trace is still significantly below the reference level.

IEC/IEEE-bus command: `SENS:POW:ACH:PRES:RLEV`

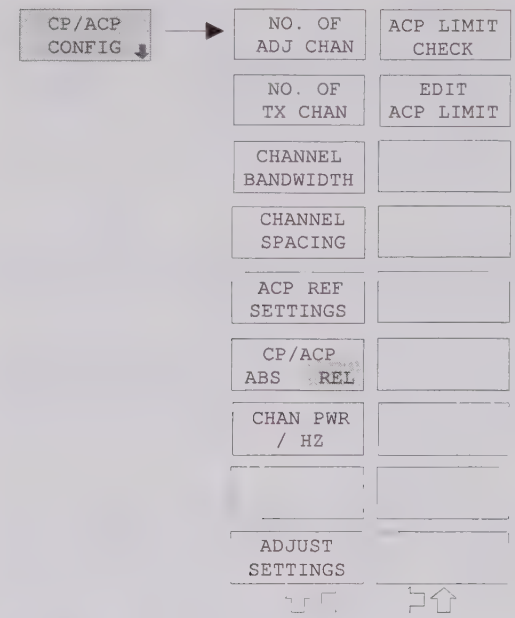

The *CP/ACP CONFIG* softkey opens a submenu for configuration of the channel power and adjacent channel power measurement independently of the offered standards.

The channel configuration includes the number of channels to be measured, the channel bandwidths (*CHANNEL BANDWIDTH*), and the channel spacings (*CHANNEL SPACING*).

Limit values can additionally be specified for the adjacent-channel power (*ACP LIMIT CHECK* and *EDIT ACP LIMITS*) which are checked for compliance during the measurement.

The *NO. OF ADJ CHAN* softkey activates the entry of the number ±n of adjacent channels to be considered in the adjacent-channel power measurement.
Numbers from 0 to 3 can be entered.

The following measurements are performed depending on the number of the channels.

0 Only the channel powers are measured.
1 The channel powers and the power of the upper and lower adjacent channel are measured.
2 The channel powers, the power of the upper and lower adjacent channel and of the next higher and lower channel (alternate channel 1) are measured.
3 The channel power, the power of the upper and lower adjacent channel, the power of the next higher and lower channel (alternate channel 1) and of the next but one higher and lower adjacent channel (alternate channel 2) are measured.

IEC/IEEE-bus command: `POW:ACH:ACP 1`

The *NO. OF TX CHAN* softkey enables the entry of the number of carrier signals to be considered in channel and adjacent-channel power measurements.

Numbers from 1 to 12 can be entered.

The softkey is available only for multicarrier ACP measurements.

IEC/IEEE-bus command: `SENS:POW:ACH:TXCH:COUN 4`

CHANNEL BANDWIDTH

The *CHANNEL BANDWIDTH* softkey opens a table for defining the channel bandwidths for the transmission channels and the adjacent channels.

ACP CHANNEL BW	
CHAN	BANDWIDTH
ADJ	14 kHz
ALT1	14 kHz
ALT2	14 kHz

The transmission-channel bandwidth is normally defined by the transmission standard. The correct bandwidth is set automatically for the selected standard (see *CP/ACP STANDARD* softkey).

With the IBW method (*FAST ACP OFF),* the channel bandwidth limits are marked by two vertical lines right and left of the channel center frequency. It can in this way be visually checked whether the entire power of the signal under test is within the selected channel bandwidth.

Measurements in the time domain (*FAST ACP ON)* are performed in the zero span mode. The channel limits are indicated by vertical lines. For measurements requiring channel bandwidths deviating from those defined in the selected standard the IBW method is to be used.
Refer to section "Setting of Bandwidths and Sweep Time – *BW* key" for a list of available channel filters.

When measuring according to the IBW method (FAST ACP OFF) the bandwidths of the different adjacent channels are to be entered numerically. Since all adjacent channels often have the same bandwidth, the other channels Alt1 and Alt2 are set to the bandwidth of the adjacent channel on entering the adjacent-channel bandwidth (ADJ). Thus only one value needs to be entered in case of equal adjacent channel bandwidths. The same holds true for the ALT2 channels (alternate channels 2) when the bandwidth of the ALT1 channel (alternate channel 1) is entered.

Note: *The channel spacings can be set separately by overwriting the table from top to bottom.*

IEC/IEEE-bus command:
```
POW:ACH:BWID:CHAN 3.84MHz
POW:ACH:BWID:ACH 3.84MHz
POW:ACH:BWID:ALT1 3.84MHz
POW:ACH:BWID:ALT2 3.84MHz
```

CHANNEL SPACING

The *CHANNEL SPACING* softkey opens a table for defining the channel spacings.

ACP CHANNEL SPACING	
CHAN	SPACING
ADJ	20 kHz
ALT1	40 kHz
ALT2	60 kHz

Since all the adjacent channels often have the same distance to each other, the entry of the adjacent-channel spacing (ADJ) causes channel spacing ALT1 to be set to twice and channel spacing ALT2 to three times the adjacent-channel spacing. Thus only one value needs to be entered in case of equal channel spacing. The same holds true for the ALT2 channels when the bandwidth of the ALT1 channel is entered.

Note: *The channel spacings can be set separately by overwriting the table from top to bottom.*
The entry "TX" is only available for the multicarrier ACP measurement.

IEC/IEEE-bus command:
```
SENS:POW:ACH:SPAC:CHAN 5MHz
SENS:POW:ACH:SPAC:ACH 5MHz
SENS:POW:ACH:SPAC:ALT1 10MHz
SENS:POW:ACH:SPAC:ALT2 15MHz
```

ACP REF SETTINGS

The *ACP REF SETTINGS* softkey opens a table for selecting the transmission channel to which the adjacent-channel relative power values should be referenced.

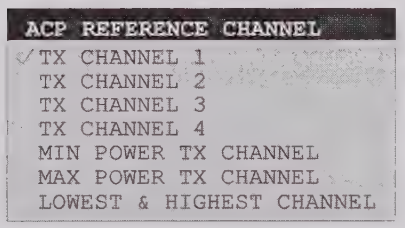

TX CHANNEL 1 - 4	Selection of one of channels 1 to 4.
MIN POWER TX CHANNEL	The transmission channel with the lowest power is used as a reference channel.
MAX POWER TX CHANNEL	The transmission channel with the highest power is used as a reference channel.
LOWEST & HIGHEST CHANNEL	The outer lefthand transmission channel is the reference channel for the lower adjacent channels, the outer righthand transmission channel that for the upper adjacent channels.

Note: *The softkey is only available for the multicarrier ACP measurement.*

IEC/IEEE-bus command:
```
POW:ACH:REF:TXCH:MAN 1
POW:ACH:REF:TXCH:AUTO MIN
```

The *CP/ACP ABS/REL* softkey (channel power absolute/relative) switches between absolute and relative power measurement in the channel.

CP/ACP ABS The absolute power in the transmission channel and in the adjacent channels is displayed in the unit of the Y axis, e.g. in dBm, dBµV.

CP/ACP REL For adjacent-channel power measurements (*NO. OF ADJ CHAN* > 0), the level of the adjacent channels is displayed relative to the level of the transmission channel in dBc.

For channel power measurements (*NO. OF ADJ CHAN* = 0) with a single carrier, the power of the transmission channel is displayed relative to the power of a reference channel defined by *SET CP REFERENCE*. This means:

1. Declare the power of the currently measured channel as the reference value, using the *SET CP REFERENCE* softkey.
2. Select the channel of interest by varying the channel frequency center frequency).

With linear scaling of the Y axis, the power of the new channel relative to the reference channel (CP/CP_{ref}) is displayed. With dB scaling, the logarithmic ratio $10lg\ (CP/CP_{ref})$ is displayed.

The relative channel power measurement can thus also be used for universal adjacent-channel power measurements. Each channel can be measured individually.

IEC/IEEE-bus command: `POW:ACH:MODE ABS`

The *CHAN PWR / HZ* softkey toggles between the measurement of the total channel power and the measurement of the channel power referenced to a 1-Hz bandwidth.

The conversion factor is $10 \cdot lg \frac{1}{Channel \cdot Bandwidth}$.

By means of this function it is possible e.g. to measure the signal/noise power density or use the additional functions *CP/ACP REL* and *SET CP REFERENCE* to obtain the signal to noise ratio.

IEC/IEEE-bus command: `CALC:MARK:FUNC:POW:RES:PHZ ON|OFF`

The *ADJUST SETTINGS* softkey automatically optimizes the instrument settings for the selected power measurement (see below).
All instrument settings relevant for a power measurement within a specific frequency range (channel bandwidth) are optimized for the selected channel configuration (channel bandwidth, channel spacing):

- Frequency span:

  The frequency span should cover at least all channels to be considered in a measurement.
  For adjacent-channel power measurements, the frequency span is set as a function of the number of transmission channels, the transmission channel spacing, the adjacent-channel spacing, and the bandwidth of one of adjacent-channels ADJ, ALT1 or ALT2, whichever is furthest away from the transmission channels:

IEC/IEEE-bus command: `POW:ACH:PRES MCAC`

The *ACP LIMIT CHECK* softkey switches the limit check for the ACP measurement on and off.

IEC/IEEE-bus command:

```
CALC:LIM:ACP ON
CALC:LIM:ACP:ACH:RES?
CALC:LIM:ACP:ALT:RES?
```

EDIT ACP LIMITS

The *EDIT ACP LIMITS* softkey opens a table for defining the limits for the ACP measurement.

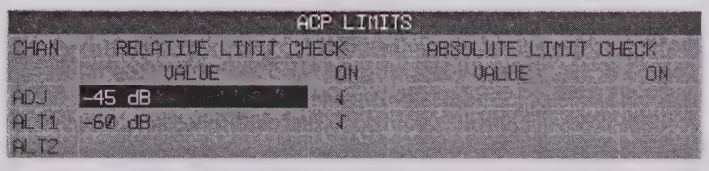

The following rules apply for the limits:

- A separate limit can be defined for each adjacent channel. The limit applies to both the upper and the lower adjacent channel.
- A relative and/or absolute limit can be defined. The check of both limit values can be activated independently.
- The checks adherence to the limits irrespective of whether the limits are absolute or relative or whether the measurement is carried out with absolute or relative levels. If both limits are active and if the higher of both limit values is exceeded, the measured value is marked accordingly.

Note: *Measured values exceeding the limit are marked by a preceding asterisk.*

IEC/IEEE-bus command:

```
CALC:LIM:ACP ON
CALC:LIM:ACP:ACH 0dB,0dB
CALC:LIM:ACP:ACH:STAT ON
CALC:LIM:ACP:ACH:ABS -10dBm,-10dBm
CALC:LIM:ACP:ACH:ABS:STAT ON
CALC:LIM:ACP:ALT1 0dB,0dB
CALC:LIM:ACP:ALT1:STAT ON
CALC:LIM:ACP:ALT1:ABS -10dBm,-10dBm
CALC:LIM:ACP:ALT1:ABS:STAT ON
CALC:LIM:ACP:ALT2 0dB,0dB
CALC:LIM:ACP:ALT2:STAT ON
CALC:LIM:ACP:ALT2:ABS -10dBm,-10dBm
CALC:LIM:ACP:ALT2:ABS:STAT ON
```

Signal Power Check – SPECTRUM EM MASK

MEAS key

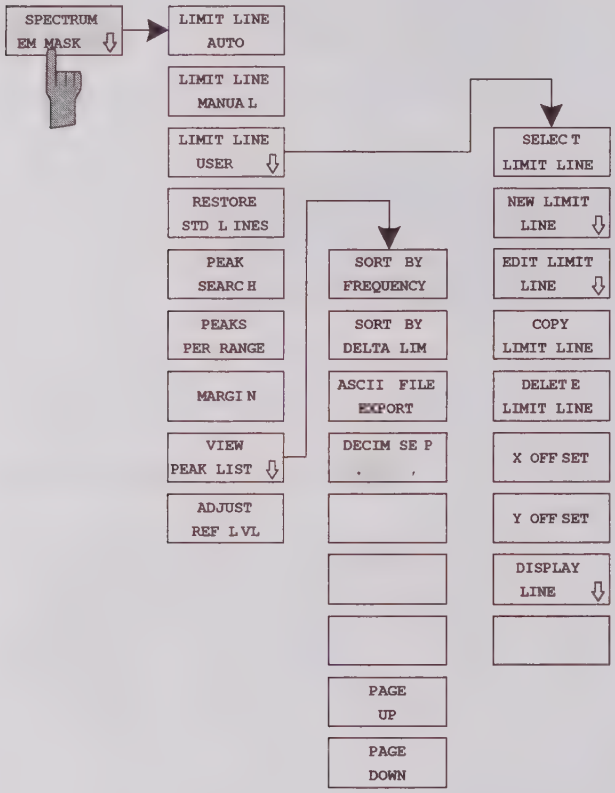

The *SPECTRUM EM MASK* softkey starts the determination of the power of the 3GPP FDD signal in defined offsets from the carrier and compares the power values with a spectral mask specified by 3GPP.

IEC/IEEE bus command:
:CONFigure:WCDPower:MEASurement ESPectrum

Query of results:
:CALCulate:LIMit:FAIL? and visual evaluation

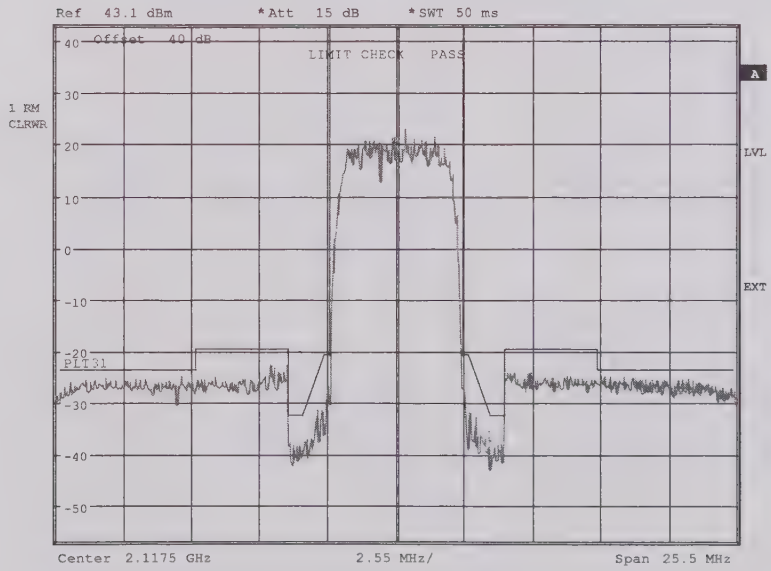

Fig. 6-3 Measurement of spectrum emission mask

Pressing the softkey activates the analyzer mode with defined settings:

SYSTEM PRESET		
After PRESET the following user-specific settings are restored, thus retaining the adaptation to the DUT:	Reference Level, Reference Level Offset Center Frequency, Frequency Offset Input Attenuation, Mixer Level All trigger settings	
CHAN PWR / ACP	CP / ACP ON	
CP / ACP STANDARD	W-CDMA 3GPP REV	
CP / ACP CONFIG	NO. OF ADJ CHAN	0
SPAN		25.5 MHz
BW	SWEEP TIME MANUAL	50 ms

The LIMIT LINE AUTO softkey automatically selects the limit line to be checked according to the power determined in the useful channel. If the measurement is carried out in CONTINUOUS SWEEP and the channel power changes from sweep to sweep, this can result in the limit line being continuously redrawn.
The softkey is activated when the spectrum emission mask measurement is entered.

IEC/IEEE bus command: `:CALC:LIM:ESP:MODE AUT`

The *LIMIT LINE MANUAL* softkey activates the manual selection of a predefined limit line. If this softkey is selected, the channel power measurement is not used to select the limit line, but only to determine its relative components. The power at the different frequency offsets is compared with the user-defined limit line.
The softkey opens a table with all the limit lines predefined in the device:

P >= 43 dBm
39 dBm <= P < 43 dBm
31 dBm <= P < 39 dBm
P < 31 dBm

The name of the limit line indicates the expected power range for which the limit line has been defined.

IEC/IEEE bus command:
```
:CALC:LIM:ESP:MODE MANual
:CALC:LIM:ESP:VALue 39
```

The LIMIT LINE USER softkey activates the input of user-defined limit lines. The softkey opens the menus of the limit line editor that are known from the base unit.
In contrast to the predefined limit lines supplied with the FSU which correspond to the standard specifications, the user-defined limit line can be specified for the entire frequency range (±12.5 MHz from carrier) either relatively (referenced to the channel power) or absolutely.

IEC/IEEE bus command:
```
:CALCulate:LIMit<1>:NAME <string>
:CALCulate:LIMit<1>:UNIT DBM
:CALCulate:LIMit<1>:CONTrol[:DATA]
        <num_value>, <num_value>, ...
:CALCulate:LIMit<1>:CONTrol:DOMain FREQuency
:CALCulate:LIMit<1>:CONTrol:TRACe 1
:CALCulate:LIMit<1>:CONTrol:OFFset <num_value>
:CALCulate:LIMit<1>:CONTrol:MODE   RELative

:CALCulate:LIMit<1>:UPPer[:DATA]
```

```
        <num_value>, <num_value>..
:CALCulate:LIMit<1>:UPPer:STATe   ON | OFF
:CALCulate:LIMit<1>:UPPer:OFFset <num_value>
:CALCulate:LIMit<1>:UPPer:MARGin <num_value>
:CALCulate:LIMit<1>:UPPer:MODE  ABSolute
:CALCulate:LIMit<1>:UPPer:SPACing LINear
```

The *RESTORE STD LINES* softkey restores the limit lines defined in the standard to the factory-set state. This prevents inadvertent overwriting of the standard lines.

IEC/IEEE bus command: `:CALC:LIM:ESP:RESTore`

The *PEAK SEARCH* softkey activates a single measurement of spectrum emission mask. The limit mask - reduced by an overall margin - is checked against the trace. The fail positions are marked by crosses. Every value is added to a peak list which can be opened and saved in ASCII format or read out via an IEC/IEEE command.
The peaks are calculated using the same peak search algorithm like markers do. It is possible to define the peak excursion value via *MKR->NEXT*, softkey *PEAK EXCURSION*. Additionaly the worst fail of each fail area without a peak is marked and added to the peak list.

IEC/IEEE bus command: `:CALC:PEAK`

The *PEAKS PER RANGE* softkey defines how many peaks are searched for within one range. The ranges are:

- below –4 MHz from the carrier,
- above +4 MHz from carrier, and
- the area from –4 MHz to +4 MHz around the carrier.

The default value of *PEAKS PER RANGE* is 25.

IEC/IEEE bus command: `:CALC:PEAK:SUBR 1...50`

The *MARGIN* softkey defines an overall margin which is substracted from the limit line to make the peak search more stronger. If the values of the trace are above the limit line minus margin value it will be marked with a cross as shown in the peak list. The DELTA LIMIT of the list will be positive thus indicating that only the margin and not the limit itself is reached. A negative sign would indicate the real fail.
The default value of *MARGIN* is 6 dB.

IEC/IEEE bus command:

`:CALC:PEAK:MARG -200dB...200dB`

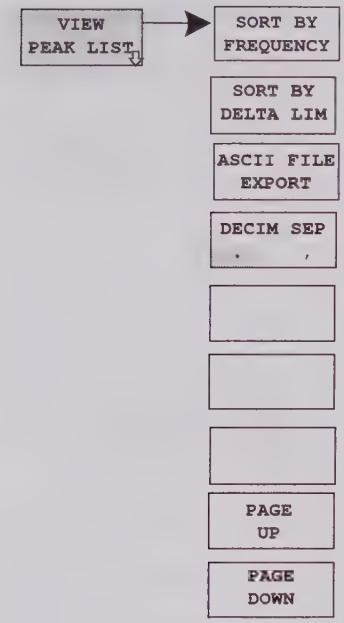

The *VIEW PEAK LIST* softkey opens the peak list. The list is empty if either now peak search (see softkey *PEAK SEARCH*) has been done, or if no peaks/fails have been found.
The list shows for every peak value the following entries:

- the trace,
- the frequency,
- the level and
- the delta level to the limit (negative deltas indicate a fail).

The following figure shows a peak list containing 6 entries:

VIEW PEAK LIST

TRACE / DETECTOR	FREQUENCY	LEVEL dBm	DELTA LIMIT dB
1 RMS	2.1200 GHz	-19.75	0.74
1 RMS	2.1204 GHz	-26.65	-3.04
1 RMS	2.1203 GHz	-25.78	-3.71
1 RMS	2.1202 GHz	-25.69	-4.53
1 RMS	2.1204 GHz	-29.24	-4.71
1 RMS	2.1203 GHz	-28.22	-5.23

Fig. 6-4 Peak list of spectrum emission mask

IEC/IEEE bus command: `:TRAC? FINal1`

The comma separated values are :

```
<freq1>, <level1>, <delta level 1>,
<freq2>, <level2>, <delta level 2>, ...
```

This softkey also opens the following softkey menu:

The *SORT BY FREQUENCY* softkey sorts the list in ascending order according to the column FREQUENCY.

IEC/IEEE bus command: --

The *SORT BY DELTA LIM* softkey sorts the list in descending order according to the column DELTA LIMIT.

IEC/IEEE bus command: --

The *ASCII FILE EXPORT* softkey exports the peak list in ASCII format to a file.
The complete output format is similar to the trace export. The peak values within the file are comma separated in the format:

```
<trace no 1>, <freq1>, <level1>, <delta level 1>,
<trace no 2>, <freq2>, <level2>, <delta level 2>,
...
```

The trace no is always 1.

IEC/IEEE bus command: `:MMEM:STOR:FIN 'A:\final.dat'`

Different language versions of evaluation programs may require a different handling of the decimal point. It is therefore possible to select between default separators '.' (decimal point) and ',' (comma) using softkey *DECIM SEP.*

IEC/IEEE bus command: `:FORM:DEXP:DSEP POIN | COMM`

The *ADJUST REF LVL* softkey adjusts the FSU reference level to the total signal power measured.
The softkey becomes active after the first sweep has been terminated with the measurement of the occupied bandwidth and the total signal power is known.
The adjustment of the reference level ensures that the FSU signal path is not overdriven and that the dynamic range is not limited by a reference level that is too low.
IEC/IEEE bus command: `SENS:POW:ACH:PRES:RLEV`

Measurement of Occupied Bandwidth - OCCUPIED BANDWIDTH

MEAS key

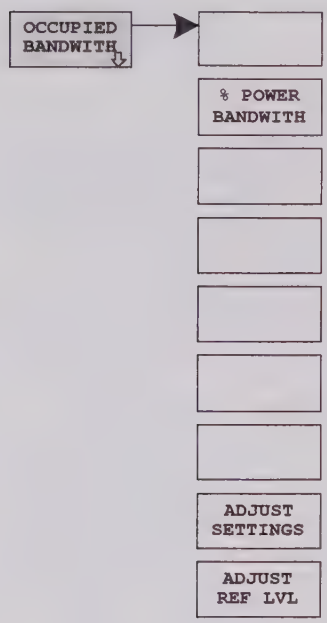

The *OCCUPIED BANDWIDTH* activates the measurement of the bandwidth that the signal occupies.

The occupied bandwidth is defined as the bandwidth in which – in default settings – 99% of the total signal power is to be found. The percentage of the signal power to be included in the bandwidth measurement can be changed.
The occupied bandwidth and the frequency markers are output in the marker info field at the top right edge of the screen.

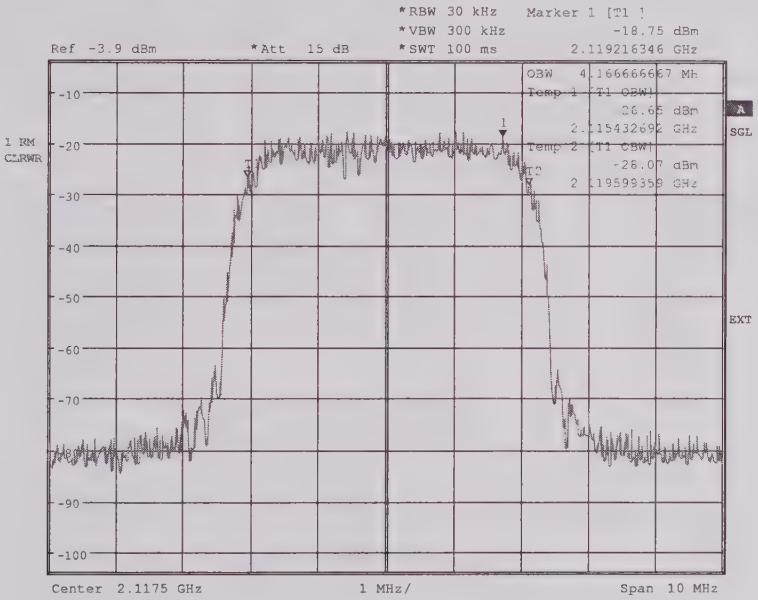

Fig. 6-5 Measurement of occupied bandwidth

Pressing the softkey activates the analyzer mode with defined settings:

SYSTEM PRESET		
After PRESET the following user-specific settings are restored, thus retaining the adaptation to the DUT:	Reference Level, Reference Level Offset Center Frequency, Frequency Offset Input Attenuation, Mixer Level All trigger settings	
OCCUPIED BANDWIDTH		
TRACE 1	DETECTOR	RMS

IEC/IEEE bus command: `:CONFigure:WCDPower:MEASurement OBANdwidth`

Query of results: `:CALCulate:MARKer:FUNCtion:POWer:RESult? OBANdwidth`

The *% POWER BANDWIDTH* softkey opens the entry of the percentage of power relative to the total power in the displayed frequency range which defines the occupied bandwidth (percentage of total power).
The valid range of values is 10% to 99.9%.

IEC/IEEE bus command:

```
SENS:POW:BWID 99PCT
```

The *ADJUST REF LVL* softkey adjusts the reference level of the analyzer to the measured channel power. This ensures that the settings of the RF attenuation and the reference level are optimally adjusted to the signal level without overloading the instrument or limiting the dynamic range by an S/N ratio that is too small.
Since the measurement bandwidth for channel power measurements is significantly lower than the signal bandwidth, the signal path may be overloaded although the trace is still significantly below the reference level.

IEC/IEEE bus command: `SENS:POW:ACH:PRES:RLEV`

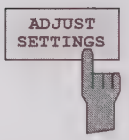

The *ADJUST SETTINGS* softkey automatically optimizes the instrument settings for the selected power measurement (see below).
All instrument settings relevant for a power measurement within a specific frequency range (channel bandwidth) are optimized for the selected channel configuration (channel bandwidth, channel spacing):

Frequency span:

The frequency span has to cover at least all channels to be considered.
When measuring the channel power, 2 x channel bandwidth is set as the span.
The setting of the span during adjacent-channel power measurement is dependent on the channel spacing and channel bandwidth of the adjacent channel ADJ, ALT1 or ALT2 with the largest distance from the transmission channel.

Resolution bandwidth	RBW $\leq$ 1/40 of channel bandwidth
Video bandwidth	VBW $\geq 3 \times$ RBW
Detector	RMS detector

Trace math and trace averaging functions are switched off.
The reference level is not influenced by *ADJUST SETTINGS*. It can be separately adjusted with *ADJUST REF LVL*.

The adjustment is carried out only once; if necessary, the instrument settings can be changed later.

IEC/IEEE bus command:

```
SENS:POW:ACH:PRES OBW
```

Signal Statistics

MEAS key

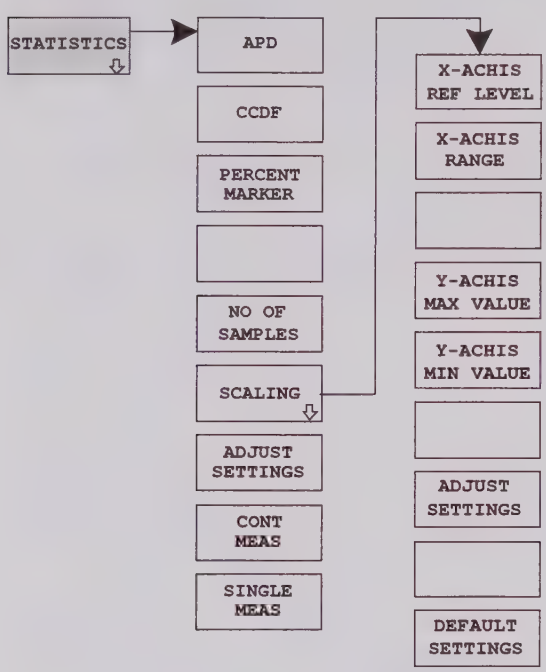

The *STATISTICS* softkey starts a measurement of the distribution function of the signal amplitudes (complementary cumulative distribution function). The measurement can be switched to amplitude power distribution (APD) by means of the menu softkeys.

For the purposes of this measurement, a signal section of user-definable length is recorded continuously in the zero span, and the distribution of the signal amplitudes is evaluated. The record length and display range of the CCDF can be set using the softkeys of the menu. The amplitude distribution is displayed logarithmically as a percentage of the amount by which a particular level is exceeded, beginning with the average value of the signal amplitudes.

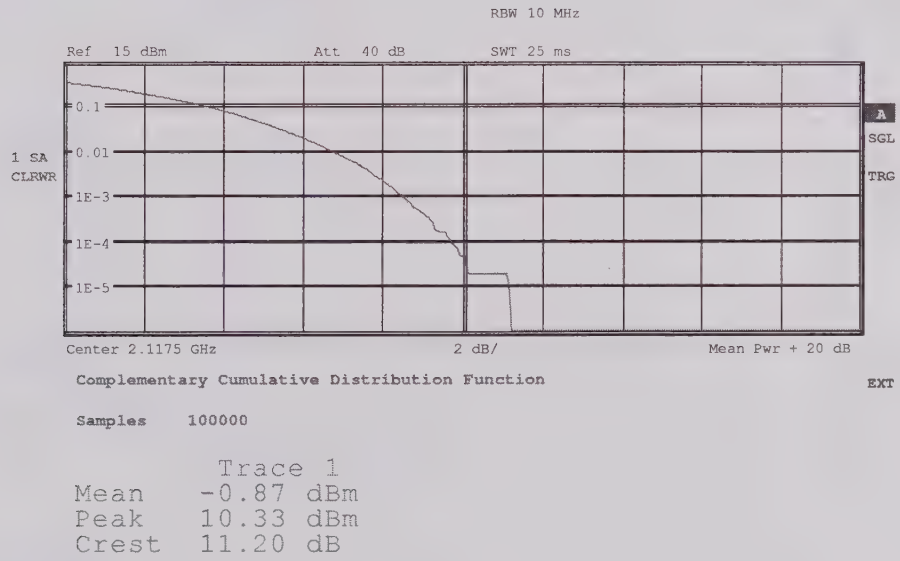

Fig. 6-6 CCDF of a 3GPP FDD signal

Pressing the softkey activates the analyzer mode with defined settings:

SYSTEM PRESET		
After PRESET the following user-specific settings are restored, thus retaining the adaptation to the DUT:	Reference Level, Reference Level Offset Center Frequency, Frequency Offset Input Attenuation, Mixer Level All trigger settings	
SIGNAL STATISTIC		
TRACE1	DETECTOR	SAMPLE
BW	RES BW MANUAL	10 MHz
	VIDEO BW MANUAL	5 MHz

Starting from these settings, the FSU can be operated in all functions available in the analyzer mode, i.e. all test parameters can be adapted to the requirements of the specific measurement.

IEC/IEEE bus command: `:CONFigure:WCDPower:MEASurement CCDF`
or
`:CALCulate:STATistics:CCDF ON`

Query of results: `:CALCulate:MARKer:X?`

The *APD ON/OFF* softkey switches on the amplitude probability distribution function.
When the APD function is switched on, the CCDF function is switched off automatically.

IEC/IEEE bus command: `CALC:STAT:APD ON`

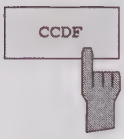

The *CCDF ON/OFF* softkey switches on the complementary cumulative distribution function.
When the CCDF function is switched on, the APD function is switched off automatically.

IEC/IEEE bus command: `CALC:STAT:CCDF ON`

If the CCDF function is active, the *PERCENT MARKER* softkey allows marker 1 to be positioned by entering a probability value. Thus, the power that is exceeded with a specified probability can be determined very easily.
If marker 1 is in the switched-off state, it will be switched on automatically.

IEC/IEEE bus command: `CALC:MARK:Y:PERC 0...100%`

NO OF SAMPLES softkey sets the number of power measurements taken into account for the statistics.
Please note that the overall measurement time is influenced by the number of samples selected as well as by the resolution bandwidth set up for the measurement since the resolution bandwidth directly influences the sampling rate.

IEC/IEEE bus command: `CALC:STAT:NSAM <value>`

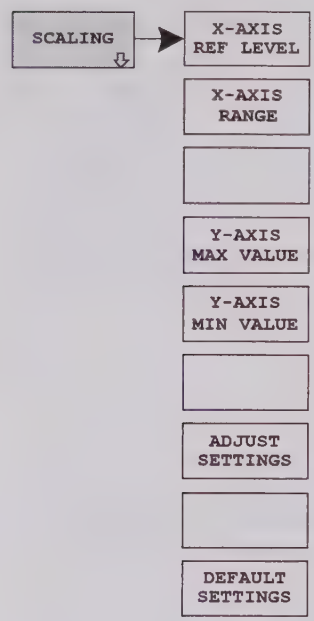

The *SCALING* softkey opens a submenu that allows the scaling parameters for both the x axis and y axis to be changed.

The *X-AXIS REF LEVEL* softkey changes the level settings of the instrument and sets the maximum power to be measured. The function is identical to softkey *REF LEVEL* in menu *AMPT*.
For the *APD* function, this value is mapped to the right diagram border. For the *CCDF* function, there is no direct representation of this value on the diagram because the x axis is scaled relative to the *MEAN POWER* measured.

IEC/IEEE command: `CALC:STAT:SCAL:X:RLEV <value>`

The *X-AXIS RANGE* softkey changes the level range to be covered by the statistics measurement selected.
The function is identical to softkey *RANGE LOG MANUAL* in menu *AMPT*.

IEC/IEEE command: `CALC:STAT:SCAL:X:RANG <value>`

The *Y-AXIS MAX VALUE* softkey defines the upper limit of the displayed probability range.
Values on the y axis are normalized which means that the maximum value is 1.0. Since the y axis scaling has a logarithmic axis, the distance between the max and min values must be at least one decade.

IEC/IEEE command: `CALC:STAT:SCAL:Y:UPP <value>`

The *Y-AXIS MIN VALUE* softkey defines the lower limit of the displayed probability range.
Since the y axis scaling has a logarithmic axis, the distance between the max and min values must be at least one decade. Valid values are in the range 0 < value < 1.

IEC/IEEE command: `CALC:STAT:SCAL:Y:LOW <value>`

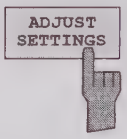

See below

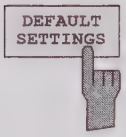

The *DEFAULT SETTINGS* softkey resets the x and y axis scales to their PRESET values.

x axis reference level: -20 dBm
x axis range APD: 100 dB
x axis range CCDF: 20 dB

y axis upper limit: 1.0
y axis lower limit: 1E-6

IEC/IEEE bus command: `CALC:STAT:PRES`

The softkey *ADJUST REF LVL* adjusts the reference level to get an optimized sensitivity. In oposite to the *ADJUST SETTINGS* softkey, only the refernce level is changed all other setting parameters are kept.

IEC--command: `CALC:STAT:PRES:RLEV`

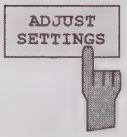

The *ADJUST SETTINGS* softkey optimizes the level settings of the FSU according to the measured peak power in order to gain maximum sensitivity of the instrument.
The level range is adjusted according to the measured difference between peak and minimum power for APD measurement and peak and mean power for CCDF measurement in order to obtain maximum power resolution.
Additionally, the probability scale is adapted to the selected number of samples.

IEC/IEEE bus command: `CALC:STAT:SCAL:AUTO ONCE`

The *CONT MEAS* softkey starts collecting a new sequence of sample data and calculating the APD or CCDF curve depending on the selected measurement. The next measurement is started automatically as soon as the indicated number of samples has been reached ("CONTinuous MEASurement").

IEC/IEEE bus command:
```
INIT:CONT ON;
INIT:IMM
```

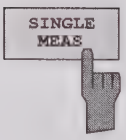

The *SINGLE MEAS* softkey starts collecting a new sequence of sample data and calculating the APD or CCDF curve depending on the selected measurement. At the beginning of the measurement, previously obtained measurement results are discarded.

IEC/IEEE bus command:
```
INIT:CONT OFF;
INIT:IMM
```

Code Domain Measurements on 3GPP FDD Signals

Application Firmware FS-K72/K74 provides the peak code domain error measurement and composite EVM specified by the 3GPP standard as well as the code domain power measurement and code domain error measurement of assigned and unassigned codes and a display of the composite constellation diagram of the entire signal. In addition, the symbols demodulated in a slot, their power, and the determined bits or the symbol EVM can be displayed for an active channel.

A signal section of approx. 20 ms is recorded for analysis and then searched through to find the start of a 3GPP FDD frame. If a frame start is found in the signal, CDP analysis is performed for a complete frame starting from slot 0.

Application firmware FS-K72/K74 offers two different ways of representing the code domain power measurement:

- Representation of all code channels

  Option FS-K72/K74 displays the power of all occupied code channels in a bar graph. The X axis is scaled for the highest code class or the highest spreading factor (512). Code channels with a lower spreading factor occupy correspondingly more channels of the highest code class. The power of a code channel is always measured according to its symbol rate. Unused code channels are assumed to belong to the highest code class and displayed accordingly. The displayed power of an unused code channel therefore corresponds to the power of a channel with the spreading factor 512 at the respective code position.
  To simplify identification, used and unused channels are displayed in different colours. Used channels are yellow and unused channels blue.
  The measured power always refers to one slot. The time reference for the start of a slot is the CIPCH slot. If the signal contains channels with timing offsets, the start of a slot of the channel may be different from the CPICH slot start. This leads to the power of the bar graphs normally being averaged over two adjacent slots in such cases. The power shown in the bar graphs thus does not necessarily correspond to the slot power of the channel the bar graph belongs to. If channels with a timing offset contain a power control circuit, the channel-power-versus-time display (slot spacing, see *POWER VS SLOT*) should preferably be used for power measurements (power control).

- Representation of channel power versus slots of a 3GPP FDD signal frame

  In this case, the power of a selectable code channel is indicated versus a frame. The power is always measured within one slot (PCG) of the selected channel. Power control is assumed to take time at the start of the pilot symbols of the previous slots.
  If code channels contain a timing offset, the start of a specific slot of the channel differs from the start of the reference channel (CPICH). Timing offsets, counted from the start of a 3GPP FDD frame, can be as long as one complete frame. The display shows the relationship: The grid of the power versus slot diagram represents the CPICH slots. The bar graphs, containing the slot power information, are plotted shifted by the timing offset. Thus, the timing offset of the channels can directly be read from the diagram.

The code domain error is displayed analogously to code domain power at a spreading factor of 512 in a bar graph diagram.

For all measurements performed in a slot of a selected channel (bits, symbols, symbol power, EVM), the actual slot spacing of the channel is taken as a basis.

The composite EVM, peak code domain error and composite constellation measurements are always referenced to the total signal.

For code domain power (CDP) measurements, the display is operated in the *SPLIT SCREEN* mode. Only those display modes showing the code domain power of all channels (*CODE PWR RELATIVE*, *CODE PWR ABSOLUTE*, *CHANNEL TABLE*) are permitted in the upper part of the screen; all other display modes are assigned to the lower part of the screen.

FS-K72/K74 expects the following synchronization channels for the code domain power measurements:

- Primary common control physical channel (PCCPCH). This channel must always be contained in the signal.
- Primary synchronization channel (PSCH).
- Secondary synchronization channel (SSCH).
- Common pilot channel (CPICH). This channel is optional. If it is not contained in the signal configuation, the firmware application FS-K72/K74 must be switched to *SYNC TYPE SCH* (see softkeys).

There are two modes for CDP analysis: *CODE CHAN AUTOSEARCH* and *CODE CHAN PREDEFINED*. FS-K72 and FS-K74 differ in both modes:
hen operated in *CODE CHAN AUTOSEARCH* mode, FS-K72 performs an automatic search for active channels (DPCH) throughout the entire code domain. The search is based on the presence of known symbol sequences (pilot sequences) in the despread symbols of a channel. Channels without or with incomplete pilot sequences cannot be detected as being active in this mode. In the *AUTOSEARCH* mode, only the special channel PICH can be detected as active, even though it does not contain pilot symbols. In the *CODE CHAN PREDEFINED* mode, the user can define the active channels included in the signal via tables that can be selected and edited. For these channels, a channel search by comparison with pilot sequences is no longer performed. In this mode, special channels without pilot sequences (which should be in the code domain however) can therefore be taken into account by FS-K72 for CDP analysis.

When operated in *CODE CHAN AUTOSEARCH* mode, FS-K74 performs an automatic search for channels throughout the entire code domain. This search is not based on the presence of any known symbol sequences. Therefore, with FS-K74, channels of High Speed Data Packet Access (HSDPA) that do not contain pilot sequences can be detected as well. Additionally, the possibility of different modulation types within the channels is taken into account. Thus, channels with a modulation type differing from the usual QPSK of DPCH are properly measured as well. In mode *CODE CHAN PREDEFINED*, the channels contained in the signal are considered as predefined analogously to FS-K72. Only the modulation type of each channel will be measured by the firmware application.

Display Mode – *RESULTS* hotkey

RESULTS hotkey

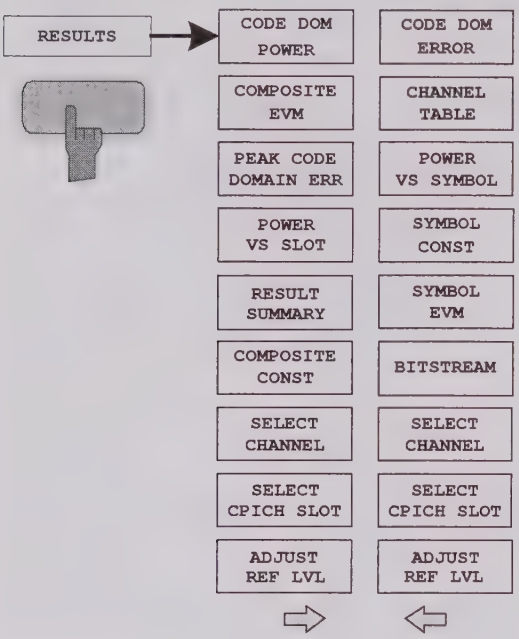

The *RESULTS* hotkey opens a submenu for setting the display mode. The main menu contains the most important display modes as well as the measurements specified by the 3GPP standard for fast access, whereas the side menu contains more detailed display modes.

The following display modes are available:

CODE DOM POWER
Code domain power (screen A).

COMPOSITE EVM
Square difference between test signal and ideal reference signal at the chip level (screen B).

PEAK CODE DOMAIN ERR
Projection of the error between the test signal and the ideal reference signal onto the spreading factor of code class 8 and subsequent averaging using the symbols of each slot of the difference signal. The maximum value of all codes is displayed versus the CPICH slot number (screen B).

POWER VS SLOT
Power of the selected channel versus all slots of a 3GPP FDD signal frame (screen B).

RESULT SUMMARY
Tabular result display (screen B).

COMPOSITE CONST
Constellation diagram of descrambled chips (screen B).

CODE DOM ERROR
Projection of the error power between the test signal and the ideal reference signal onto the spreading factor of the highest code class (CC = 9) and subsequent averaging using the symbols of the selected channel slot of the difference signal. The error power is displayed versus all codes of code class 9 (screen A).

CHANNEL TABLE
Display of channel occupancy table (screen A).

POWER VS SYMBOL
Display of symbol power at the selected slot (screen B).

SYMBOL CONST
Display of constellation diagram (screen B).

SYMBOL EVM
Display of error vector magnitude diagram (screen B).

BITSTREAM
Display of the determined bits (screen B)

SELECT CHANNEL
Marking of channel for the following display modes
POWER VS SLOT,

RESULT SUMMARY
POWER VS SYMBOL,
SYMBOL CONST,
SYMBOL EVM,
BITSTREAM.

SELECT CPICH SLOT Selection of CPICH SLOTS in a frame for display of

CODE DOMAIN POWER
PEAK CODE DOMAIN ERROR
RESULT SUMMARY
COMPOSITE CONS,
CODE DOMAIN ERROR POWER
CHANNEL TABLE
POWER VS SYMBOL
SYMBOL CONST
SYMBOL EVM
BITSTREAM

ADJUST REF LVL
Optimum adaptation of the reference level in the instrument to the signal level.

The most important measurement settings which form the basis of the display modes are summarized above the diagram:



Fig. 6-7 Indication of measurement parameters

The different elements are:
1st column:

Code Power Relative:	Name of selected display mode
{empty}	
CF 2.11 GHz:	Center frequency of signal

2nd column:

{empty}	
{empty}	
CPICH Slot 4:	CPICH slot number (value of SELECT CPICH SLOT softkey)

3rd column:

SR 30 ksps:	Symbol rate of selected channel
Chan Code 69:	Spreading code of selected channel
Chan Slot 11:	Slot number of selected channel

Note: *For the peak code domain error display mode, the indication of the symbol rate is replaced by the indication of the spreading factor onto which the error is projected (see PEAK CODE DOMAIN ERR softkey)*

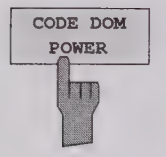

The *CODE DOM POWER* softkey selects the code domain power display mode.

The scaling of the displayed result depends on the softkey SETTINGS → CODE PWR ABS / REL. In the case of a relative display (REL), the power of the channels is refererenced to a reference power of the selected slot. The values are specified in dB. In the case of an absolute display (ABS), the absolute power values are specified in dBm.

In default mode, the power of the channels is referenced to the CPICH power (SETTINGS → POWER REF → CPICH). This power reference was selected since the total power may vary depending on the slot due to the capability to control the power in the different code channels. In contrast to the variable total power, the power of the CPICH is the same in all slots so that it can form the constant reference for the display. The reference can be switched to total power by selecting SETTINGS → POWER REF → TOT.

The measurement interval for determining the power of the channels is a slot in the CPICH (corresponding to a timing offset of 0 chips refererenced to the beginning of the signal frame).

The powers of the active channels and of the unassigned codes are shown in different colours:

- yellow: active channels
- blue: unassigned codes

If the analyzer is equipped with FS-K72 and operated in *CODE CHAN AUTOSEARCH* (automatic channel search mode) mode, a data channel is considered to be active if the pilot symbols as specified by the 3GPP standard are found at the end of each slot. In this mode, channels without pilot symbols are therefore not recognized by FS-K72. An exception to this rule is seen in the special channels PICH and SCCPCH, which can be recognized as active in the automatic search mode although they do not contain pilot symbols. In addition, the channel must exceed a minimum power (see INACT CHAN THRESHOLD softkey).
In *CODE CHAN PREDEFINED* mode, each data channel that is included in the user defined channel table is considered to be active.

If the analyzer is additionally equipped with FS-K74, all channels that meet special quality criteria are recognized as active. The detection of channels does not depend on pilot sequences or other previously known symbol sequences in FS-K74. An active channel merely has to exceed a minimum power (see INACT CHAN THRESHOLD softkey).

In the case of an analyzer equipped with FS-K72, the effect of missing or incomplete pilot symbols in a data channel can be shown in the CDP diagram by operating in analyzer mode *CODE CHANNEL AUTOSEARCH*. At the points of the CDP diagram where the channel should appear due to its spreading code, a power value higher than the noise occurs. The associated bars, however, are displayed in blue (black in the figure). In such a case, the channel should be checked for its pilot symbols. In *CODE CHANNEL PREDEFINED* mode, the channel should be included in the user-defined channel table.

If the analyzer is additionally equipped with FS-K74, channels without pilot sequences are also recognized as active if they meet special quality criteria.

The following figures show how the CDP is displayed when all active channels contained in the signal have been found (analyzer equipped with FS-K72).

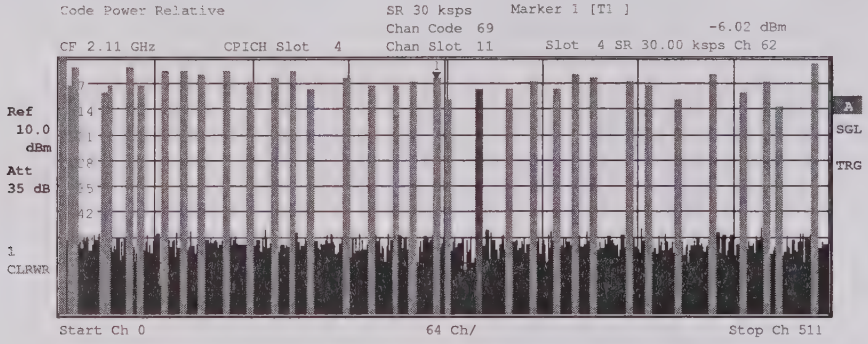

Fig. 6-8 CDP diagram with all channels recognized as active

In the CDP diagram, the effect of missing or incomplete pilot symbols in a data channel can be shown in analyzer mode *CODE CHANNEL AUTOSEARCH*. At the points of the CDP diagram where the channel should appear due to its spreading code, a power value higher than the noise occurs. The associated bars, however, are displayed in blue. In such a case, the channel should be checked for its pilot symbols. In *CODE CHANNEL PREDEFINED* mode, the channel should be included in the user-defined channel table.

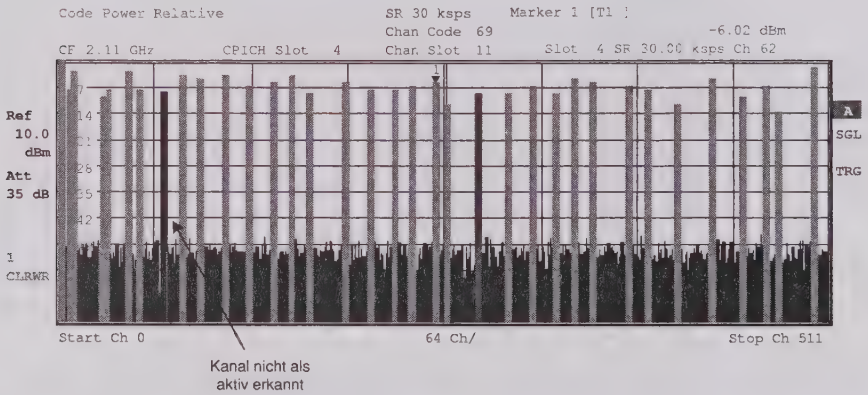

Fig. 6-9 CDP diagram with one of the channels recognized as inactive

If some of the DPCH contains incorrect pilot symbols, these channels are marked with the color magenta, and a message "INCORRECT PILOT" is displayed. The incorrect pilot symbol can be determined by using the POWER VS SLOT and the BITSTREAM display.

Fig. 6-10 CDP diagram with some channels including an incorrect pilot sequence.

In the case of an analyzer equipped with FS-K74, channels without pilot symbols, e.g. channels of type HS-PDSCH, are recognized as active. The following figure shows test model 5 with eight HS-PDSCH channels and 30 DPCH channels.

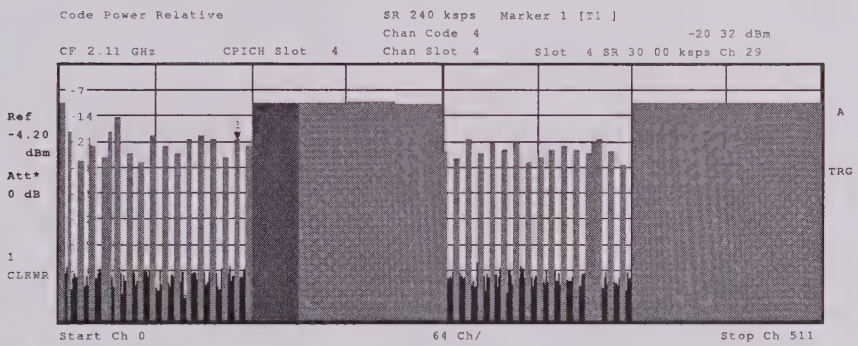

Fig. 6-11 CDP diagram for test model 5

By entering a channel number (see *SELECT CHANNEL* softkey), it is possible to mark a channel for more detailed display modes. The marked channel is shown in red. The entire channel is marked if it is an assigned channel; only the entered code is marked in the case of an unassigned code.
Selecting other display modes (e.g. SYMBOL CONSTELLATION) for unassigned codes is possible but irrelevant since the results are not valid.

IEC/IEEE bus command:
```
:CALCulate<1>:FEED "XPOW:CDP"
:CALCulate<1>:FEED "XPOW:CDP:ABS"
:CALCulate<1>:FEED "XPOW:CDP:RAT"
```

The *COMPOSITE EVM* softkey selects the composite EVM (modulation accuracy) display mode according to the 3GPP specification.

During the composite EVM measurement, the square root of the squared errors between the real and imaginary components of the test signal and an ideal reference signal (EVM refererenced to the total signal) is determined. Thus, composite EVM is a measurement of the composite signal.

The measurement result consists of one composite EVM measurement value per slot. In this case, the measurement interval is the slot spacing of the CPICH (timing offset of 0 chips referenced to the beginning of the frame).

Only the channels recognized as active are used to generate the ideal reference signal. If an assigned channel is not recognized as active since pilot symbols are missing or incomplete, the difference between the measurement and reference signal and the composite EVM is very high (see figures).

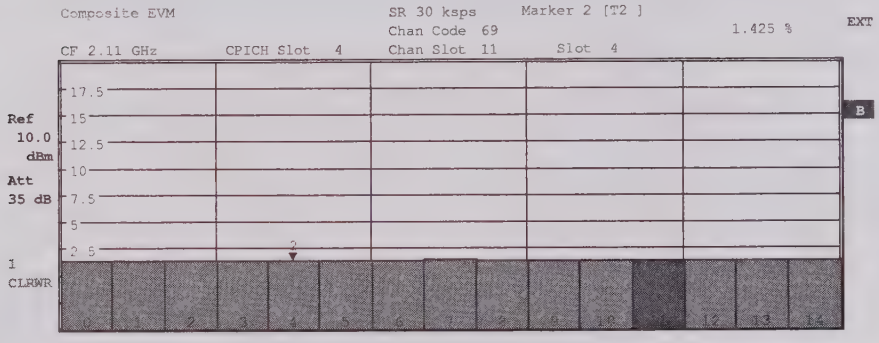

Fig. 6-12 Composite EVM - all channels are recognized as active

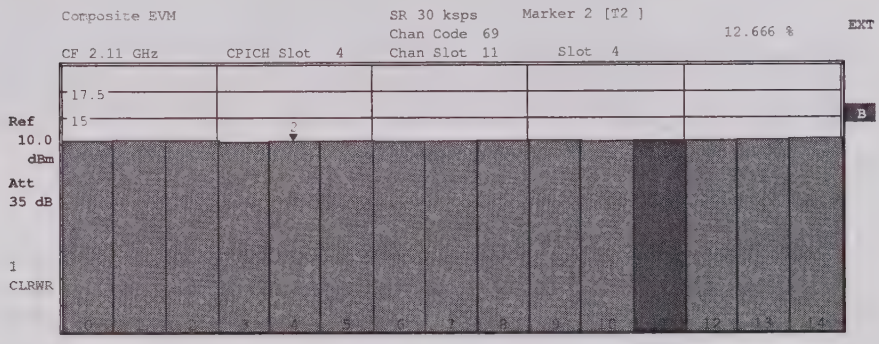

Fig. 6-13 Composite EVM - one channel is recognized as inactive

IEC/IEEE bus command: `:CALCulate2:FEED "XTIM:CDP:MACCuracy"`

The *PEAK CODE DOMAIN ERR* softkey selects the peak code domain error display mode.

In line with the 3GPP specifications, the error between the measurement signal and the ideal reference signal is projected onto the various spreading factors. The desired spreading factor is selected by a table which is opened when the softkey is activated.

The result consists of one numerical value per slot for the peak code domain error value. The measurement interval is the slot spacing of the CPICH (timing offset of 0 chips referenced to the beginning of the frame).

Only the channels recognized as active are used to generate the ideal reference signal for the peak code domain error. If an assigned channel is not recognized as active since pilot symbols are missing or incomplete, the difference between the measurement and reference signal is very high. FS-K72/K74 consequently indicates a peak code domain error that is too high (see figures).

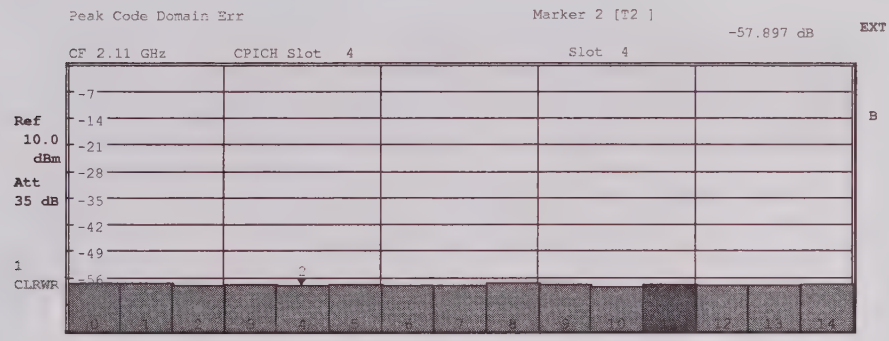

Fig. 6-14 Peak domain error - all channels are recognized as active

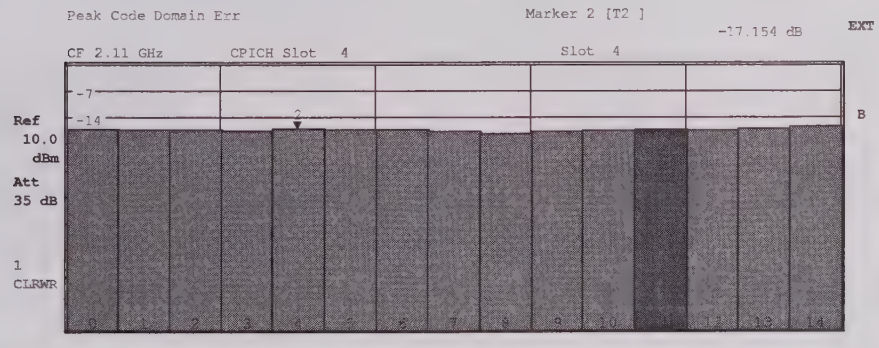

Fig. 6-15 Peak domain error - one channel is not recognized as active

IEC/IEEE bus command: `:CALCulate2:FEED "XTIM:CDP:ERR:PCDomain"`

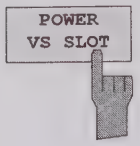

The *POWER VS SLOT* softkey selects the indication of the power of the selected code channel depending on the slot number. The power of the selected channel (marked red in the CDP diagram) is displayed versus all slots of a frame of the 3GPP FDD signal.

Fifteen (15) slots of a WCDMA frame are displayed. When the power is averaged versus the symbols of a slot, the time of the power control is assumed to be at the beginning of the pilot symbols of the previous slot (power group).
The following has to be taken into account: Due to the timing offset (up to one frame) admissible for the channels, the beginning of slot 0 of the selected channel is shifted with reference to the start of the frame (reference: CPICH slot 0). The timing offset therefore also has to be applied to the power-versus-slot display. To show the correlation between timing offset and CDP analysis in the diagram, the X axis reflects the slot spacing of the channel as well as of the CPICH.

- The grid of the power-versus-slot display reflects the spacing of the CPICH slots. The slots are always labelled at the grid line where the slot in question begins (top labelling of x axis in diagram). The first CPICH slot is always slot 0. The grid and the labels of the grid lines thus do not change.
- Shifted by the timing offset, the power versus channel slots are entered in a bar graph. The slot numbers of the channel are labelled within the bar associated with the slot. The position of the bars in relation to the grid and the slot numbering within the bar vary as a function of the timing offset of the channel selected.

The following figure shows a channel with power control (power decrease of 2 dB for each slot). Since the channel has a timing offset (22528 chips), the display does not start with slot 0 of the channel but is shifted by the timing offset. The slot that is marked red is the selected CPICH slot. As shown in the display, the CPICH slot covers two adjacent slots:

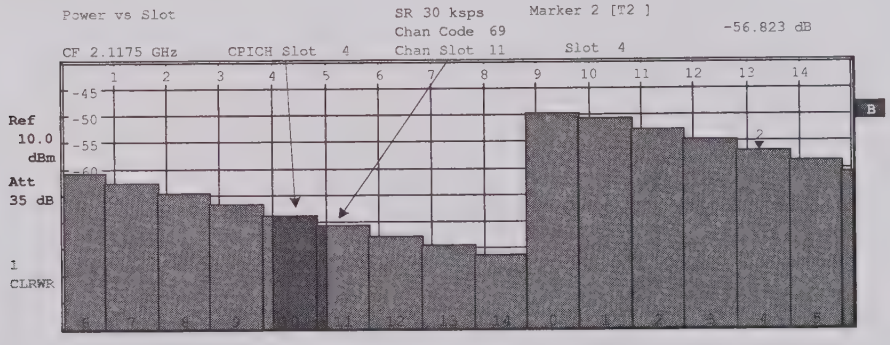

Fig. 6-16 Power versus slot for a channel with power control (timing offset 22528 chips)

It is not only possible to select a code channel in the CDP diagram, but also to mark a slot in the power-versus-slot diagram. Marking is done by entering the CPICH slot number (see *SELECT CPICH SLOT* softkey) and the selected CPICH slot is marked in red. If the channel displayed has a timing offset with respect to the CPICH, the marked slot is usually shifted against the slot grid of the channel, i.e. the red marking of a slot covers two of the bars below. The timing offset can be directly read from the shifting. For more detailed displays, the slot of the channel is selected that starts within the red slot marking (see CHAN SLOT entry in the function panels above the diagrams in the figures).

Modifying a slot number has the following effects:

- The CDP diagram in the upper half of the display is updated relative to the entered CPICH slot number.
- Starting from the CPICH slot, all dependent results are calculated for the

actual slot of the selected channel. The relevant graphics are updated. The slot of the channel that starts within the CPICH slot displayed in red is considered marked.

If one of the channel slots of a DPCH contains incorrect pilot symbols, these symbols are indicated in the color magenta (figure below). By selecting this slot by *SELECT CPICH Slot*, the incorrect pilot symbol can be evaluted in the "Bitstream" display.

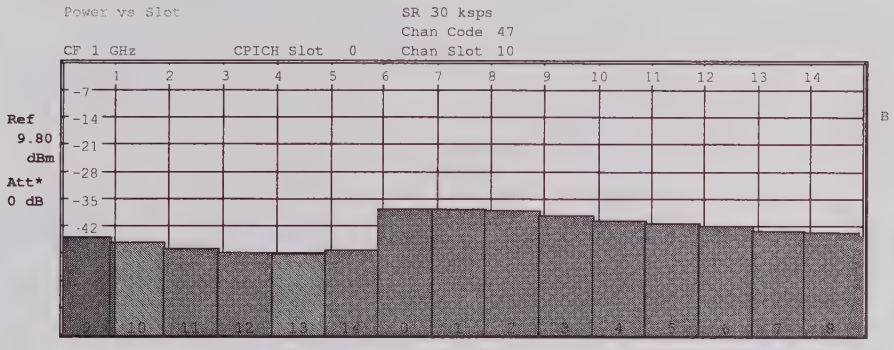

Fig. 6-17 Power versus slot for a channel with incorrect pilot symbols at channel slots 10 and 13.

IEC/IEEE bus command: `:CALCulate2:FEED "XTIM:CDP:PVSLot"`

The *RESULT SUMMARY* softkey selects the numeric display of all results. The display is subdivided as follows:

Result Summary — SR 240 ksps, Chan Code 4, Chan Slot 0
CF 2.11 GHz — CPICH Slot 0

	GLOBAL RESULTS			
	Total Power	-14.79 dBm	Carrier Freq Error	1.63 Hz
Ref	Chip Rate Error	-0.01 ppm	Trigger to Frame	1.405356 µs
-4.20 dBm	IQ Offset	0.49 %	IQ Imbalance	0.07 %
Att*	Composite EVM	1.90 %	Pk CDE (15 ksps)	-55.70 dB
0 dB	CPICH Slot No	0	No of Active Chan	44
	CHANNEL RESULTS			
	Symbol Rate	240.00 ksps	Timing Offset	0 Chips
	Channel Code	4	Channel Slot No	0
1 CLRWR	No of Pilot Bits	0	Modulation Type	16QAM
	Channel Power Rel	-10.95 dB	Channel Power Abs	-25.74 dBm
	Symbol EVM	5.16 % rms	Symbol EVM	8.65 % Pk

B

Fig. 6-18 Result summary

The upper part contains the results for the total signal:

Total Power: Outputs the total signal power (average power of total evaluated 3GPP FDD frame).

Carrier Freq Error: Outputs the frequency error relative to the center frequency of the analyzer. The absolute frequency error is the sum of the analyzer and DUT frequency error. The specified value is averaged via one slot; the frequency offset of the slot selected under SELECT CPICH SLOT applies.
The maximum frequency error that can be compensated is specified in the table below as a function of the sync mode. Transmitter and receiver should be synchronized as far as possible (see chapter 2, Getting Started).

Table 6-1: Maximum compensated frequency error

SYNC TYPE	ANTENNA DIV	Max. Freq. Offset
CPICH	X	5.0 kHz
SCH	OFF	1.6 kHz
SCH	ANT 1	330 Hz
SCH	ANT 2	330 Hz

Chip Rate Error: Outputs the chip rate error in ppm.
As a result of a high chip rate error, symbol errors arise and the CDP measurement is possibly not synchronized to the 3GPP FDD signal. The result is valid even if synchronization of the analyzer and signal failed.

Trigger to Frame: This result outputs the time difference between the beginning of the recorded signal section to the start of the analyzed 3GPP FDD frame. In the case of triggered data collection, this difference is identical with the time difference of frame trigger (+ trigger offset) – frame start. If synchronization of the analyzer and W-CDMA signal fails, the value of Trigger to Frame is not significant.

IQ Offset: DC offset of signals in %

IQ Imbalance: I/Q imbalance of signal in %

Composite EVM: The composite EVM is the difference between the test signal and the ideal reference signal (see *COMPOSITE EVM* softkey).

The composite EVM value for the selected slot is specified in the *RESULT SUMMARY*.

Pk CDE: The *PEAK CODE DOMAIN ERROR* measurement specifies a projection of the difference between the test signal and the ideal reference signal onto the selected spreading factor (see *PEAK CODE DOMAIN ERR* softkey). The Pk CDE value for the selected slot is indicated in the *RESULT SUMMARY*. The spreading factor onto which projection is made is shown beneath the measurement result.

CPICH Slot No: Outputs the number of the CPICH slot at which the measurement is performed (see *SELECT CPICH SLOT* softkey).

No of Active Chan:
Indicates the number of active channels detected in the signal. Both the detected data channels and the control channels are considered active channels.

The results of measurements on the selected channel (red in the diagram) are displayed in the lower part of the RESULT SUMMARY.

Symbol Rate: Symbol rate at which the channel is transmitted.

Timing Offset: Offset between the start of the first slot in the channel and the start of the analyzed 3GPP FDD frame.

Modulation Type : Modulation type of an HSDPA channel. High speed physical data channels can be modulated with QPSK or 16QAM modulation. The modulation type is measured only if the HSDPA option (K74) is installed.

Channel Code: Number of the spreading code of the selected channel.

Channel Slot No: The channel slot number is obtained by combining the value of the *SELECT CPICH SLOT* softkey and the channel's timing offset.

No of Pilot Bits: Number of pilot bits of the selected channel.

Chan Pow rel. / abs.:
Channel power, relative (referenced to CPICH or total signal power) and absolute.

Symbol EVM Pk / rms:
Peak or average of the results of the error vector magnitude measurement (see SYMBOL EVM softkey). The measurement provides information on the EVM of the channel (marked red) in the CDP diagram in the slot (marked red) of the power-versus-slot diagram at the symbol level.

IEC/IEEE bus command:

```
:CALCulate2:FEED "XTIM:CDP:ERR:SUMM"
:CALCulate<1|2>:MARKer<1>:FUNCtion:WCDPower:RESult?
        PTOTal | FERRor | TFRame | TOFFset | MACCuracy |
        PCDerror | EVMRms | EVMPeak | CERRor | CSLot |
        SRATe | CHANnel | CDPabsolute | CDPRelative |
        IQOFfset | IQIMbalance | MTYPe
```

COMPOSITE CONSTELLATION:
Display of constellation diagram for the chips of all channels. The displayed constellation points are normalized with the square root of the total power.

Value range:
$Z = [0...2.5] \cdot (\pm 1 \pm j)$

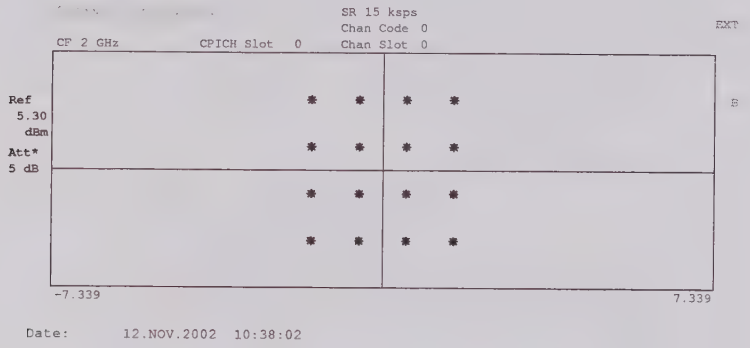

Fig. 6-19 Composite constellation diagram

IEC/IEEE bus command: `:CALCulate<1>:FEED "XTIM:CDP:COMP:CONStellation"`

Query of result: :TRACe<1>:DATa? TRACe2

Output:	List of I/Q values of all chips per slot
Format:	$Re_1, Im_1, Re_2, Im_2, ..., Re_{2560}, Im_{2560}$
Unit:	[1]
Quantity:	2560

The *CODE DOM ERROR* softkey displays the code domain error power (CDEP) versus the code channels of code class 9. The error power is always referenced to the total power.

The code domain error power (CDEP) is calculated by subtracting the received chips ($chip_{rec}$) from a chip-stream of a generated reference signal ($chip_{ref}$). This difference or error signal is despread to all (512) code channels of CC9 ($Dspr_n$). The average power of the error signal of each CC9 code channel is relative to the total power of the selected slot. The measurement interval for determining the CDEP of the channels is a slot in the CPICH (corresponding to a timing offset of 0 chips referenced to the beginning of the signal frame).

The powers of the active channels and of the unassigned codes are shown in different colours:

- yellow: active channels
- blue: unassigned codes

The CDEP is calculated for each channel of code class 9 (CC9). In the case of active or inactive channels, only the color is changed. In contrast to the code domain power measurement, the code domain error power of active channels is not subsumed to a common value.
By entering a channel number (see *SELECT CHANNEL* softkey), it is possible to mark a channel for more detailed display modes. The marked channel is shown in red. Only the first CC9 code channel of an assigned channel is marked.

In the case of a correct WCDMA signal, the code domain error power (CDEP) of all CC 9 channels should be equal. The maximum error power of a channel should not be much higher than the average noise.

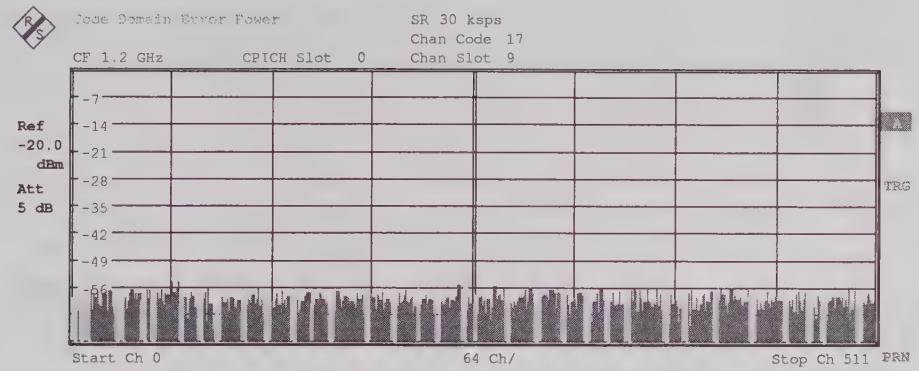

Fig. 6-20 Code domain error display of a correct WCDMA signal

In the case of an incorrect WCDMA signal, the code domain error power (CDEP) of the affected channel is much higher than the average error power. It can be determined at which code number the error occurs.

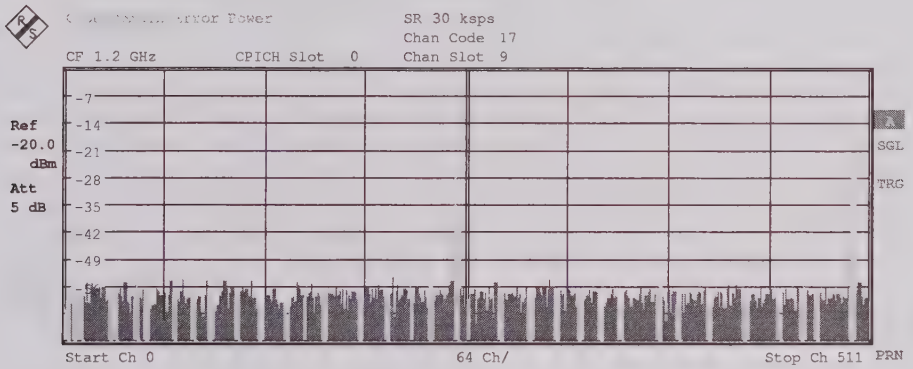

Fig. 6-21 Code domain error display of an incorrect WCDMA signal

IEC/IEEE bus command: `:CALCulate<1>:FEED "XPOWer:CDEP"`

Query of result: :TRACe<1>:DATa? TRACe1

Output: CDEP list of each CC9 channel

Format: <code class>$_1$, <code number>$_1$, <CDEP>$_1$, <channel flag>$_1$,
<code class>$_2$, <code number>$_2$, <CDEP>$_2$, <channel flag>$_2$,
,....,
<code class>$_{512}$, <code number>$_{512}$, <CDEP>$_{512}$, <channel flag>$_{512}$

Unit: < [1] >, < [1] >, < [dB] >,< [1] >

Range: < 9 > , < 0...511 >, < -∞ ... ∞ >, < 0 ; 1 ; 3>

Quantity: 512

Code class: Highest code class of a WCDMA signal is always set to 9 (CC9)

Code number: Code number of the evaluated CC9 channel

CDEP: Code domain error power value of the CC9 channel

Channel flag: Denotes whether the CC9 channel belongs to an assigned code channel or not:

Range:			
	0b00	0d0	- CC9 is inactive
	0b01	0d1	- CC9 channel belongs to an active code channel
	0b11	0d3	- CC9 channel belongs to an active code channel with incorrect transmitted pilot symbols

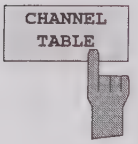

The *CHANNEL TABLE* softkey selects the display of the channel assignment table. The channel assignment table can contain a maximum of 512 entries, corresponding to the 512 codes that can be assigned within the class of spreading factor 512.

The upper part of the table indicates the channels that have to be present in the signal to be analyzed:

CPICH: The **C**ommon **P**ilot **Ch**annel is used to synchronize the signal in the case of CPICH synchronization. It is expected at code class 8 and code number 0.

PSCH: The **P**rimary **S**ynchronization **Ch**annel is used to synchronize the signal in the case of SCH synchronization. It is a nonorthogonal channel. Only the power of this channel is determined.

SSCH: The **S**econdary **S**ynchronization **Ch**annel is a nonorthogonal channel. Only the power of this channel is determined.

PCCPCH: The **P**rimary **C**ommon **C**ontrol **P**hysical **Ch**annel is also used to synchronize the signal in the case of SCH synchronization. It is expected at code class 8 and code number 1.

SCCPCH: The **S**econdary **C**ommon **C**ontrol **P**hysical **Ch**annel is a QPSK-modulated channel without any pilot symbols. In the 3GPP test models, this channel can be found in code class 8 and code number 3. However, the code class and code number need not to be fixed and can vary. For this reason, the following rules are used to inidicate the SCCPCH.

K72:
- Only one QPSK-modulated channel without pilot symbols is detected and displayed as the SCCPCH. Any further QPSK-modulated channels without pilot symbols are not detected as active channels.
- If the signal contains more than one channel without pilot symbols, the channel that is received in the highest code class and with the lowest code number is displayed as the SCCPCH. It is expected that only one channel of this type is included in the received signal. According to this assumption, this channel is probably the SCCPCH

K74:
- All QPSK-modulated channels without pilot symbols are detected. If one of these channels is received at code class 8 and code number 3, it is displayed as the SCCPCH. Any other QPSK-modulated channels without pilot symbols and a code class higher than or equal to 7 are marked with the channel type CHAN. All further QPSK-modulated channels without pilot symbols and a code class lower than 7 are marked with channel type HSPDSCH.

PICH: The **P**aging **I**ndication **Ch**annel is expected at code class 8 and code number 16.

The lower part of the table indicates the data channels contained in the signal. A data channel is any channel that does not have a predefined channel number and symbol rate. There are different types of data channels, which can be indicated by the entry in the column "Chan Type":

DPCH: The **D**edicated **P**hysical **Ch**annel is a data channel that contains pilot symbols. The displayed channel type is DPCH.

Chan Type:	DPCH	
Status:	inactive	channel is not active
	active	channel is active and all pilot symbols are correct
	pilotf	channel is active but it contains incorrect pilot symbols

HS-PDSCH The **H**igh **S**peed **P**hysical **D**ownlink **S**hared **C**hannel (HSDPA) does not contain any pilot symbols. It is a channel type that is expected in code classes lower than 7. The modulation type of these channels

can be varied depending on the selected slot.

Chan Type: HSPDSCH-QPSK_ QPSK-modulated slot of an HS-PDSCH channel
HSPDSCH-16QAM_ 16QAM-modulated slot of an HS-PDSCH channel
HSPDSCH-NONE_ slot without power of an HS-PDSCH channel

Status: inactive channel is not active
active channel is active

HS-SSCH The **H**igh **S**peed **S**hared **C**ontrol **Ch**annel (HSDPA) does not contain any pilot symbols. It is a channel type that is expected in code classes equal to or higher than 7. The modulation type should always be QPSK. The channel does not contain any pilot symbols.

Chan Type: CHAN_ QPSK-modulated channel without any pilot symbols

Status: inactive channel is not active
active channel is active

If the analyzer is equipped with FS-K74, the channels of HSDPA will be found among the data channels. If the type of a channel can be fully recognized, as for example with a DPCH (based on pilot sequences) or HS-PDSCH (based on modulation type), the type will be entered in the field *TYPE*. All other channels without pilot symbols are of type CHAN. The channels are in descending order according to symbol rates and, within a symbol rate, in ascending order according to the channel numbers. Therefore, the unassigned codes are always to be found at the end of the table.
If the modulation type for a channel can vary, the measured value of the modulation type will be appended to the type of the channel.

The following figures show the channel table for two cases:

Channel Table SR 30 ksps
Chan Code 69
CF 2.11 GHz CPICH Slot 4 Chan Slot 11

Channel Table

	Type	Symb Rate	Chan#	Status	TFCI	PilotL	Pwr Abs	Pwr Rel	T Offs	
Ref	CPICH	15.0 ksps	0	active	---	---	-10.70	0.00	---	A
10.0	PSCH	-.- ksps	---	active	---	---	-13.69	-2.99	---	SGL
dBm	SSCH	-.- ksps	---	active	---	---	-13.72	-3.02	---	
Att	PCCPCH	15.0 ksps	1	active	---	---	-10.70	-0.00	---	TRG
35 dB	SCCPCH	15.0 ksps	3	active	ON	8	-18.71	-8.01	0	
	PICH	15.0 ksps	16	active	---	---	-18.67	-7.97	30720	
	DPCH	30.0 ksps	69	active	ON	8	-19.68	-8.98	22528	
1	DPCH	30.0 ksps	74	active	ON	8	-19.72	-9.02	16640	
CLRWR	DPCH	30.0 ksps	78	active	ON	8	-17.71	-7.01	7680	
	DPCH	30.0 ksps	82	active	ON	8	-19.71	-9.01	9472	

Fig. 6-22 Channel table of FS-K72 and measuring test model 1.

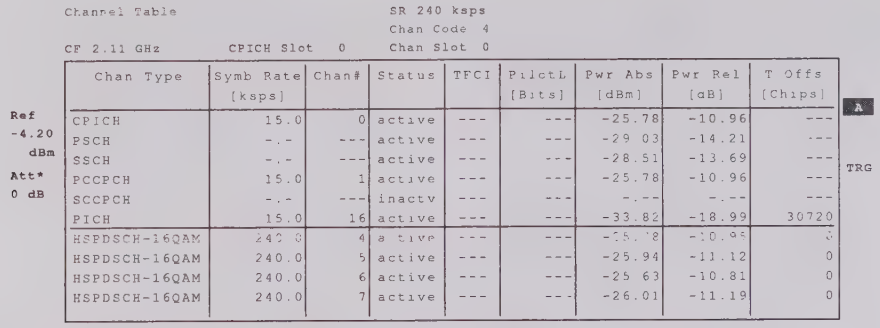

Chan Type	Symb Rate [ksps]	Chan#	Status	TFCI	PilotL [Bits]	Pwr Abs [dBm]	Pwr Rel [dB]	T Offs [Chips]
CPICH	15.0	0	active	---	---	-25.78	-10.96	---
PSCH	-.-	---	active	---	---	-29.03	-14.21	---
SSCH	-.-	---	active	---	---	-28.51	-13.69	---
PCCPCH	15.0	1	active	---	---	-25.78	-10.96	---
SCCPCH	-.-	---	inactv	---	---	-.--	-.--	---
PICH	15.0	16	active	---	---	-33.82	-18.99	30720
HSPDSCH-16QAM	240.0	4	active	---	---	-25.78	-10.96	0
HSPDSCH-16QAM	240.0	5	active	---	---	-25.94	-11.12	0
HSPDSCH-16QAM	240.0	6	active	---	---	-25.63	-10.81	0
HSPDSCH-16QAM	240.0	7	active	---	---	-26.01	-11.19	0

Fig. 6-23 Channel table including HSDPA channels of FS-K74 and measuring test model 5.

The following parameters of these channels are determined by the CDP measurement:

Type: Type of channel (active channels only). If the modulation type of a channel can vary (HS-PDSCH, in the case of an analyzer equipped with FS-K74 only), the value of the modulation type measured by the firmware application will be appended to the channel type. Data channels that do not have a type that can be fully recognized are of type CHAN.

Symbol Rate: Symbol rate at which the channel is transmitted (7.5 ksps to 960 ksps).

Chan #: Number of the channel spreading code (0 to [spreading factor-1]).

Status: Status display. Unassigned codes are considered to be inactive.

TFCI: Indication whether the data channel uses TFCI symbols.

PilotL: Number of pilot bits of the channel.

Pwr Abs / Pwr Rel:
Indication of the absolute and relative channel power (referenced to the CPICH or the total power of the signal).

T Offs: Timing offset. Offset between the start of the first slot of the channel and the start of the analyzed 3GPP FDD frame.

In *CODE CHAN AUTOSEARCH MODE*, a data channel is considered to be active if the required pilot symbols (see 3GPP specification, exception: PICH) are to be found at the end of each slot. In addition, the channel should have minimum power (see *INACT CHAN THRESHOLD* softkey). In *CODE CHAN PREDEFINED* mode, all channels that are included in the user-defined channel table are marked as active.

IEC/IEEE bus command: `:CALCulate<1>:FEED "XTIM:CDP:ERR:CTABle"`

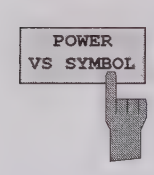

The *POWER VS SYMBOL* softkey selects the "power versus symbol" display mode.

'Power versus symbol' represents the relative symbol power in a selected channel within a selected slot. The number of symbols depends on the code class of the selected channel.

$$NOF_{Symbols} = 10 \cdot 2^{(8-CodeClass)}$$

The displayed value is the ratio of the symbol power and the reference power. The total power of the selected channel or the power of the CPICH is used as the reference power. The reference power depends on the position of the *POWER REF [TOT] / CPICH* softkey in the SETTINGS menu.

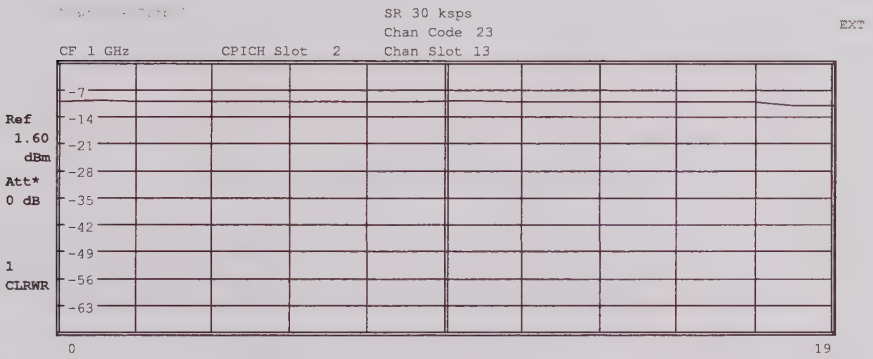

Fig. 6-24 Power versus symbol for one slot of a channel with 20 symbols

IEC/IEEE bus command: `:CALCulate<1>:FEED "XTIM:CDP:PVSYmbol"`

Query of result: `:TRACe<1>:DATa? TRACe2`

Output: List of symbol power values deviating from the reference power

Format: $Val_1, Val_2, ..., Val_{NOF}$

Unit: [dB]

Quantity: $NOF_{Symbols} = 10 \cdot 2^{(8-CodeClass)}$

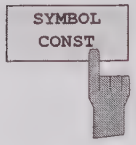

The *SYMBOL CONST* softkey selects the display of the symbol constellation diagram.
The symbols are displayed for the selected channel (red marking in the CDP diagram) and the selected slot (red marking in the power-versus-slot diagram).
It is possible to display the constellation diagram for unassigned codes (red marking in the CDP diagram for a code represented in blue), but the results are not meaningful, as the unassigned code channel does not contain data.

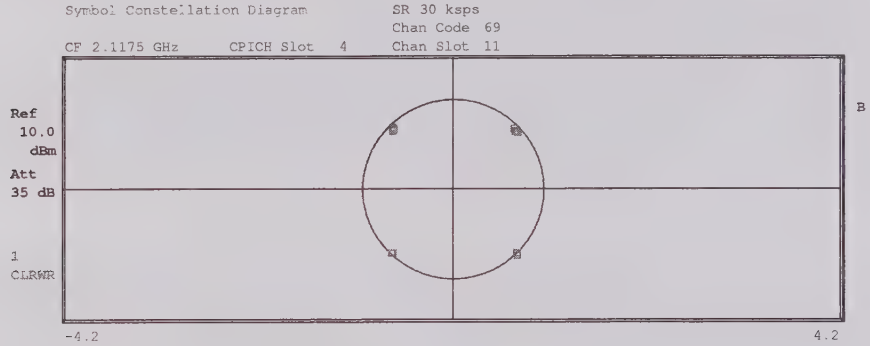

Fig. 6-25 Symbol constellation diagram

For HSDPA data channels, the modulation type can vary according to 3GPP. If the analyzer is equipped with FS-K74, this will be taken into account by switching the diagram according to the modulation type of the channel.

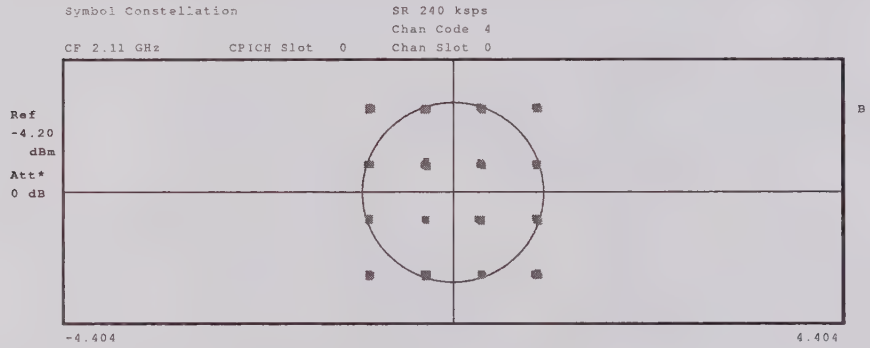

Fig. 6-26 Symbol constellation diagram for 16QAM

For orientation, the unit circle is added to the figure.

IEC/IEEE bus command: `:CALCulate2:FEED "XTIM:CDP:SYMB:CONS"`

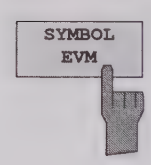

The *SYMBOL EVM* softkey activates the symbol error vector magnitude display. The EVM is displayed for the selected channel (red marking in the CDP diagram) and the selected slot (red marking in the power-versus-slot diagram).
It is possible to display the symbol error vector magnitude for unassigned codes (red marking in the CDP diagram for a code represented in blue), but the results are not valid.

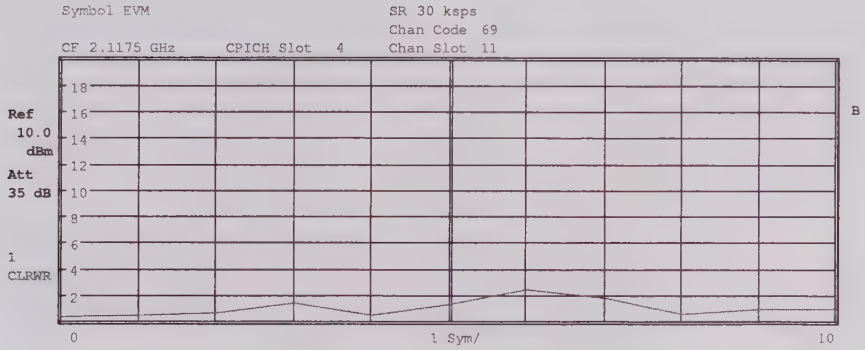

Fig. 6-27 Error vector magnitude for the selected slot of the selected channel

IEC/IEEE bus command: `:CALCulate2:FEED "XTIM:CDP:SYMB:EVM"`

The *BITSTREAM* softkey activates the bit stream display.
The determined bits are displayed for the selected channel (red marking in the CDP diagram) and the selected slot (red marking in the power-versus-slot diagram).

Depending on the channel type and the symbol rate at which the channel is transmitted, specific symbols can be "switched off" in a slot, i.e. power 0 is transmitted instead of these symbols. The results of the bit determination are invalid for such symbols. Such invalid bits are marked with "x" in the diagram.

While it is possible to display the bit stream for unused codes (red marking in the CDP diagram for a code displayed in blue), the missing data means that the results are not very informative. In this case, "-" is used to indicate that all of the bits are invalid.

In the bit stream diagram, the bits of the individual fields of active data channels are marked in different colours. The colour legend is displayed in the header of the figure.

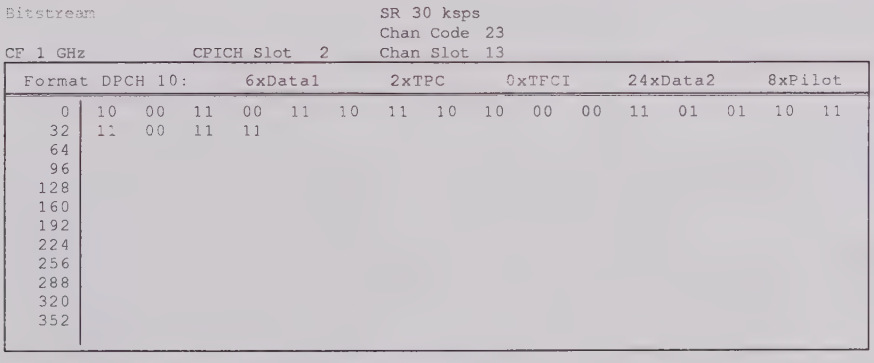

Fig. 6-28 Demodulated bits for the selected slot of the selected channel

If some of the pilot symbols of the selected slot of the DPCH are not correct, these symbols are marked with the colour magenta.

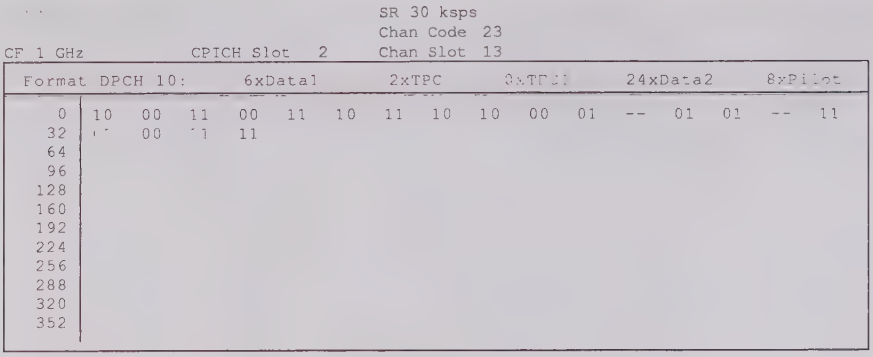

Fig. 6-29 Demodulated bits with pilot symbols

For HSDPA data channels, the modulation type can vary. Depending on the modulation type, the number of bits that belong to one symbol will change. In the case of an analyzer equipped with FS-K74, the diagram will be switched according to the modulation type of the channel.

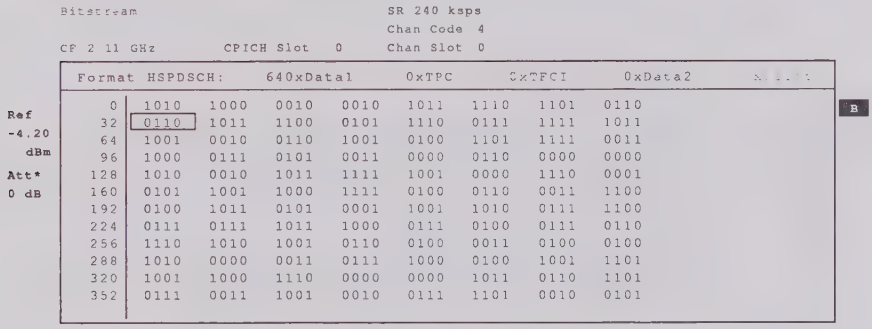

Fig. 6-30 Demodulated bits for the selected slot of the selected channel in the case of 16QAM

IEC/IEEE bus command: `:CALCulate2:FEED "XTIM:CDP:BSTReam"`

The *SELECT CHANNEL* softkey activates the selection of a channel for the display modes *CDP PWR RELATIVE/ABSOLUTE*, *POWER VS SLOT*, *SYMBOL CONST* and *SYMBOL EVM*.

There are two ways of entering the channel numbers:

- Entry of channel number and spreading factor, separated by a decimal point.

If the channel number and the spreading factor are entered simultaneously, the entered channel is selected and marked in red if an active channel is involved. For the display, the channel number entered is converted on the basis of spreading factor 512. For unused channels, the code resulting from the conversion is marked.

Example: Entry 5.128
Channel 5 is marked at spreading factor 128 (30 ksps) if the channel is active, otherwise code 20 at spreading factor 512.

- Entry of a channel number without a decimal point.

In this case, FS-K72/K74 interprets the entered code as based on spreading factor 512. If the code entered corresponds to a used channel, the entire associated channel is marked. If the code corresponds to an unused channel, only the code entered is marked.

Example: Entry 20
Code 20 is marked at spreading factor 512 if there is no active channel on this code. If for instance channel 5 is active at spreading factor 128, the entire channel 5 is marked.

If the entered code corresponds to an active channel, the entire associated channel is marked. If it corresponds to a gap between the channels, only the entered code is marked.
If the code number is modified using the rotary knob, the red marking changes its position in the diagram only if the code number no longer belongs to the marked channel. The step width of the changed rotary knob position refers to a spreading factor of 512.

IEC/IEEE bus command: `:[SENSe:]CDPower:CODE 0 to 511`

The *SELECT CPICH SLOT* softkey activates the selection of the slot number for the display modes *POWER VS SLOT*, *SYMBOL CONST*, *SYMBOL EVM* and *BITSTREAM*.

To avoid ambiguities that may occur due to the permissible timing offsets, the slot number is defined on the basis of the CPICH (i.e. calculated in steps of 2560 chips starting from the beginning of the frame). The desired slot of the selected channel has to be converted according to its timing offset.

Example: Slot 0 of the CPICH is set. The selected channel (red marker in the CDP diagram) has a timing offset of 2816 chips, i.e. slot 0 of the channel is delayed by 2816 chips with respect to the frame start. Slot 0 of the CPICH therefore corresponds to slot 14 of the last frame of the channel.
When the slot number is entered, the red marking in the power-versus-slot diagram changes its position in steps of 2560 chips.

IEC/IEEE bus command: `:[SENSe:]CDPower:SLOT 0 to 14`

The *ADJUST REF LVL* softkey adjusts the reference level of the FSU to the measured channel power. This ensures that the settings of the RF attenuation and the reference level are optimally adjusted to the signal level without overloading the FSU or limiting the dynamic range by an S/N ratio that is too small.

IEC/IEEE bus command: `SENS:POW:ACH:PRES:RLEV`

Measurement Configuration – *CHAN CONF* hotkey

CHAN CONF hotkey

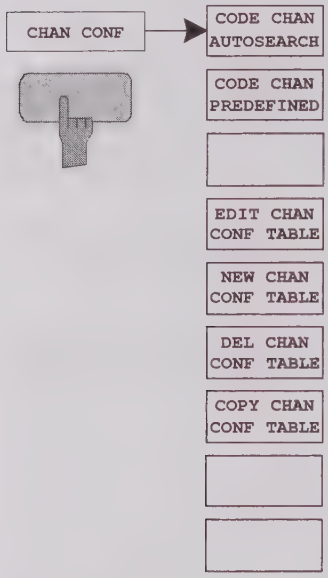

The *CHAN CONF* hotkey opens a submenu with different configurations for measurements. In this submenu, predefined channel tables can be selected as a basis for code domain measurements.

When the hotkey is selected, a table including the channel tables stored on the measuring instrument's hard disk is opened. The table merely provides an overview; a table for the measurement can be selected only after actuating the *CODE CHAN PREDEFINED* softkey.

IEC/IEEE bus command:

```
:CONFigure:WCDPower[:BTS]:CTABle:CATalog?
```

The *CODE CHAN AUTOSEARCH* softkey allows code domain power measurements in the automatic search mode. In this mode, the entire code domain (all permissible symbol rates and channel numbers) is searched for active channels. Detecting an active channel is performed by a comparison with the pilot symbols to be expected after despreading. Only channels with pilot symbols can be detected as active channels. If the pilot symbols of a channel are either missing or incomplete, the channel is not recognized as active. An exception to this rule is the special channel PICH which can be recognized as active channel also in the automatic search mode.

Synchronization channels CPICH, PCCPCH, PSCH and SSCH are assumed to be present by CDP analysis and are added to the channel table for each measurement.

The *CODE CHAN AUTOSEARCH* mode is the preset search mode when starting CDP analysis. Its main purpose is to provide the user with an overview of the channels contained in the signal. If the signal contains channels that are not detected as being active in the automatic search mode, CDP analysis can be performed with the channel configurations predefined by the user by switching to *CODE CHAN PREDEFINED* mode.

IEC/IEEE bus command:

```
CONFigure:WCDPower[:BTS]:CTABle[:STATe] OFF
```

The *CODE CHAN PREDEFINED* softkey activates the predefined channel table mode. No search for active channels in the code domain is performed in this mode, but the channels contained in a channel table defined prior to the measurement are assumed to be active. The code domain power measurement and all further evaluations are carried out for these channels.

Whe the softkey is selecting, a table containing all channel tables stored in the measuring instrument is opened. CDP analysis is switched to the predefined channel table. When the next measurement is started, the power is measured according to this mode. The last table of the automatic search mode is first taken as a basis for the measurement. This table is available under the *RECENT* entry.

Switching to one of the predefined channel tables is done by selecting the corresponding table entry and pressing one of the unit keys. Starting with the next measurement, the selected channel table is taken as a basis for the sweep. A check mark indicates the selected channel table.

In the factory-ready state, FS-K72/K74 has the following channel tables stored on the measuring instrument:

Channel model 1 to 3GPP with 16/32/64 channels
Channel model 2 to 3GPP
Channel model 3 to 3GPP with 16/32 channels
Channel model 4 containing CPICH and PCCPCH

If the analyzer is equipped with FS-K74, the following tables will be offered additionally:

Channel model 5 to 3GPP with 2/4/8 HS-PDSCH and 6/14/30 DPCH

IEC/IEEE bus command:

```
CONFigure:WCDPower[:BTS]:CTABle[:STATe] ON
CONFigure:WCDPower[:BTS]:CTABle:SELect "3GB_1_32"
```

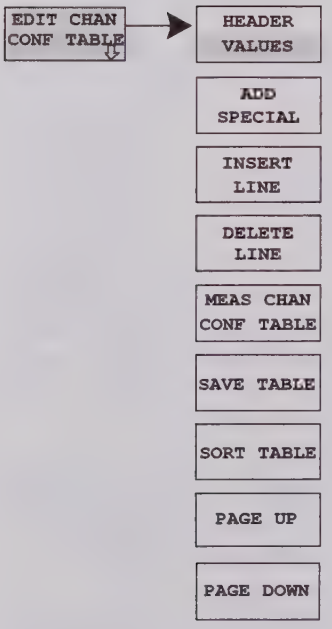

The *EDIT CHAN CONF TABLE* softkey opens a channel table in which the user can edit the channel configuration. In addition, a submenu is opened that provides access to the softkeys required for editing the table.

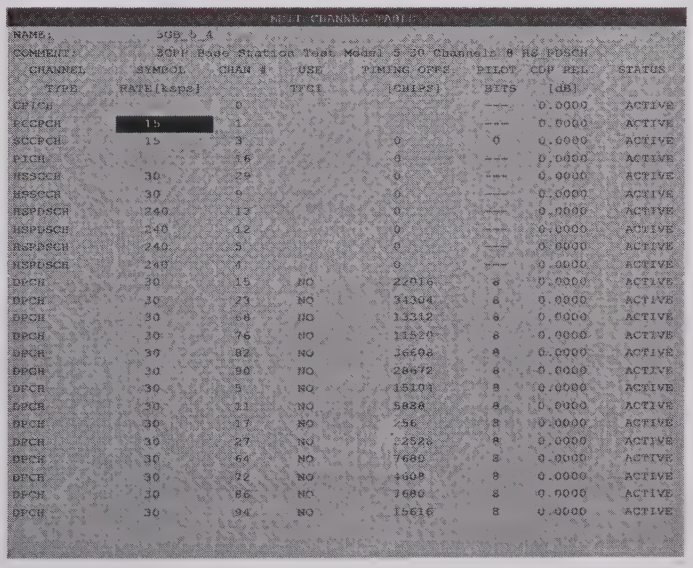
EDIT CHANNEL TABLE
NAME: 3GB_5_4
COMMENT: 3GPP Base Station Test Model 5 30 Channels 8 HS-PDSCH
CHANNEL TYPE | SYMBOL RATE[ksps] | CHAN # | USE TFCI | TIMING OFFS [CHIPS] | PILOT BITS | CDP REL [dB] | STATUS
CPICH 0 0.0000 ACTIVE
PCCPCH 15 1 0.0000 ACTIVE
SCCPCH 15 3 0 0 0.0000 ACTIVE
PICH 16 0 0.0000 ACTIVE
HSSCCH 30 29 0 0.0000 ACTIVE
HSSCCH 30 9 0 0.0000 ACTIVE
HSPDSCH 240 13 0 0.0000 ACTIVE
HSPDSCH 240 12 0 0.0000 ACTIVE
HSPDSCH 240 5 0 0.0000 ACTIVE
HSPDSCH 240 4 0 0.0000 ACTIVE
DPCH 30 15 NO 22016 8 0.0000 ACTIVE
DPCH 30 73 NO 34304 8 0.0000 ACTIVE
DPCH 30 68 NO 13312 8 0.0000 ACTIVE
DPCH 30 76 NO 11520 8 0.0000 ACTIVE
DPCH 30 82 NO 36608 8 0.0000 ACTIVE
DPCH 30 90 NO 28672 8 0.0000 ACTIVE
DPCH 30 5 NO 15104 8 0.0000 ACTIVE
DPCH 30 11 NO 5888 8 0.0000 ACTIVE
DPCH 30 17 NO 256 8 0.0000 ACTIVE
DPCH 30 27 NO 2528 8 0.0000 ACTIVE
DPCH 30 64 NO 7680 8 0.0000 ACTIVE
DPCH 30 72 NO 4608 8 0.0000 ACTIVE
DPCH 30 86 NO 7680 8 0.0000 ACTIVE
DPCH 30 94 NO 15616 8 0.0000 ACTIVE

Fig. 6-31 Table for editing a channel configuration

Basically, any channel table stored on the instrument's hard disk can be edited as required. An edited table is not stored automatically but only after the *SAVE TABLE* softkey is pressed. This prevents a table

from being overwritten inadvertently (e.g. a channel model).

If the user edits the table currently used in CDP analysis, the edited table is taken as a basis for the next measurement immediately after it is stored. Thus, any modifications to the table are immediately shown. Here, too, the *SAVE TABLE* softkey must be pressed to store the edited table on the instrument's hard disk.

If the user edits a table stored on the hard disk but currently not active, the modifications become visible only after storage (*SAVE TABLE* softkey) and subsequent activation.

If the SYMBOL RATE or the CHAN # of a channel is changed, the instrument checks for code domain conflicts after confirmation of the entry with one of the unit keys. If a code domain conflict is detected, the channels involved are marked with an asterisk. The user has the possibility of eliminating the code domain conflict. If a table with code domain conflicts is used in CDP analysis, the results obtained are not valid.

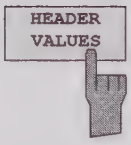

The *HEADER/VALUES* softkey switches between editing of the channel table header or its values.

HEADER allows the table header to be edited, i.e. the name and the comment. By changing the table name, overwriting of a table that has already been stored is prevented. The table name may contain max. 8 characters.

IEC/IEEE bus command:

```
:CONFigure:WCDPower[:BTS]:CTABle:NAME "NEW_TAB"
```

VALUES allows the entries of a channel table to be edited. The following parameters are available for each channel of a table (confirm each entry with one of the unit keys):

SYMBOL RATE: Symbol rate at which a channel is transmitted. This entry cannot be edited for channels whose symbol rate is defined by the standard (e.g. synchronization channels). In the case of special channels, the channel type is entered instead of the symbol rate.

CHAN #: Number of channel in the associated transmission class. The validity of the entered channel number for the selected transmission rate is checked when entered; invalid entries are rejected.

USE TFCI: Indicates whether a channel contains TFCI symbols. This information is required for determining the slot format of a channel. The entry cannot be edited for channels that do not contain any TFCI information.

TIMING OFFSET: Timing offset of a channel. The expected timing offset is the channel offset relative to the CPICH, specified in chips.
This entry cannot be edited for channels that have no timing offset.

PILOT BITS: Number of pilot bits of a channel. This information is required for determining the slot format. The entry cannot be edited for channels containing no

pilot symbols. The entry is made in bits.

CDP REL.: Information about relative channel power. This entry cannot be edited and exists only for the *RECENT* table; it is used for indicating low-power channels.

STATUS: Channel status (active/inactive). Setting the channel status to inactive excludes a channel entered in the table from CDP analysis without the complete channel line having to be cleared from the table. Only channels with active status are taken into account in CDP analysis.

IEC/IEEE bus commands:

```
:CONFigure:WCDPower[:BTS]:CTABle:DATA
8,0,0,0,0,0,1,0.00,8,1,0,0,0,0,1,0.00,7,1,0,25
6,8,0,1,0.00

:CONFigure:WCDPower[:BTS]:CTABle:COMMent
"Comment for new table"
```

The *ADD SPECIAL* softkey is used to add special channels to the channel table. For an analyzer equipped with FS-K72, the PICH and SCCPCH special channels, which are included in the 3GPP test models, can presently be added. Only one channel of each type may be added per channel table.
If the analyzer is equipped with FS-K74, the channel types of HSDPA (HSSCCH and HSPDSCH) can be selected and added to the channel table as well.

IEC/IEEE bus command:

-- (included in command `CONF:WCDP:CTAB:DATA`)

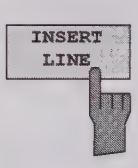

The *INSERT LINE* softkey inserts a new line into the table. In this line, entries can be made in any order. A channel is included in CDP analysis only if all required entries have been made in the list.

IEC/IEEE bus command: --

The *DELETE LINE* softkey deletes a marked line from the table.

IEC/IEEE bus command: --

The *MEAS CHAN CONF TABLE* softkey starts a measurement in the *CODE CHAN AUTOSEARCH* mode. The measurement results are entered in the channel table currently open. This softkey is available only in the *CODE CHAN AUTOSEARCH* mode.

IEC/IEEE bus command: --

The *SAVE TABLE* softkey saves the table under the specified name.
Caution: Editing a channel model and storing it under its original name will overwrite the model.

IEC/IEEE bus command:

-- (automatic storage with remote control)

The *SORT TABLE* softkey sorts a channel table according to symbol rates (in descending order) and, for channels of the same symbol rate, according to channel numbers (in ascending order).

IEC/IEEE bus command: `--`

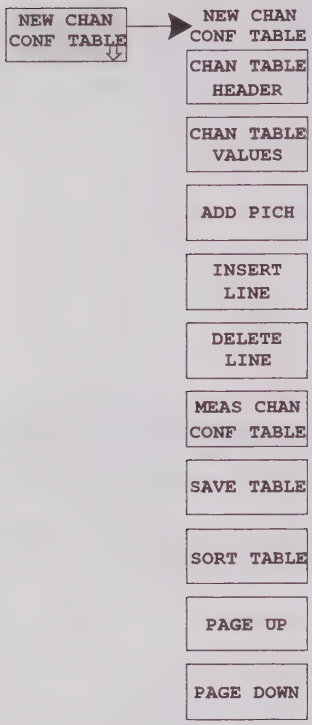

The *NEW CHAN CONF TABLE* softkey opens a submenu identical to that opened by the *EDIT CHAN CONF TABLE* softkey. In contrast to *EDIT CHAN CONF TABLE, NEW CHAN CONF TABLE* opens a table in which only the synchronization channels are entered; the table name is not yet defined.

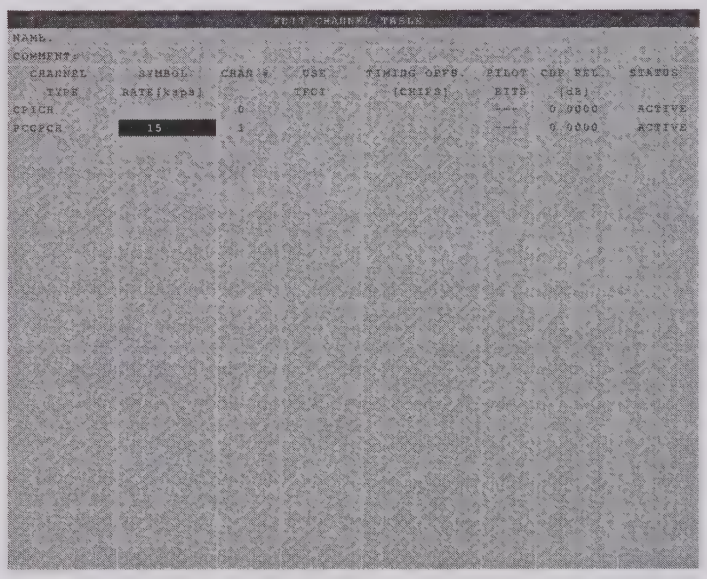

Fig. 6-32 Creating a new channel configuration

The *DEL CHAN CONF TABLE* softkey deletes a selected table from the list. The table currently active in the *CODE CHAN PREDEFINED* mode cannot be deleted.

IEC/IEEE bus command:

```
:CONFigure:WCDPower[:BTS]:CTABle:DELete
```

The *COPY CHAN CONF TABLE* softkey copies a selected table. The user is prompted to enter the name the copy is to be saved under.

IEC/IEEE bus command:

```
:CONFigure:WCDPower[:BTS]:CTABle:COPY "CTAB2"
```

Configuration of CDP Measurement – *SETTINGS* hotkey

SETTINGS hotkey

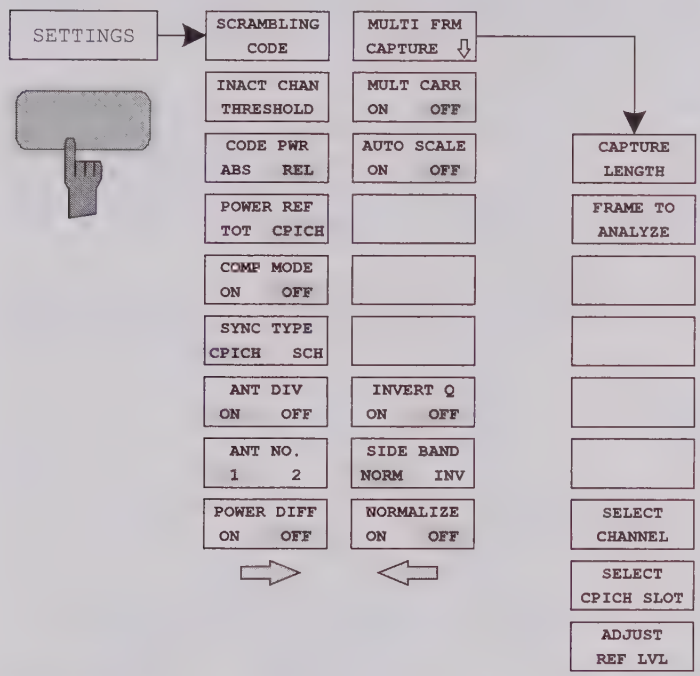

The *SETTINGS* hotkey opens a submenu with softkeys for setting parameters for the CDP measurement.

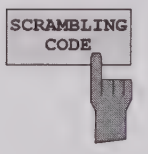

The *SCRAMBLING CODE* softkey opens a window for entering the scrambling code.
The scrambling codes are divided into 512 sets, each consisting of a primary scrambling code and 15 secondary scrambling codes.
The primary scrambling codes consist of scrambling codes n=16*i where i=0 to 511. The i:th set of secondary scrambling codes consists of scrambling codes 16*i+k, where k=1 to 15. The scrambling code is input in hex format. According to the 3GPP specification, the last digit denotes the number of the secondary scrambling code (k ∈ [1 ... 15] = [1 ... F]). The digit before the last digit denotes the primary scrambling code (k = 0, i ∈ [0 ... 511] = [0 ... FF]).

Example: To enter the primary scrambling code number '1', the digits '10' need to be entered. (i = 1, k = 0)

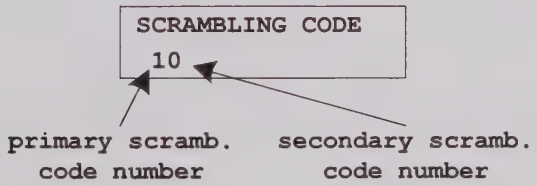

The entered scrambling code has to coincide with that of the signal. Otherwise, a CDP measurement of the signal is not possible.

IEC/IEEE bus command: `:[SENSe:]CDPower:LCODe[:VALue] #H2`

The *INACT CHAN THRESH* softkey activates the entry of the minimum power which a single channel should have as compared to the total signal in order to be considered an active channel.

Channels that are below the specified threshold are considered to be not active irrespective of whether they contain pilot symbols. Channels that are not active appear in blue in the CDP diagram.

The two measurements *COMPOSITE EVM* and *PEAK CODE DOMAIN ERR,* specified as measurements on the total signal, are performed with the aid of the list of active channels. These two measurements are falsified whenever active channels are recognized as not active (see above example) or if unassigned codes receive the status "assigned channel". *INACT CHAN THRESHOLD* is therefore used to influence the results of the two measurements.

The default value is -60 dB, which allows all channels of signals such as the 3GPP test signals to be detected in CDP analysis. If not all channels in the signal are automatically detected, *INACT CHAN THRES* has to be decremented.

IEC/IEEE bus command:

```
:[SENSe:]CDPower:ICTReshold -100dB to +10dB
```

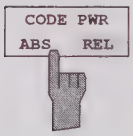

The *CODE PWR* softkey toggles the display mode of the code domain power display (see CODE DOM POWER).

REL: Selects relative scaling of the CDP measurement (default). The power reference depends on the adjustment of POWER REF.

CPICH: Relative power of the channels is referenced to the CPICH power

TOT: Relative power of the channels is referenced to the total power

ABS: Selects absolute scaling of the CDP measurement. The values are displayed in dBm.

IEC/IEEE bus command:

Rel. scaling: `:CALCulate<1>:FEED "XPOW:CDP:RATio"`

Abs. scaling: `:CALCulate<1>:FEED "XPOWer:CDP:ABSolute"`

`:CALCulate<1>:FEED "XPOW:CDP"`

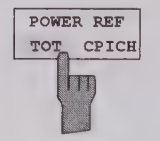

The *POWER REF TOT / CPICH* softkey determines the reference power for the relative power displays:

TOT All the relative powers (display modes *CDP RELATIVE* and *POWER VS SLOT*) are referenced slot by slot to the total signal power in the slot involved.

CPICH The reference power is that of the CPICH in the relevant slot.

The default setting of the softkey is *CPICH*.

Since 3GPP specifies a slot-specific power control for every channel, the total power of the signal will change from slot to slot in accordance with the power control of the individual channels. As a result, with activated power control and reference to the total power of the signal, a relative CDP display versus the slot number (*POWER VS SLOT*) does not necessarily represent the power control of the selected channel.
Example:
If the signal (theoretically) contains only one data channel whose power is controlled, and if the power is referenced to the total power of the signal (which is formed only by the contribution of this data channel), a straight line appears in the *POWER VS SLOT* diagram instead of the expected power staircase. Consequently, the reference value *TOT* of the relative displays is informative only if the signal does not contain power control.
By contrast, the *CPICH* setting also reflects the exact characteristic of the power versus the slot number in a selected channel for signals with power control. Since the CPICH is never power controlled, this yields the same reference value in every slot.

IEC/IEEE bus command: `:[SENSe:]CDPower:PREFerence TOTal|CPICh`

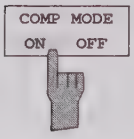

The *COMP MODE ON/OFF softkey* enables an extended channel search to evaluate compressed mode channels. In the frame of compressed mode channels, some slots can be suppressed. Furthermore the spreading factor of the compressed channels can be decreased and an varied pilot sequence is sent. By enabling the compressed mode measurement, this channel properties are considered.

Default setting is OFF.

OFF: Standard channel search.
The slot power (POWER VS SLOT display) of each slot is averaged to the symbols of one slot starting with the pilot symbols of the previous slot.

IEC/ IEEE bus command: `:CDP:PCON PILOT`

ON: Extended channel search considering the properties of compressed mode channels
The slot power (POWER VS SLOT display) of each slot is averaged to the symbols of one slot starting with the first data symbol of the slot.

IEC/ IEEE bus command: `:CDP:PCON SLOT`

Channels that show compressed mode transmission are marked with the ending –CPRSD within the channel table.

The following pictures show the channel table of a signal with compressed channels and the code domain power display and power versus slot of such a channel.

SR 480 ksps
Chan Code 3
CF 2.14 GHz CPICH Slot 0 Chan Slot 0

Ref 1.90 dBm
Att* 0 dB

Chan Type	Symb Rate [ksps]	Chan#	Status	TFCI	PilotL [Bits]	Pwr Abs [dBm]	Pwr Rel [dB]	T Offs [Chips]
CPICH	15.0	0	active	---	---	-23.60	0.00	---
PSCH	-.-	---	active	---	---	-28.12	-4.53	---
SSCH	-.-	---	active	---	---	-26.52	-2.93	---
PCCPCH	15.0	1	active	---	---	-23.60	0.00	---
SCCPCH	15.0	3	active	OFF	0	-13.61	9.99	0
PICH	15.0	16	active	---	---	-28.61	-5.01	30720
DPCH-CPRSD	960.0	2	active	ON	16	-23.61	-0.01	2304
DPCH-CPRSD	480.0	3	active	ON	16	-23.60	-0.00	2048
DPCH-CPRSD	240.0	4	active	ON	16	-23.61	-0.02	1792
DPCH-CPRSD	120.0	6	active	ON	16	-23.60	0.00	1536

Fig. 6-33 Channel table of a signal with compressed channels

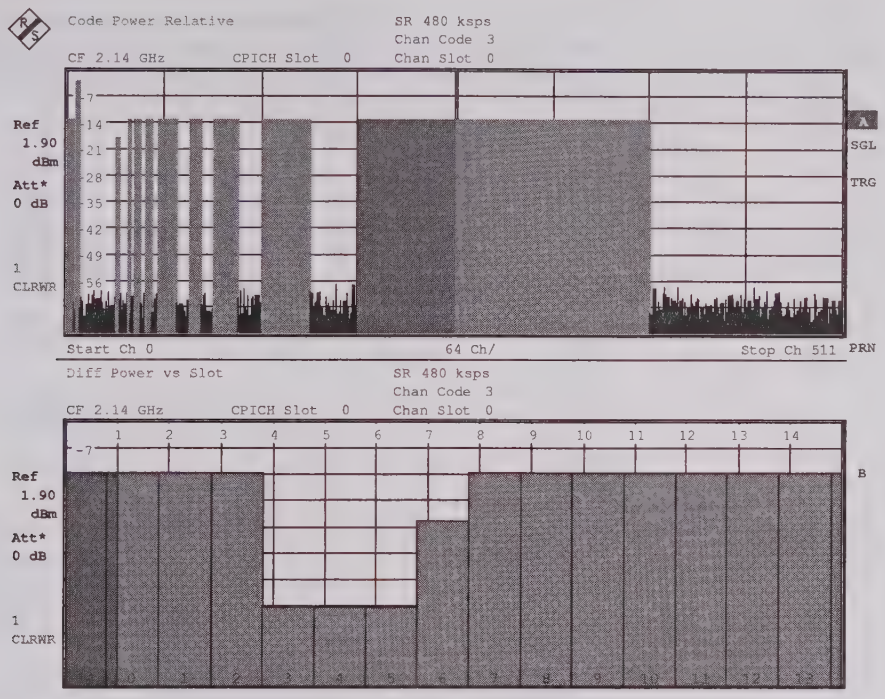

Fig. 6-34 Code domain power and power versus slot of a compressed channel

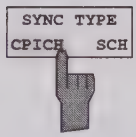

The *SYNC TYPE CPICH/SCH* softkey allows the user to choose between synchronization with or without CPICH. If *CPICH* is selected, FS-K72/K74 assumes that the CPICH control channel is present in the signal and attempts to synchronize to this channel. If the signal does not contain CPICH (test model 4 without CPICH), synchronization fails.
If *SCH* is selected, FS-K72/K74 synchronizes to the signal without assuming the presence of a CPICH. This setting is required for measurements on test model 4 without CPICH. While this setting can also be used with other channel configurations, it should be noted that the probability of synchronization failure increases with the number of data channels.
The default setting of the softkey is *CPICH*.

IEC/IEEE bus command:

```
:[SENSe<1|2>:]CDPower:STYPe   CPICh | SCHannel
```

The *ANT DIV ON/OFF* softkey activates or deactivates the antenna diversity mode for CDP analysis. If the softkey is set to ON, analysis is carried out with diversity antenna 1 as a default setting (see *ANT NO. 1/2* softkey).
The default setting of the softkey is *OFF*

IEC/IEEE bus command: `:[SENSe<1|2>:]CDPower:ANTenna OFF|1|2`

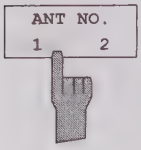

The *ANT NO. 1/2* softkey switches between diversity antennas 1 and 2. Depending on the softkey setting, FS-K72/K74 synchronizes to the CPICH of antenna 1 or antenna 2. The softkey is available only if the antenna diversity mode is active (*ANT DIV ON/OFF* softkey set to *ON*).
The default setting of the softkey is *1*.

IEC/IEEE bus command: `:[SENSe<1|2>:]CDPower:ANTenna OFF|1|2`

The *POW DIFF ON/OFF* softkey activates or deactivates the slot power difference calculation of the POWER VERSUS SLOT display.
The default setting of the softkey is *OFF*

OFF: The slot power of each slot is displayed (POWER VS SLOT display).

ON: The slot power difference to the previous slot is displayed for each slot (POWER VS SLOT display).

IEC/ IEEE bus command: :[SENSe<1|2>:]CDPower:PDIFf ON|OFF

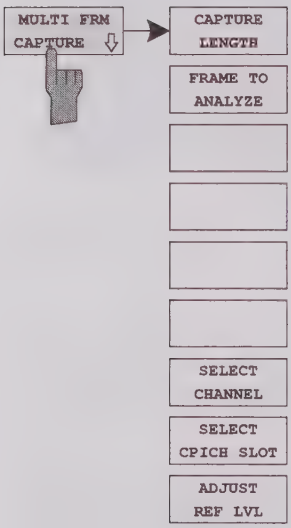

The Softkey MULTI FRM CAPTURE opens a submenu for specifying the parameters for multi-frame measurement. This measurement supports the data aquisition and evaluation of more than one 3GPP WCDMA frame. Depending on the analyser type that is used, several frames can be captured and evaluated.
The figure below shows the memory structure of the captured data. The size of the stored data depends on the parameter *CAPTURE LENGTH*, which defines the number of frames that are captured after a sweep is forced. If the parameter *CAPTURE LENGTH* has been changed, a new sweep must be started (*SINGLE SWEEP*) or must have been finished (*CONTINUOUS SWEEP*) in order to obtain valid measurement results for the specified range. The maximum number of storable frames depends on the trigger mode (*FREE RUN* or *EXT TRIG*). By changing the parameter *FRAME TO ANALYZE*, the frame number to be analyzed can be selected. The displayed results are refreshed if *FRAME TO ANALYZE* has been changed or a new sweep is started.

The *TRIGGER TO FRAME* time (TTF) is measured from the external trigger event to the start of the selected frame (*FRAME TO ANALYZE*). Therefore, the TTF of frame 0 is usually smaller than one slot (<667 us). If frame 1 is selected, the displayed TTF is between 10 ms and 10.667 ms. The TTF time is diplayed in the result summary. For the TTF time of frame n, the following equation is used:

$$TTF_n = TTF_0 + n \cdot 10\ ms$$

The maximum number of captured frames depends on the memory size and the trigger mode.

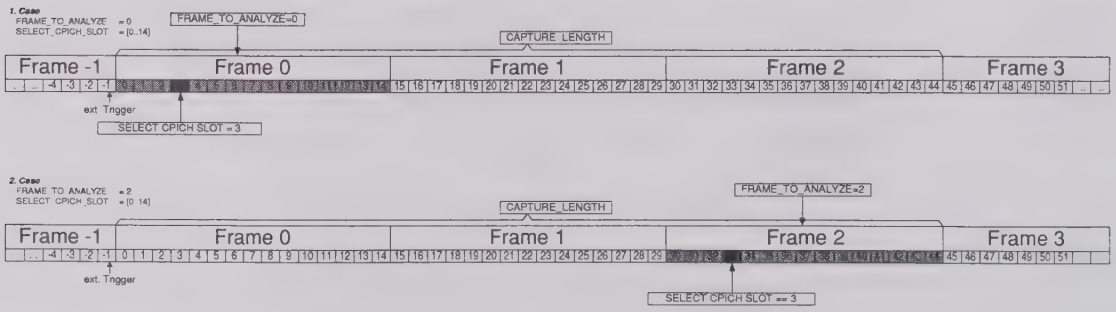

Fig. 6-35 Data scheme of the captured and analyzed frames

Table 6-2: Maximum number of captured frames

Analyzer	Downlink (K72/K74) EXT TRIGGER	Downlink (K72/K74) FREE RUN	Uplink (K73) EXT TRIGGER	Downlink (K73) FREE RUN
FSP	---	---	1 slot	1 slot
FSP (with B70)	3 frames	2 frames	3 frames	2 frames
FSU	3 frames	2 frames	3 frames	2 frames
FSQ	100 frames	100 frames	100 frames	100 frames

The softkey *CAPTURE LENGTH* enables an entry window for determining the number of frames that are to be captured at each sweep.

IEC/IEEE bus command:

```
:[SENSe:]CDPower:IQLength   <numeric value>
```

Range: FSU / FSP-B70 *(free run)*: <numeric value> *[1 ... 2]*
FSU / FSP-B70 *(ext. Trig)*: <numeric value> *[1 ... 3]*
FSQ: <numeric value> *[1 ... 100]*
Unit: []
Default: 1

The softkey *FRAME TO ANALYZE* enables an entry window for selecting the frame number to be analyzed.

IEC/IEEE bus command:

```
:[SENSe:]CDPower:FRAMe[:VALue] <numeric value>
```

This command selects one frame of the captured data, which is evaluated.
Range: <numeric value> *[0 ... CAPTURE_LENGTH - 1]*
Unit: []
Default: 0

The *MULT CARR ON/OFF* softkey effects the following measurements:

- POWER
- CODE DOMAIN POWER
- SIGNAL STATISTICS

ACLR, OCCUPIED BANDWITH and SPECTRUM EMISSION MASK measurements refer to a single carrier. MULT CARR ACLR can handle both single and multi carrier signals.

If the MULT CARR softkey is switched to ON the adjust reference level procedure ensures that the settings of RF attenuation and reference level are optimally adjusted for measuring a multi carrier signal. Even if one of the channels next to the analyzed one has higher power than the analyzed one the device is set to a non RF or IF overload condition.

If the MULT CARR softkey is in its default state OFF, the adjust reference level procedure works as if a single carrier signal is present, which is a faster routine.

IEC/IEEE bus command: :CONF:WCDP:BTS:MCAR:STAT ON | OFF

The *AUTO SCALE ON/OFF* softkey is available if the MULT CARR softkey is switched ON. The autoscaling function automatically changes the level settings if the center frequency is changed to another carrier. The level settings are derived from the latest adjust reference level procedure. In default state AUTO SCALE is turned ON, but it can be turned OFF if the functionality is not needed.

IEC/IEEE bus command: :CONF:WCDP:BTS:ASC:STAT ON | OFF

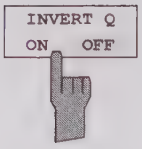

The *INVERT Q* softkey inverts the sign of the Q component of the signal. In the default setting, the softkey is deactivated.

IEC/IEEE bus command: `:[SENSe:]CDPower:QINVert OFF|ON`

The *SIDE BAND NORM / INV* softkey is used to perform the measurement in the normal (NORM) and in the inverted position (INV).

NORM The normal position allows the measurement of RF signals from the base station.

INV The inverted position is useful for measurements on IF modules or components in the case of spectral inversion.

The default setting is *NORM*.

IEC/IEEE bus command: `:[SENSe:]CDPower:SBANd NORMal|INVers`

Explanation: Pressing the SIDE BAND [INV] softkey or activating the INVERT Q softkey inverts the baseband spectrum. When the two softkeys are active, the spectrum is inverted twice and in the same position as the transmit signal.
(normal → inverted → normal)

Therefore, if the two softkeys are active, synchronization to the signal is still possible but the EVM is reduced. This is due to inverted frequency response correction.

Measuring signals in inverted position:
If a signal in inverted position is to be measured, only one of the softkeys SIDE BAND [INV] and INVERT Q should be pressed. The following combination is useful because, in this case, the EVM is not reduced by inverted frequency response correction.

SIDE BAND [NORM]
INVERT Q [ON]

IEC/IEEE bus command:: `:[SENSe:]CDPower:SBANd NORMal`
`:[SENSe:]CDPower:QINVert ON`

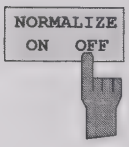

The *NORMALIZE ON / OFF* softkey eliminates the DC offset of the signal. The default setting is OFF.

IEC/IEEE bus command : `[SENSe:]CDPower:NORMalize OFF`

Frequency Settings – *FREQ* key

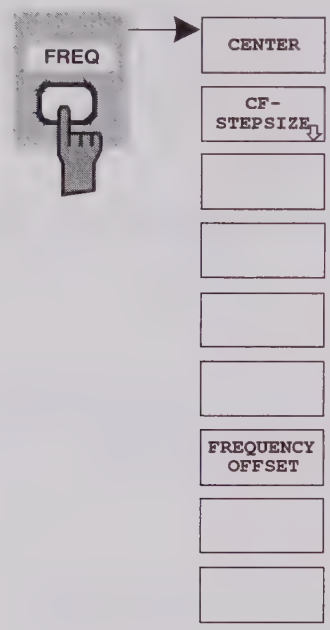

The *FREQ* key opens a submenu for changing the measurement frequency.

The *CENTER* softkey opens the window for manually entering the center frequency.
The permissible range of values for the center frequency is:

$$\text{minspan} / 2 \leq f_{center} \leq f_{max} - \text{minspan} / 2$$

f_{center}	center frequency
minspan	smallest selectable span > 0 Hz (10 Hz)
f_{max}	max. frequency

IEC/IEEE bus command: `FREQ:CENT 100MHz`

The CF *STEPSIZE* softkey opens a submenu for setting the step size of the center frequency. The step size can be coupled to the span (frequency domain) or the resolution bandwidth (time domain) or it can be manually set to a fixed value. The softkeys are mutually exclusive selection keys.

The *FREQUENCY OFFSET* softkey activates the window for entering an arithmetic frequency offset which is added to the frequency axis labelling. The allowed range of values for the offset is -100 GHz to 100 GHz. The default setting is 0 Hz.

IEC/IEEE bus command: `FREQ:OFFS 10 MHz`

Span Settings – *SPAN* key

The *SPAN* key is disabled for measurements in the CDP mode. For all other measurements (see MEAS key), the permissible span settings are described together with the measurement. The associated menu corresponds to that of the measurement in the base unit and is described in the manual for the base unit.

Level Settings – *AMPT* key

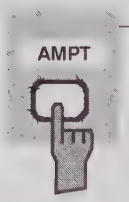

REF LEVEL

ADJUST REF LEVEL

REF LEVEL OFFSET

Y PER DIV

REF VALUE POSITION

RF ATTEN MANUAL

RF ATTEN AUTO

The *AMPT* key opens a submenu for level setting.

The *REF LEVEL* softkey allows the reference level to be input in the currently active unit (dBm, dBµV, etc).

IEC/IEEE bus command: `DISP:WIND:TRAC:Y:RLEV -60dBm`

ADJUST REF LVL executes a routine for optimum adjustment of the reference level to the signal.

IEC/IEEE bus command:
`[SENSe<1|2>:]CDPower:LEVel:ADJust`

The *REF LEVEL OFFSET* softkey allows the arithmetic level offset to be entered. This offset is added to the measured level irrespective of the selected unit. The scaling of the Y axis is changed accordingly.
The setting range is ±200 dB in 0.1 dB steps.

IEC/IEEE bus command:
`DISP:WIND:TRAC:Y:RLEV:OFFS -10dB`

Y PER DIV determines the grid spacing on the Y axis for all diagrams, where possible.

IEC/IEEE bus command:
`DISPlay[:WINDow<1|2>]:TRACe<1..3>:Y[:SCALe]:RPOSition`

REF VALUE POSITION allows entry of the position of the reference value on the Y axis (0 – 100%).

IEC/IEEE bus command:
`DISPlay[:WINDow<1|2>]:TRACe<1..3>:Y[:SCALe]:PDIVision`

The *RF ATTEN MANUAL* softkey allows the attenuation to be entered irrespective of the reference level.
The attenuation can be set in 10 dB steps between 0 and 70 dB (in 5 dB steps between 0 and 75 dB if option FSU-B25, *Electronic Attenuator*, is fitted). Other entries will be rounded to the next lower integer value.
If the defined reference level cannot be set for the specified RF attenuation, the reference level will be adjusted accordingly and the warning "Limit reached" will be output.

IEC/IEEE bus command: `INP:ATT 40 DB`

The *RF ATTEN AUTO* softkey sets the RF attenuation automatically as a function of the selected reference level.
This ensures that the optimum RF attenuation desired by the user is always used.
RF ATTEN AUTO is the default setting.

IEC/IEEE bus command: `INP:ATT:AUTO ON`

Marker Settings – *MKR* key

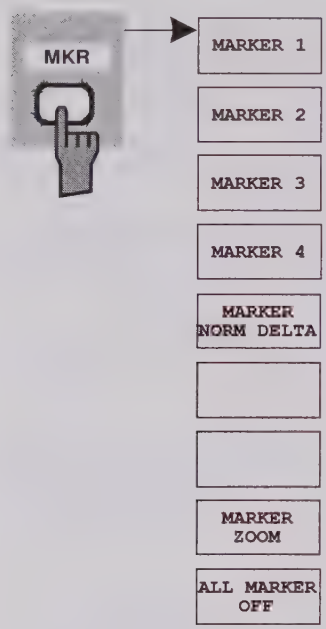

The *MARKER* key opens a submenu for the marker settings.

Markers are not available for the *RESULT SUMMARY* and *CHANNEL TABLE* displays. In all other displays, up to four markers can be activated, and they can be defined as a marker or delta marker by means of the *MARKER NORM/DELTA* softkey.

The *MARKER 1/2/3/4* softkey selects the corresponding marker and activates it.
MARKER 1 is always the normal marker. After *MARKERS 2 to 4* have been switched on, they are delta markers that are referenced to *MARKER 1*. These markers can be converted into markers with absolute value displays by means of the *MARKER NORM DELTA* softkey. When *MARKER 1* is the active marker, pressing the *MARKER NORM DELTA* softkey switches on an additional delta marker.
Pressing the *MARKER 1* to *MARKER 4* softkey switches off the selected marker.

IEC/IEEE bus command:

```
CALC:MARK ON;
CALC:MARK:X <value>;
CALC:MARK:Y?
CALC:DELT ON;
CALC:DELT:MODE ABS|REL
CALC:DELT:X <value>;
CALC:DELT:X:REL?
CALC:DELT:Y?
```

The *MARKER ZOOM* softkey expands the area around the active marker. With the zoom function, more details of the measurement signal can be seen.
The softkey *MARKER ZOOM* can be selected only if at least one of the markers is activated.
If an instrument setting is changed after *MARKER ZOOM* is selected, the function is cancelled.

IEC/IEEE bus command: `CALC:MARK1:FUNC:ZOOM`

The *ALL MARKER OFF* softkey switches off all markers (reference and delta markers). It also switches off all functions and displays that are associated with the markers/delta markers.

IEC/IEEE bus command: `CALC:MARK:AOFF`

The parameters of an activated marker are output on top of the diagram:

```
Marker 1 [T1 ]
                          -6.02 dBm
     Slot  4 SR 30.00 ksps Ch 62
```

Fig. 6-36 Parameters of marker info field

In addition to the channel power, which is displayed relative to the value specified with *POWER REF TOT/CPICH*, the parameters are:

Slot 4: Slot number of the channel (unassigned codes have a timing offset of 0 chips referenced to the beginning of the frame)

SR 30 ksps:
Symbol rate of the channel (for unassigned codes 7.5 ksps)

Ch 62: Number of the spreading code of the channel

Changing Instrument Settings – *MKR→* key

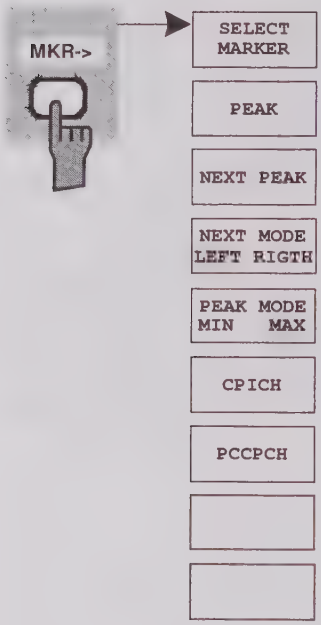

The *MKR→* key opens a submenu for marker functions:

The *SELECT MARKER* softkey activates numeric selection of the marker in the data entry field. Delta marker 1 is selected by entering 0.

IEC/IEEE bus command:
```
CALC:MARK1 ON;
CALC:MARK1:X <value>;
CALC:MARK1:Y?
```

The *PEAK* softkey sets the active marker or delta marker to the peak of the trace.
If no marker is active when the *MKR->* menu is called, *MARKER 1* is automatically switched on and the peak search is performed.

IEC/IEEE bus command:
```
CALC:MARK:MAX
CALC:DELT:MAX
```

The *NEXT PEAK* softkey sets the active marker/delta marker to the next lower peak value on the trace. The search direction is defined in the *NEXT MODE* submenu (see below).

IEC/IEEE bus command:
```
CALC:MARK:MAX:NEXT
CALC:DELT:MAX:NEXT
      CALC:MARK:MIN:NEXT
CALC:DELT:MIN:NEXT
```

The *NEXT MODE LEFT/RIGHT* softkey defines the direction in which the next higher maximum or minimum is searched for. For *NEXT MODE LEFT/RIGHT*, the search is done to the left/right of the active marker.

IEC/IEEE bus command:
```
CALC:MARK:MAX:LEFT
CALC:DELT:MAX:LEFT
CALC:MARK:MIN:LEFT
CALC:DELT:MIN:LEFT
CALC:MARK:MAX:RIGH
CALC:DELT:MAX:RIGH
CALC:MARK:MIN:RIGH
CALC:DELT:MIN:RIGH
```

The *PEAK MODE MIN/MAX* softkey defines if the next minimum or maximum peak should be searched for. The parameter influences the behaviour of the *PEAK* and *NEXT PEAK* softkeys.

IEC/IEEE bus command: --

The *MARKER -> CPICH* softkey sets the marker to the common pilot channel (code number 0 for spreading factor 256; corresponds to displayed code numbers 0 and 1 of the x axis).

IEC/IEEE bus commands:
```
:CALCulate<1|2>:MARKer<1>:FUNCtion:CPICh
:CALCulate<1|2>:MARKer<1>:Y?
```

The *MARKER -> PCCPCH* softkey sets the marker to the primary common control physical channel (code number 1 for spreading factor 256; corresponds to displayed code numbers 2 and 3 of the x axis).

IEC/IEEE bus commands:
```
:CALCulate<1|2>:MARKer<1>:FUNCtion:PCCPch
:CALCulate<1|2>:MARKer<1>:Y?
```

Marker Functions – MKR *FCTN* key

The *MKR FCTN* key is disabled for all measurements in the code domain power. For all other FS-K72/K74 measurements, the menu softkeys are described in the manual for the base unit.

Bandwidth Setting – *BW* key

The *BW* key is disabled for all measurements in the code domain power. For all other FS-K72/K74 measurements, the menu-specific softkeys are described in the manual for the base unit.

Measurement Control – *SWEEP* key

The menu of the *SWEEP* key contains options for switching between single measurement and continuous measurement and for controlling individual measurements. For measurements within the spectrum, the measurement time for a sweep can also be set. All menu-specific softkeys are described in the manual for the base unit.

Measurement Selection – *MEAS* key

The menu of the *MEAS* key contains all the FS-K72/K74 measurements that can be selected at a keystroke. The menu and its submenus are described in chapter 6.

Trigger Settings – *TRIG* key

The selectable trigger functions depend on the measurement selected. Code domain power measurements allow the free run mode as well as the frame trigger mode specified by the 3GPP standard. For all other measurements, the trigger modes are identical to those of the corresponding measurement in the base unit. The associated softkeys are described in the manual for the base unit.

Trace Settings – *TRACE* key

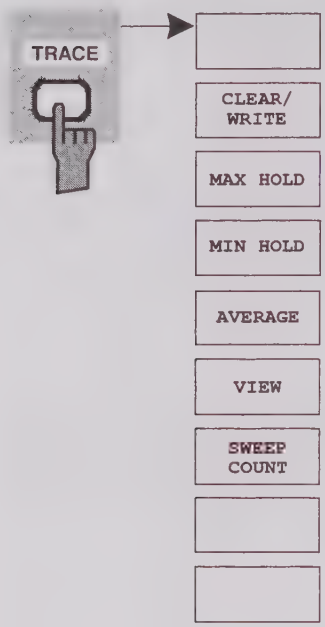

The *TRACE* key opens the following submenu:

The *CLEAR/WRITE* softkey activates the overwrite mode for the collected measured values, i.e. the trace is overwritten by each sweep.
In the *CLEAR/WRITE* display mode, all available detectors can be selected. In the default mode, the autopeak detector (setting *AUTO*) is selected.
Each time the *CLEAR/WRITE* softkey is actuated, the FSU clears the selected trace memory and restarts the measurement.

IEC/IEEE bus command `DISP:WIND:TRAC:MODE WRIT`

The *MAX HOLD* softkey activates the max peak detector.
The FSU saves the sweep result in the trace memory only if the new value is greater than the previous one.
The signal spectrum is filled during each sweep until all signal components are detected in a kind of envelope.
Pressing the *MAX HOLD* softkey again clears the trace memory and restarts the max hold mode.

IEC/IEEE bus command `DISP:WIND:TRAC:MODE MAXH`

The *MIN HOLD* softkey activates the min peak detector.
The FSU saves the sweep result in the trace memory only if the new value is greater than the previous one.
The signal spectrum is filled during each sweep until all signal components are detected in a kind of envelope.
Pressing the *MIN HOLD* softkey again clears the trace memory and restarts the max hold mode.

IEC/IEEE bus command `DISP:WIND:TRAC:MODE MINH`

The *AVERAGE* softkey activates the trace averaging function. The average is formed over several sweeps. Averaging can be performed with any of the detectors available. If the detector is automatically selected by the FSU, the sample detector is used.
Averaging is restarted every time the *AVERAGE* softkey is pressed. The trace memory is always cleared.

IEC/IEEE bus command `DISP:WIND:TRAC:MODE AVER`

The *VIEW* softkey freezes the current contents of the trace memory and displays them.
If a trace is frozen by *VIEW*, the instrument settings can be changed without the displayed trace being modified (exception: level display range and reference level, see below). The fact that the trace and the current instrument setting no longer agree is indicated by an enhancement label "*" at the right edge of the grid.
If in the *VIEW* display mode the level display range (*RANGE*) or the reference level (*REF LEVEL*) is changed, the FSU automatically adapts the measured data to the changed display range. This allows an amplitude zoom to be carried out after the measurement in order to show details of the trace.

IEC/IEEE bus command `DISP:WIND:TRAC:MODE VIEW`

The *SWEEP COUNT* softkey activates the entry of the number of sweeps used for averaging. The allowed range of values is 0 to 30000 and the following should be observed:

- Sweep Count = 0 means running averaging
- Sweep Count = 1 means no averaging being carried out
- Sweep Count > 1 means averaging over the selected number of sweeps; in the continuous sweep mode, averaging is performed until the set number of sweeps is attained and is then continued as running averaging.

The default setting is running averaging (Sweep Count = 0). The number of sweeps used for averaging is the same for all active traces in the selected diagram.

IEC/IEEE bus command `SWE:COUN 64`

SCREEN A
SCREEN B

By using the softkeys *SCREEN A* or *SCREEN B* , the upper (A) or lower (B) part of the display screen can be selected. The trace statistic functions that are described above are applied only to the measurement results, which are displayed in the selected screen. A display of special interest is the RESULT SUMMARY. It is shown in the lower part (SCREEN B). If the trace statistic functions are applied to the result summary, the affected results are marked if they are an average result, a max hold or a min hold result.

CLEAR/WRITE	Displays the result value of the last sweep (<none>)
MAX HOLD:	Displays the maximum result values of a number of sweeps (<MAX>)
MIN HOLD:	Displays the minimum result value of a number of sweeps (<MIN>)
AVERAGE:	Displays the average result value of a number of sweeps (<AVG>)

The number of evaluated sweeps depends on the sweep count value. The figure below shows an example of the result summary display with applied sweep averaging. All averaged values are marked with AVG. Especially the resolution and accuracy of the trigger to frame value can be increased by using the trace average mode.

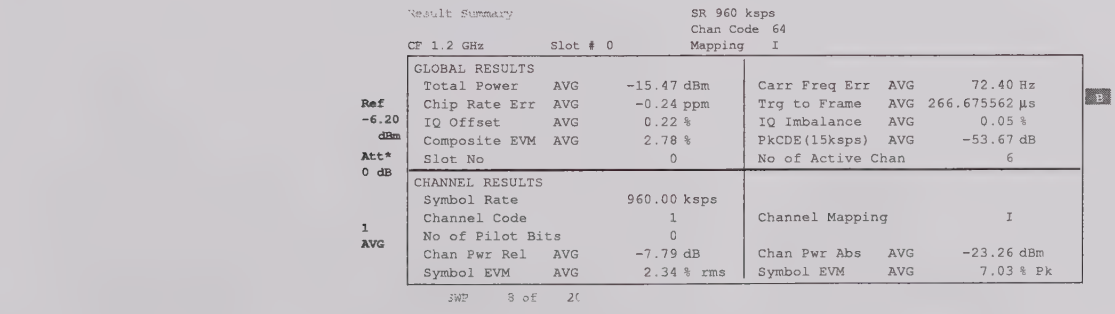

Fig. 6-37 Result summary with applied average mode

Display Lines – *LINES* key

The *LINES* key is disabled for all measurements in the code domain power. For all other measurements, the menu settings are equivalent to those of the corresponding measurement in the base unit; the associated softkeys are described in the manual for the base unit.

Settings of Measurement Screen – *DISP key*

The menu of the *DISP* key contains softkeys for configuring the measurement screen. The menus and the softkey functions are described in the manual for the base unit.

Storing and Loading of Unit Data – *FILE key*

The *FILE* menu is identical to that of the base unit. All softkeys are described in the manual for the base unit.

All keys of the FSU front panel that are not specifically mentioned are identical to those of the base unit. The key functions and the softkeys are described in the manual for the base unit.

7 Remote Control Commands

The following chapter describes the remote control commands for the application firmware. An alphabetic list at the end of this chapter provides an overview of the commands.

The commands, which are also valid for the base unit in the signal analyzer mode as well as the system settings, are described in the operating manual for the analyzer.

CALCulate:FEED - Subsystem

The CALCulate:FEED subsystem selects the evaluation method for the measured data. This corresponds to the result display selection in manual operation.

COMMAND	PARAMETER	UNIT	COMMENT
CALCulate<1|2> :FEED :XPOWer :CDP [:ABSolute] :RATio :CDEP :XTIMe :CDPower :ERRor :SUMMary :CTABle :PCDomain :MACCuracy :PVSLot :BSTReam :SYMBol :CONStellation :EVM			

:CALCulate<1|2>:FEED <string>

This command selects the measured data to be displayed.

Parameter: <string>::= 'XPOW:CDP' |
'XPOW:CDP:ABS' |
'XPOW:CDP:RAT' |
'XPOW:CDEP'
'XTIM:CDP:MACCuracy' |
'XTIM:CDP:PVSLot' |
'XTIM:CDP:PVSYmbol' |
'XTIM:CDP:COMP:CONStellation'
'XTIM:CDP:BSTReam' |
'XTIM:CDP:ERR:SUMM' |
'XTIM:CDP:ERR:CTABle' |
'XTIM:CDP:ERR:PCDomain' |
'XTIM:CDP:SYMB:CONStellation' |
'XTIM:CDP:SYMB:EVM'

Example: `":CALC2:FEED 'XTIM:CDP:MACCuracy'"`

Features: *RST value: 'XTIM:OFF' (vector signal analysis)
SCPI: conforming

Note: *For code domain power (CDP) measurements, the display is always operated in the SPLIT SCREEN mode and the "display mode to measurement window" assignment is fixed. Therefore, the numeric suffix that is required or permitted is specified in brackets for each display mode.*

The string parameters are defined as follows:

'XPOW:CDP'	Result display of code domain power as bar graph [absolute scaling] (`CALCulate<1>`)
'XPOW:CDP:ABS'	Result display of code domain power ratio as bar graph [absolute scaling] (`CALCulate<1>`)
'XPOW:CDP:RAT'	Result display of code domain power ratio as bar graph [relative scaling] (`CALCulate<1>`)
'XPOWer:CDEP'	Result display of code domain error power as bar graph (`CALCulate<1>`)
'XTIM:CDP:ERR:SUMM'	Result display in tabular form (`CALCulate2`)
'XTIM:CDP:ERR:CTABle'	Result display of channel assignment table (`CALCulate<1>`)
'XTIM:CDP:ERR:PCDomain'	Result display of peak code domain error (`CALCulate2`)
'XTIM:CDP:MACCuracy'	Result display of composite EVM (error vector magnitude referenced to the overall signal) (`CALCulate2`)
'XTIM:CDP:PVSYmbol'	Result display of power versus symbol (`CALCulate2`)
'XTIM:CDP:COMP:CONStellation'	Result display of composite constellation (`CALCulate2`)
'XTIM:CDP:PVSLot'	Result display of power versus slot (`CALCulate2`)
'XTIM:CDP:BSTReam'	Result display of bit stream (`CALCulate2`)
'XTIM:CDP:SYMB:CONStellation'	Result display of symbol constellation (`CALCulate2`)
'XTIM:CDP:SYMB:EVM'	Result display of symbol error vector magnitude (`CALCulate2`)

CALCulate:LIMit – Subsystem

CALCulate:LIMit:ACPower Subsystem

The CALCulate:LIMit:ACPower subsystem defines limit checking for adjacent channel power measurements.

COMMAND	PARAMETER	UNIT	COMMENT
CALCulate<1|2>			
:LIMit1			
:ACPower			
[:STATe]	< ON | OFF>		
ACHannel		DB, DB	
[:RELative]	<value>		
:STATe	< ON | OFF>	DBM, DBM	
:ABSolute	<value>		
:STATe	< ON | OFF>		
:RESult?	<value>,<value>		
:ALTernate<1|2>			
[:RELative]	<value>	DB, DB	
:STATe	< ON | OFF>		
:ABSolute	<value>		
:STATe	< ON | OFF>		
:RESult?	<value>,<value>		

CALCulate<1|2>:LIMit1:ACPower[:STATe] ON | OFF

This command switches on and off the limit check for adjacent channel power measurements in the selected measurement window. The commands `CALCulate:LIMit:ACPower:ACHannel:STATe` or `CALCulate:LIMit:ACPower:ALTernate:STATe` must be used in addition to specify whether the limit check is to be performed for the upper/lower adjacent channel or for the alternate adjacent channels.

Example: `"CALC:LIM:ACP ON"`

Characteristics: *RST value: OFF
SCPI: device-specific

CALCulate<1|2>:LIMit1:ACPower:ACHannel[:RELative] 0 to 100dB, 0 to 100dB

This command defines the relative limit of the upper/lower adjacent channel for adjacent channel power measurements in the selected measurement window. The reference value for the relative limit value is the measured channel power.

It should be noted that the relative limit value has no effect on the limit check as soon as it is below the absolute limit value defined with `CALCulate:LIMit:ACPower:ACHannel:ABSolute`. This mechanism allows automatic checking of the absolute basic values of adjacent channel power as defined in mobile radio standards.

Parameter: The first numeric value is the limit for the upper (lower) adjacent channel. The second value is ignored but must be indicated for reasons of compatibility with the FSE family.

Example: `"CALC:LIM:ACP:ACH 30DB, 30DB"`
'Sets the relative limit value in 'screen A for the power in the lower 'and upper adjacent channel to '30 dB below the channel power.

Characteristics: *RST value: 0 dB
SCPI: device-specific

CALCulate<1|2>:LIMit1:ACPower:ACHannel[:RELative]:STATe ON | OFF

This command activates the limit check for the relative limit value of the adjacent channel when adjacent channel power measurement is performed. Before the command, the limit check must be activated using `CALCulate:LIMit:ACPower:STATe ON`.

The result can be queried with `CALCulate:LIMit:ACPower:ACHannel:RESult?`. It should be noted that a complete measurement must be performed between switching on the limit check and the result query, since otherwise no valid results are available.

Example: `"CALC:LIM:ACP:ACH:REL:STAT ON"`
'Switches on the check of the relative limit values for adjacent channels.

Characteristics: *RST value: OFF
SCPI: device-specific

CALCulate<1|2>:LIMit1:ACPower:ACHannel:ABSolute -200DBM to 200DBM, -200 to 200DBM

This command defines the absolute limit value for the lower/upper adjacent channel during adjacent-channel power measurement (Adjacent Channel Power) in the selected measurement window.

It should be noted that the absolute limit value has no effect on the limit check as soon as it is below the relative limit value defined with `CALCulate:LIMit:ACPower:ACHannel:RELative`. This mechanism allows automatic checking of the absolute basic values of adjacent channel power as defined in mobile radio standards.

Parameter: The first value is the limit for the lower and the upper adjacent channel. The second limit value is ignored but must be indicated for reasons of compatibiltiy with the FSE family.

Example: `"CALC:LIM:ACP:ACH:ABS -35DBM, -35DBM"`
'Sets the absolute limit value in 'screen A for the power in the lower 'and upper adjacent channel to '-35 dBm.

Characteristics: *RST value: -200DBM
SCPI: device-specific

CALCulate<1|2>:LIMit1:ACPower:ACHannel:ABSolute:STATe ON | OFF

This command activates the limit check for the adjacent channel when adjacent-channel power measurement (Adjacent Channel Power) is performed. Before the command, the limit check for the channel/adjacent-channel measurement must be globally switched on using `CALC:LIM:ACP ON`.

The result can be queried with `CALCulate:LIMit:ACPower:ACHannel:RESult?`. It should be noted that a complete measurement must be performed between switching on the limit check and the result query, since otherwise no valid results are available.

Example: `"CALC:LIM:ACP:ACH:ABS:STAT ON"`
Switches on the check of absolute limit values for the adjacent channels.

Characteristics: *RST value: OFF
SCPI: device-specific

CALCulate<1|2>:LIMit1:ACPower:ACHannel:RESult?

This command queries the result of the limit check for the upper/lower adjacent channel in the selected measurement window when adjacent channel power measurement is performed.
If the power measurement of the adjacent channel is switched off, the command produces a query error.

Parameter: The result is returned in the form <result>, <result> where
<result> = PASSED | FAILED, and where the first returned value denotes the lower, the second denotes the upper adjacent channel.

Example: `"CALC:LIM:ACP:ACH:RES?"`
Queries the limit check result in the adjacent channels Sets the relative limit value for the power in the lower and upper adjacent channel to 30 dB below the channel power.

Characteristics: *RST value: --
SCPI: device-specific

CALCulate<1|2>:LIMit1:ACPower:ALTernate<1|2>[:RELative] 0 to 100dB, 0 to 100dB

This command defines the limit for the first/second alternate adjacent channel in the selected measurement window for adjacent channel power measurements.The reference value for the relative limit value is the measured channel power.

The numeric suffix after `ALTernate<1|2>` denotes the first or the second alternate channel. It should be noted that the relative limit value has no effect on the limit check as soon as it is below th absolute limit defined with `CALCulate:LIMit:ACPower:ALTernate<1|2>:ABSolute`. This mechanism allows automatic checking of the absolute basic values of adjacent channel power as defined in mobile radio standards.

Parameter: The first value is the limit for the lower and the upper alternate adjacent channel. The second limit value is ignored but must be indicated for reasons of compatibility with the FSE family.

Example: `"CALC:LIM:ACP:ALT2 30DB, 30DB"`
Sets the relative limit value in screen A for the power in the lower 'and upper alternate adjacent channel to 30 dB below the channel power.

Characteristics: *RST value: 0dB
SCPI: device-specific

CALCulate<1|2>:LIMit1:ACPower:ALTernate<1|2>[:RELative]:STATe ON | OFF

This command activates the limit check for the first/second alternate adjacent channel in the selected measurement window for adjacent channel power measurements. Before the command, the limit check must be activated using `CALCulate:LIMit:ACPower:STATe ON`.
The numeric suffix after `ALTernate<1|2>` denotes the first or the second alternate channel.
The result can be queried with `CALCulate:LIMit:ACPower:ALTernate<1|2>:RESult?`. It should be noted that a complete measurement must be performed between switching on the limit check and the result query, since otherwise no valid results are obtained.

Example: `"CALC:LIM:ACP:ACH:REL:STAT ON"`
'Switches on the check of the relative limit 'values for the alternate adjacent channels in 'screen A.

Characteristics: *RST value: OFF
SCPI: device-specific

CALCulate<1|2>:LIMit1:ACPower:ALTernate<1|2>:ABSolute -200DBM to 200DBM, -200DBM to .200DBM

This command defines the absolute limit value for the lower/upper alternate adjacent channel power measurement (Adjacent Channel Power) in the selected measurement window.
The numeric suffix after `ALTernate<1|2>` denotes the first or the second alternate channel. The numeric suffixes <1 to 8> are irrelevant for this command.
It should be noted that the absolute limit value for the limit check has no effect as soon as it is below the relative limit value defined with `CALCulate:LIMit:ACPower:ALTernate<1|2>:RELative`. This mechanism allows automatic checking of the absolute basic values defined in mobile radio standards for the power in adjacent channels.

Parameter: The first value is the limit for the lower and the upper alternate adjacent channel. The second limit value is ignored but must be indicated for reasons of compatibility with the FSE family.

Example: `"CALC:LIM:ACP:ALT2:ABS -35DBM, -35DBM"`
'Sets the absolute limit value in 'screen A for the power in the lower 'and upper second alternate 'adjacent channel to -35 dBm.

Characteristics: *RST value: -200DBM
SCPI: device-specific

CALCulate<1|2>:LIMit1:ACPower:ALTernate<1|2>:ABSolute:STATe ON | OFF

This command activates the limit check for the first/second alternate adjacent channel in the selected measurement window for adjacent channel power measurement (Adjacent Channel Power).
Before the command, the limit check must be globally switched on for the channel/adjacent channel power with the command `CALCulate:LIMit:ACPower:STATe ON`.
The numeric suffix after `ALTernate<1|2>` denotes the first or the second alternate channel.
The result can be queried with `CALCulate:LIMit:ACPower:ALTernate<1|2>:RESult?`. It should be noted that a complete measurement must be performed between switching on the limit check and the result query, since otherwise no valid results are available.

Example: `"CALC:LIM:ACP:ACH:ABS:STAT ON"`
Switches on the check of absolute limit values for the alternative adjacent channels.

Characteristics: *RST value: OFF
SCPI: device-specific

CALCulate<1|2>:LIMit1:ACPower:ALTernate<1|2>:RESult?

This command queries the result of the limit check for the first/second alternate adjacent channel in the selected measurement window for adjacent channel power measurements.
The numeric suffix after `ALTernate<1|2>` denotes the first or the second alternate channel.
If the power measurement of the adjacent channel is switched off, the command produces a query error.

Parameter: The result is returned in the form <result>, <result> where <result> = PASSED | FAILED and where the first (second) returned value denotes the lower (upper) alternate adjacent channel.

Example: `"CALC:LIM:ACP:ALT:RES?"`
Queries the limit check result in the second 'alternate adjacent channels in screen A

Characteristics: *RST value: --
SCPI: device-specific

CALCulate:LIMit:SPECtrum Subsystem

The CALCulate:LIMit:SPECtrum subsystem defines limit checking for spectral measurements with optionsWCDMA 3G FDD BTS (option FS-K72/K74)

COMMAND	PARAMETER	UNIT	COMMENT
CALCulate:LIMit:ESPectrum :MODE :RESTore :VALue	AUTO | MANual | USER 43 | 39 | 31 | 0		

:CALCulate:LIMit:ESPectrum:MODE AUTO | MANual | USER

This command activates or deactivates automatic selection of the limit line in the spectrum emission mask measurement.

Parameters:

AUTO	The limit line is set as a function of the measured channel power.
MANUAL	One of the four predefined limit lines is set. The selection is made with the command `CALC:LIM:ESP:VAL`.
USER	Query only; user-defined limit lines are active (refer to description of limit lines in the manual for the base unit).

Example: `":CALC:LIM:ESP:MODE AUTO"`

Features:

*RST value:	AUTO
SCPI:	device-specific

CALCulate:LIMit:ESPectrumRESTore

This command restores the standard limit lines for the spectrum emission mask measurement. All modifications made to the standard limit lines are lost and the default setting valid upon delivery is restored.

The numeric suffixes <1|2> or <1 to 8> are irrelevant for this command.

Example: `"CALC:LIM:ESP:REST"` Sets the spectrum emission mask limit lines back to the default setting

Characteristics:

*RST value:	--
SCPI:	device-specific

:CALCulate:LIMit:ESPectrum:VALue <numeric_value>

This command activates manual selection of the limit line. This means that one of the four possible limit lines is selected by specifying the expected power range as a value:

Specified value in dBm:	Selected limit line:	Value returned on query:
Value ≥ 43	P ≥ 43	43
39 ≤ value < 43	39 ≤ P < 43	39
31 ≤ value < 39	31 ≤ P < 39	31
Value < 31	P < 31	0

Example: `":CALC:LIM:ESP:VALue 39"`

Features:

*RST value:	0
SCPI:	device-specific

x

CALCulate:MARKer – Subsystem

COMMAND	PARAMETER	UNIT	COMMENT
:MARKer<1...4>			
:FUNCtion			
:CPICh			
:PCCPch			
:WCDPower			
[:BTS]			
:RESult?	PTOTal | FERRor | TFRame | TOFFset | MACCuracy | PCDerror | EVMRms | EVMPeak | CERRor | CSLot | SRATe | CHANnel | CDPabsolute | CDPRelative | IQOFfset | IQIMbalance | MTYPe		
:POWer			
:RESult			
?	ACPower | CPOWer | MCACpower | OBANdwidth | OBWidth		
PHZ	ON|OFF		

:CALCulate<1|2>:MARKer<1>:FUNCtion:CPICh

This command sets the marker to channel 0.
This command is an <Event> and, therefore, has neither an *RST value nor a query. Only the numeric suffix 1 is permissible in `MARKer`.
The numeric suffix in `CALCulate` that is required or permissible depends on the selected display mode for which the marker is to be valid and has to coincide with:

CALCulate<1>	for CDP absolute and relative
CALCulate2	for composite EVM, peak code domain error, power versus slot, bit stream, symbol constellation and EVM

Example: `":CALC:MARK:FUNC:CPIC"`

Characteristics: *RST value: _
SCPI: device-specific

:CALCulate<1|2>:MARKer<1>:FUNCtion:PCCPch

This command sets the marker to channel 1.
This command is an <Event> and, therefore, has neither an *RST value nor a query. Only the numeric suffix 1 is permissible in `MARKer`.
The numeric suffix in `CALCulate` that is required or permissible depends on the selected display mode for which the marker is to be valid and has to coincide with:

CALCulate<1>	for CDP absolute and relative
CALCulate2	for composite EVM, peak code domain error, power versus slot, bit stream, symbol constellation and EVM

Example: `":CALC:MARK:FUNC:PCCP"`

Characteristics: *RST value: -
SCPI: device-specific

:CALCulate<1|2>:MARKer1:FUNCtion:POWer:RESult:PHZ ON|OFF

This command switches the query response of the power measurement results in the indicated measurement window between output of absolute values (OFF) and output referred to the measurement bandwith (ON). The measurement results are output with `CALCulate:MARKer:FUNCtion:POWer:RESult?`

ON	Results output referred to measurement bandwidth.
OFF	Results output in absolute values.
Example:	`"CALC:MARK:FUNC:POW:RES:PHZ ON"`
Characteristics:	*RST value: `OFF` SCPI: device-specific
Query of results:	`:CALCulate<1|2>:MARKer1:FUNCtion:POWer:RESult:PHZ?`
Result:	`< 1 | 0 >`

CALCulate<1|2>:MARKer<1...4>:FUNCtion:POWer:RESult? ACPower | CPOWer | MCACpower | OBANdwidth | OBWidth

This command queries the result of the power measurement performed in the selected window. If necessary, the measurement is switched on prior to the query.
The channel spacings and channel bandwidths are configured in the `SENSe:POWer:ACHannel` subsystem.

To obtain a valid result, a complete sweep with synchronization to the end of the sweep must be performed before a query is output. Synchronization is possible only in the single-sweep mode.

Parameters:

ACPower:

Adjacent-channel power measurement
Results are output in the following sequence, separated by commas:

1. Power of transmission channel
2. Power of lower adjacent channel
3. Power of upper adjacent channel
4. Power of lower alternate channel 1
5. Power of upper alternate channel 1
6. Power of lower alternate channel 2
7. Power of upper alternate channel 2

The number of measured values returned depends on the number of adjacent/alternate channels selected with `SENSe:POWer:ACHannel:ACPairs`.

With logarithmic scaling (RANGE LOG), the power is output in the currently selected level unit; with linear scaling (RANGE LIN dB or LIN %), the power is output in W. If `SENSe:POWer:ACHannel:MODE REL` is selected, the adjacent/alternate-channel power is output in dB.

CPOWer

Channel power measurement
With logarithmic scaling (RANGE LOG), the channel power is output in the currently selected level unit; with linear scaling (RANGE LIN dB or LIN %), the channel power is output in W.

MCACpower:

Channel/adjacent-channel power measurement with several carrier signals
Results are output in the following sequence, separated by commas:

1. Power of carrier signal 1
2. Power of carrier signal 2
3. Power of carrier signal 3

4. Power of carrier signal 4
5. Total power of all carrier signals
6. Power of lower adjacent channel
7. Power of upper adjacent channel
8. Power of lower alternate channel 1
9. Power of upper alternate channel 1
10. Power of lower alternate channel 2
11. Power of upper alternate channel 2

The number of measured values returned depends on the number of carrier signals and adjacent/alternate channels selected with `SENSe:POWer:ACHannel:TXCHannel:COUNt` and `SENSe:POWer:ACHannel:ACPairs`.
If only one carrier signal is measured, the total value of all carrier signals will not be output.
With logarithmic scaling (RANGE LOG), the power is output in dBm; with linear scaling (RANGE LIN dB or LIN %), the power is output in W.
If `SENSe:POWer:ACHannel:MODE REL` is selected, the adjacent/alternate-channel power is output in dB.

OBANdwidth | OBWidth Measurement of occupied bandwidth
The occupied bandwidth in Hz is returned.

Example: `":CALC:MARK:FUNC:WCDP:RES? ACP"`

Characteristics: *RST value: -
SCPI: device-specific

:CALCulate<1>:MARKer<1>:FUNCtion:WCDPower[:BTS]:RESult? PTOTal | FERRor | TFRame | TOFFset | MACCuracy | PCDerror | EVMRms | EVMPeak | CERRor | CSLot | SRATe | CHANnel | CDPabsolute | CDPRelative | IQOFfset | IQIMbalance | MTYPe |

This command queries the measured and calculated results of the 3GPP FDD code domain power measurement.

PTOTal	total power	FERRor	frequency error in Hz
TFRame	trigger to frame	TOFFset	timing offset
MACCuracy	composite EVM	PCDerror	peak code domain error
EVMRms	error vector magnitude RMS	EVMPeak	error vector magnitude peak
CERRor	chip rate error	CSLot	channel slot number
SRATe	symbol rate	CHANnel	channel number
CDPabsolute	channel power absolute	CDPRelative	channel power relative
IQOFfset	I/Q offset	IQIMbalance	I/Q imbalance
MTYPe	modulation type		

Example: `":CALC:MARK:FUNC:WCDP:RES? PTOT"`

Characteristics: *RST value: -
SCPI: device-specific

CALCulate:PEAKsearch – Subsystem

COMMAND	PARAMETER	UNIT	COMMENT
:CALCulate			
:PEAKsearch			
:MARGin	<numeric_value>	[dB]	
:SUBRanges	<numeric_value>	--	

:CALCULATE<1\|2>:PEAKsearch

The limit mask - reduced by an overall margin - is checked against the trace. The fail positions are marked. Every value is added to a peak list, which can be opened and saved in ASCII format or read out via an IEC/IEEE command.

Example: ":CALC:PEAK "

Characteristics: *RST value: ---
SCPI: device-specific

Query of results: :CALCULATE<1|2>:PEAKsearch ?

Result: <-->

:CALCULATE<1|2>:PEAKsearch:MARGin <value>

This command defines an overall margin which is subtracted from the limit line to make the peak search more stronger. If the values of the trace are above the limit line minus margin value it will be marked in the peak list.

Example: ":CALC:PEAK:MARG 6"

Characteristics:

Range:	-200 ... 200
Unit:	[dB]
*RST value:	6
SCPI:	device-specific

Query of results: :CALCULATE<1|2>:PEAKsearch:MARGin ?

Result: <value>

:CALCULATE<1|2>:PEAKsearch:SUBRanges <value>

The command defines how many peaks are searched for within one range. The ranges are:
- below –4 MHz from the carrier,
- above +4 MHz from carrier, and
- the area from –4 MHz to +4 MHz around the carrier.

Example: ":CALC:PEAK:SUBR 25"

Characteristics:

Range:	1 ... 50
Unit:	[]
*RST value:	25
SCPI:	device-specific

Query of results: :CALCULATE<1|2>:PEAKsearch:SUBRanges ?

Result: <value>

CALCulate:STATistics – Subsystem

The CALCulate:STATistics subsystem controls the statistical measurement functions in the instrument. The measurement window cannot be selected with these functions. The numeric suffix in CALCulate is therefore ignored.

COMMAND	PARAMETER	UNIT	COMMENT
:CALCulate			
:STATistics			
:APD			
[:STATe]	<Boolean>	--	
:CCDF			
[:STATe]	<Boolean>	--	
:NSAMples	<numeric_value>		
:SCALe			
:AUTO	ONCE		
:X			
:RLEVel	<numeric_value>	dBM	
:RANGe	<numeric_value>	dB	
:Y			
:UPPer	<numeric_value>		
:LOWer	<numeric_value>		
:PRESet			
[:DUMMy]			
:RLEVel			
:RESult<1...3>?			

:CALCulate:STATistics[:BTS]:CCDF[:STATe] ON | OFF

This command switches on or off the measurement of the complementary cumulative distribution function (CCDF).

Example: "CALC:STAT:CCDF ON"

Characteristics: *RST value: OFF
SCPI: device-specific

:CALCulate:STATistics:NSAMples 100 to 32768

This command sets the number of measurement points to be acquired for the statistical measurement functions

Example: "CALC:STAT:NSAM 5000"

Characteristics: *RST value: 10000
SCPI: device-specific

CALCulate:STATistics:PRESet

This command resets the scaling of the X and Y axes in a statistical measurement. The following values are set:

X axis ref level: -20 dBm
X axis range APD: 100 dB
X axis range CCDF: 20 dB
Y axis upper limit: 1.0
Y axis lower limit: 1E-6

Example: "CALC:STAT:PRES" Resets the scaling for statistical functions

Characteristics: *RST value: --
SCPI: device-specific

CALCulate:STATistics:PRESet:RLEVel

This command adjusts the reference level to get an optimized sensitivity. Only the reference level is changed all other setting parameters are kept.

Example: "CALC:STAT:PRES:RLEVel" Resets the scaling for statistical functions

Characteristics: *RST value: --
SCPI: device-specific

CALCulate:STATistics:SCALe:AUTO ONCE

This command optimizes the level setting of the instrument depending on the measured peak power, in order to obtain maximum instrument sensitivity.
To obtain maximum resolution, the level range is set as a function of the measured spacing between peak power and the minimum power for the APD measurement and of the spacing between peak power and mean power for the CCDF measurement. In addition, the probability scale for the number of test points is adapted.

Note: *Subsequent commands have to be synchronized with *WAI, *OPC or *OPC? to the end of the autorange process which would otherwise be aborted.*

Example: "CALC:STAT:SCAL:AUTO ONCE;*WAI"
Adapts the level setting for statistical measurements.

Characteristics: *RST value: --
SCPI: device-specific

:CALCulate:STATistics:SCALe:Y:UPPer 1E-5 to 1.0

This command defines the upper limit for the Y axis of the diagram in statistical measurements. Since probabilities are specified on the Y axis, the entered numerical values are dimensionless.

Example: "CALC:STAT:SCAL:Y:UPP 0.01"

Characteristics: *RST value: 1.0
SCPI: device-specific

:CALCulate:STATistics:SCALe:Y:LOWer 1E-6 to 0.1

This command defines the lower limit for the Y axis of the diagram in statistical measurements. Since probabilities are specified on the Y axis, the entered numerical values are dimensionless.

Example: "CALC:STAT:SCAL:Y:LOW 0.001"

Characteristics: *RST value: 1E-6
SCPI: device-specific

CONFigure:WCDPower – Subsystem

This subsystem comprises the commands for configuring the code domain power measurements. Only the numeric suffix 1 is permissible in `CONFigure`.

COMMAND	PARAMETER	UNIT	COMMENT
CONFigure			
:WCDPower			
[:BTS]			Option FS-K72/K74
:MEASurement	POWer | ACLR | MCACIr | ESPectrum | OBANdwidth | OBWidth | WCDPower | CCDF		
:ASCale			
:STATe	< Boolean >		
:CTABle			
[:STATe]	<Boolean>		
:SELect	<file_name>		
:NAME	<file_name>		
:DATA	AUTO | <numeric_value>, AUTO | <numeric_value>..		
:COMMent	<string>		
:COPY	<file_name>		
:DELete			
:CATalog?			
:RESTore			
:MCARier			
:STATe	< Boolean >		

CONFigure<1>:WCDPower[:BTS]:MEASurement POWer | ACLR| MCACIr | ESPectrum | OBANdwith | OBWidth | WCDPower | CCDF

This command selects the 3GPP FDD base station tests. The settings of the predefined measurements are described for the associated softkey in chapter 6.

Parameter:

POWer	Channel power measurement (standard 3GPP WCDMA Forward) with predefined settings
ACLR	Adjacent-channel power measurement (standard 3GPP WCDMA Forward) with predefined settings
MCACIr	This command selects the 3GPP FDD base station test for measurement of **m**ulti **c**arrier **a**djacent **c**hannel **l**eakage power **r**atio (MCACLR).
ESPectrum	Measurement of spectrum emission mask
OBANdwith | OBWidth	Measurement of occupied power bandwidth
WCDPower	Code domain power measurement. This selection has the same effect as command `INSTrument:SELect WCDPower`.
CCDF	Measurement of complementary cumulative distribution function

Characteristics: `"CONF:WCDP:MEAS POW"`

Features: *RST value: POWer
SCPI: device-specific

:CONFigure:WCDPower[:BTS]:ASCale:STATe ON | OFF

Is available if multi carrier is switched ON. The autoscaling function automatically changes the level settings if the center frequency is changed to another carrier.

ON Changes the level settings, if the center frequency is changed to another carrier.

OFF Does not change the level settings, if the center frequency is changed to another carrier.

Example: `":CONF:WCDP:BTS:ASC:STAT ON "`

Characteristics: *RST value: ON
SCPI: device-specific

Query of results: `:CONFigure:WCDPower:BTS:ASCale:STATe ?`

Result: `<1|0>`

CONFigure:WCDPower[:BTS]:CTABle[:STATe] ON | OFF

This command switches the channel table on or off. When switch-on takes place, the measured channel table is stored under the name RECENT and is switched on. After the RECENT channel table is switched on, another channel table can be selected with the command `CONF:WCDP:CTABle:SELect`.

Note: *The RECENT channel table must always be switched on first with the command* `CONF:WCDP:CTAB:STAT` *and then the required channel table can be selected with the command* `CONF:WCDP:CTAB:SEL`

Example: `":CONF:WCDP:CTAB ON"`

Characteristics: *RST value: OFF
SCPI: device-specific

CONFigure:WCDPower[:BTS]:CTABle:SELect <string>

This command selects a predefined channel table file. Before using this command, the RECENT channel table must be switched on first with the command `CONF:WCDP:CTAB:STATe ON`.

Example: `":CONF:WCDP:CTABle ON"`
`":CONF:WCDP:CTAB:SEL 'CTAB_1'"`

Characteristics: *RST value: "RECENT"
SCPI: device-specific

:CONFigure:WCDPower[:BTS]:CTABle:NAME <file_name>

This command selects an existing channel table or creates the name of a new channel table.

Example: `":CONF:WCDP:CTAB:NAME 'NEW_TAB'"`

Characteristics: *RST value: "RECENT"
SCPI: device-specific

:CONFigure:WCDPower[:BTS]:CTABle:DATA
2..9,0..511,0 | 1,<numeric_value> | AUTO, 2 | 4 | 8 | 16,0 | 1,<numeric_value>...

This command defines the values of the selected channel table.
Each line of the table consists of 8 values:
<code class>,<code number>,<use TFCI>,<timing offset | AUTO>,<pilot length>,<pich>,<status>,<CDP relative [dB]>....

Code class:	2 to 9		
Code number:	0 to 511		
Use TFCI:	0: not used, 1: used		
Timing offset:	0 to 38400, for code class 9, the step width is 512; otherwise, 256		
Pilot length:	code class 9:	4	
	code class 8:	2, 4, 8	
	code class 7:	4, 8	
	code class 5/6:	8	
	code class 2/3/4	16	
Channel Type:	*0: DPCH*	*Dedicated Physical Channel of a standard WCDMA Frame*	
	1: PICH	*Paging Indication Channel*	
	2: SCCPCH	*Secondary Common Control Physical Channel*	
	3: HS_SCCH	*HSDPA: High Speed Shared Control Channel*	
	4: HS_PDSCH	*HSDPA: High Speed Physical Downlink Shared Channel*	
	5: CHAN	*any other QPSK modulated channel without pilot symbols*	
Status:	0: not active, 1: active		
CDP relative:	for setting commands any value, for query CDP relative value		

Channels PICH, CPICH and PCCPCH may only be defined once. If channel CPICH or PCCPCH is missing in the command, it is automatically added at the end of the table.

Prior to this command, the name of the channel table has to be defined with the command `CONF:WCDP:CTAB:NAME`.

Example: `":CONF:WCDP:CTAB:DATA 8,0,0,0,0,0,1,0.00, 8,1,0,0,0,0,1,0.00,7,1,0,256,8,0,1,0.00"`
2 channels are defined: CPICH, PCCPCH and a channel in code class 7

Characteristics: *RST value: -
SCPI: device-specific

:CONFigure:WCDPower[:BTS]:CTABle:COMMent <string>

This command defines a comment for the selected channel table
Prior to this command, the name of the channel table has to be defined with command `CONF:WCDP:CTAB:NAME` and the values of the table have to be defined with command `CONF:WCDP:CTAB:DATA`.

Example: `":CONF:WCDP:CTAB:COMM 'Comment for table 1'"`

Characteristics: *RST value: ""
SCPI: device-specific

:CONFigure:WCDPower[:BTS]:CTABle:COPY <file_name>

This command copies one channel table onto another one. The channel table to be copied is selected with command `CONF:WCDP:CTAB:NAME`.
The name of the channel table may contain a maximum of 8 characters. This command is an "event" which is why it is not assigned an *RST value and has no query.

Parameter: <file_name> ::= name of the new channel table

Example: `":CONF:WCDP:CTAB:COPY 'CTAB_2'"`

Characteristics: *RST value: --
SCPI: device-specific

:CONFigure:WCDPower[:BTS]:CTABle:DELete

This command deletes the selected channel table. The channel table to be deleted is selected with the command `CONF:WCDP:CTAB:NAME`.

Example: `":CONF:WCDP:CTAB:DEL"`

Characteristics: *RST value: --
SCPI: device-specific

This command is an "event" which is why it is not assigned an *RST value and has no query.

:CONFigure:WCDPower[:BTS]:CTABle:CATalog?

This command reads out the names of all channel tables stored on the hard disk.
Syntax of output format:
<Sum of file lengths of all subsequent files>,<free memory on hard disk>,
<1st file name>,<1st file length>,<2nd file name>,<2nd file length>,....,<nth file name>,
<nth file length>

Example: `":CONF:WCDP:CTAB:CAT?"`

Characteristics: *RST value: --
SCPI: device-specific

:CONFigure:WCDPower[:BTS]:MCARier:STATe ON | OFF

If multi carrier is switched ON, the adjust reference level procedure ensures that the settings of RF attenuation and reference level are optimally adjusted for measuring a multi carrier signal.

ON Adjust reference level considering multi carrier conditions.

OFF Adjust reference level considering single carrier conditions

Example: `":CONF:WCDP:BTS:MCAR:STAT ON "`

Characteristics: *RST value: OFF
SCPI: device-specific

Query of results: `:CONF:WCDP:BTS:MCARrier:STATe ?`

Result: `<1|0>`

DISPlay – Subsystem

The DISPLay subsystem controls the selection and presentation of textual and graphic information as well as of measurement data on the display. The measurement windows are selected by WINDow1 (screen A) or WINDow2 (screen B) .

COMMAND	PARAMETER	UNIT	COMMENT
:DISPlay [:WINDow<1|2>] :SIZE	LARGe | SMALl	--	

:DISPlay[:WINDow<1|2>]:SIZE LARGe | SMALl

This command switches the diagram to full screen size.

LARGe full screen size.

SMALl small screen size of the ACLR diagramm.

Example: `"DISP:WIND1:SIZE LARG"`

Characteristics: *RST value: `SMALl`
SCPI: device-specific

Query of results: `:DISPlay[:WINDow<1|2>]:SIZE?`

Result: `<LARGe|SMALl>`

FORMat – Subsystem

:FORMat:DEXPort:DSEParator POINt | COMMa

This command to select between default separators '.' (decimal point) and ',' (comma) .

POINt peak list is separated by point '.'

COMMa peak list is separated by comma ','

Example: `":FORM:DEXP:DSEP POIN"`

Characteristics:

Range:	`< POINt | COMMa >`
Unit:	[]
*RST value:	`POINt`
SCPI:	device-specific

Query of results: `:FORMat:DEXPort:DSEParator ?`

Result: `< POINt | COMMa >`

INSTrument – Subsystem

:INSTrument[:SELect] SANalyzer | RECeiver | ADEMod | MSGM | CDPower | WCDPower | BWCDpower

This command switches between the operating modes by means of text parameters.
Selection BWCDpower or WCDPower presets the instrument as described in Chapter 2, Section "Basic Settings in Code Domain Measurement Mode".

Example: `":INST BWCD"`

Characteristics: *RST value: SANalyzer
SCPI: conforming

MMEMory – Subsystem

:MMEMory:STORe1:FINal 'A:\final.dat'

This command exports the peak list in ASCII format to a file. The complete output format is similar to the trace export. The peak values within the file are comma separated in the format:

```
. <1> <freq1>, <level1>, <delta level 1>, <1> <freq2>, <level2>, <delta
level 2>, ... <1> <freq n>, <level n>, <delta level n>
```

Example: `":MMEM:STOR:FIN 'A:\final.dat'"`

Characteristics:

*RST value:	---
SCPI:	device-specific

Query of results: `---`

Result File:

<1>	[]	- trace number is always 1
<freq>	[Hz]	- frequency of the peak
<level>	[dBm]	- absolute level of the peak
<delta level>	[dB]	- distance to the limit line

SENSe:CDPower – Subsystem

This subsystem controls the parameters for the code domain mode. The numeric suffix in SENSe<1|2> is not significant in this subsystem.

COMMAND	PARAMETER	UNIT	COMMENT
[SENSe<1|2>]			
:CDPower			Option FS-K72/K74
:ICTReshold	<numeric_value>	dB	
:SBANd	NORMal | INVerse		
:LEVel			
:ADJust			
:LCODe			
[:VALue]	<hex>	--	
:CODE	<numeric_value>	--	
:SLOT	<numeric_value>	--	
:SFACtor	4 | 8 | 16 | 32 | 64 | 128 | 256 | 512	--	
:NORMalize	<Boolean>	--	
:PCONtrol	SLOT|PILot	--	
:QINVert	<Boolean>	--	
:PREFerence	TOTal | CPICh	--	
:STYPe	CPICh | SCHannel	--	
:ANTenna	OFF | <numeric_value>	--	
:PDIFf	ON | OFF	--	
:IQLength	<numeric_value>	--	
:FRAMe		--	
[:VALue]	<numeric_value>	--	

:[SENSe:]CDPower:SFACtor 4 | 8 | 16 | 32 | 64 | 128 | 256 | 512

This command defines the spreading factor. The spreading factor is only significant for display mode PEAK CODE DOMAIN ERROR.

Example: ":SENS:CDP:SFACtor 16"

Characteristics: *RST value: 512
SCPI: device-specific

:[SENSe:]CDPower:CODE 0 to 511

This command sets the code number. The code number refers to code class 9 (spreading factor 512).

Example: ":SENS:CDP:CODE 30"

Characteristics: *RST value: 0
SCPI: device-specific

:[SENSe:]CDPower:NORMalize ON | OFF

This command switches elimination of I/Q offset on or off.

Example: ":SENS:CDP:NORM OFF"

Characteristics: *RST value: OFF
SCPI: device-specific

Mode: WCDP

[SENSe<1|2>:]CDPower:PCONtrol PILot | SLOT

Example: `":CDP:PCON SLOT"` switch to power averaging from slot start to the end of the slot
An enhanced channel search to consider the properties of compressed mode channels is used.

`":CDP:PCON PILOT"` switch to power averaging from the pilot symbols of the previous slot number to the start of the pilots of the displayed slot number
The channel search does only consider standart channels.

Characteristics: *RST value: PILot
SCPI: device-specific

Mode: 3G FDD BTS

:[SENSe:]CDPower:QINVert ON | OFF

This command inverts the Q component of the signal.

Example: `":SENS:CDP:QINV ON"`

Characteristics: *RST value: OFF
SCPI: device-specific

Mode: WCDP

:[SENSe:]CDPower:SLOT 0 to 14

This command sets the slot number of the common pilot channels (CPICH).

Example: `":SENS:CDP:SLOT 3"`

Characteristics: *RST value: 0
SCPI: device-specific

:[SENSe:]CDPower:SBANd NORMal | INVers

This command is for interchanging the left and the right sidebands.

Example: `":CDP:CDP:SBAN INV"`

Characteristics: *RST value: NORM
SCPI: device-specific

Mode: WCDP

:[SENSe:]CDPower:LCODe[:VALue] #H0 to #H1fff

This command defines the scrambling code in hexadecimal format.

Example: `":CDP:LCOD #H2"`

Characteristics: *RST value: 0
SCPI: device-specific

:[SENSe:]CDPower:ICTReshold -100 dB to + 10 dB

This command sets the threshold value from which a channel is treated as active. The level entered refers to the total signal power.

Example: ":CDP:ICTR -10DB"

Characteristics: *RST value: -60 dB
SCPI: device-specific

:[SENSe:]CDPower:PREFerence TOTal | CPICh

This command switches between the use of total power or CPICH power as the reference for the relative CDP measurement values.

Example: ":SENS:CDP:PREF CPIC"

Characteristics: *RST value: TOTal
SCPI: device-specific

:[SENSe<1|2>:]CDPower:STYPe CPICh | SCHannel

This command selects the type of synchronization.

CPICH Synchronization to CPICH (default setting). For this type of synchronization, the CPICH must be present in the transmit signal.

SCH Synchronization without CPICH. This type of synchronization is required for test model 4 without CPICH.

Example: ":CDP:STYP SCH"

Characteristics: *RST value: CPICh
SCPI: device-specific

:[SENSe<1|2>:]CDPower:ANTenna OFF | 1 | 2

This command activates or deactivates the antenna diversity mode and selects the antenna to be used.

OFF The antenna diversity mode is switched off.

1 | 2 The antenna diversity mode is switched on, and the signal from antenna 1 or antenna 2 is used for CDP analysis.

Example: ":CDP:ANT 1"

Characteristics: *RST value: OFF
SCPI: device-specific

:[SENSe<1|2>:]CDPower:PDIFf ON|OFF

This command activates or deactivates the slot power difference calculation of the POWER VERSUS SLOT display.

ON The slot power difference to the previous slot is displayed (POWER VS SLOT display).

OFF The slot power of each slot is displayed (POWER VS SLOT display).

Example: ":CDP:PDIF ON"

Characteristics: *RST value: OFF
SCPI: device-specific

:[SENSe<1|2>:]CDPower:IQLength <numeric value>

This command specifies the number of frames that are captured by one sweep.

Range: FSU / FSP-B70 *(free run)*: <numeric value> *[1 ... 2]*
FSU / FSP-B70 *(ext. trig)*: <numeric value> *[1 ... 3]*
FSQ: <numeric value> *[1 ... 100]*
Unit: []
Default: 1

Example: `":CDP:IQLength 3"`

Characteristics: *RST value: 1
SCPI: device-specific

:[SENSe<1|2>:]CDPower:FRAMe[:VALue] <numeric value>

Range: <numeric value> [0 ... CAPTURE_LENGTH - 1]
Unit: []
Default: 0

Example: `":CDP:FRAMe 1"`
Characteristics: *RST value: 0
SCPI: device-specific

SENSe:Power – Subsystem

This subsystem controls the parameters for the spectral power measurements. The numeric suffix in SENSe<1|2> is not significant in this subsystem.

COMMAND	PARAMETER	UNIT	COMMENT
[SENSe<1|2>]			
:POWer			Option FS-K72/K74
:ACHannel			
:ACPairs	<value>	--	
:BANDwidth			
[:CHANnel]	<value>	[Hz]	
:ACHannel	<value>	[Hz]	
:ALTernate<1|2>	<value>	[Hz]	
:MODE	<ABSolute|RELative>	--	
:PRESet	< MCACpower >	--	
:RLEVel	< -- >	--	
:REFerence			
:TXCHannel			
:AUTO	< MINimum|MAXimum|LHIGhest >	--	
:MANual	<value>	--	
:SPACing			
:CHANnel	<value>	[Hz]	
[: ACHannel]	<value>	[Hz]	
:ALTernate<1|2>	<value>	[Hz]	
:TXCHannel			
:COUNt	<value>	--	
:HSPeed	< ON|OFF >	--	
:NCORrection	< ON|OFF >	--	

:[SENSe<1|2>:]POWer:ACHannel:ACPairs <value>

This command sets the number of adjacent channels (upper and lower channel in pairs). The number 0 stands for pure channel power measurement.

Example: "POW:ACH:ACP 2"

Characteristics:
Range: 0|1|2|3
Unit: []
*RST value: 2
SCPI: device-specific

Query of results: :[SENSe<1|2>:]POWer:ACHannel:ACPairs?

Result: <0|1|2|3>

:[SENSe<1|2>:]POWer:ACHannel:BANDwidth[:CHANnel] <value>

This command sets the channel bandwidth of the radio communication system.The bandwidths of adjacent channels are not influenced by this modification.

Example: `"POW:ACH:BWID:CHAN 3.84MHz"`

Characteristics:

Range:	`100Hz ... 1GHz`
Unit:	`[Hz]`
*RST value:	`3.84 MHz`
SCPI:	device-specific

Query of results: `:[SENSe<1|2>:]POWer:ACHannel:BANDwidth[:CHANnel]?`

Result: `<100Hz ... 1GHz>`

:[SENSe<1|2>:]POWer:ACHannel:BANDwidth:ACHannel <value>

This command defines the channel bandwidth of the adjacent channel of the radio transmission system. If the bandwidth of the adjacent channel is changed, the bandwidths of all alternate adjacent channels are automatically set to the same value.

Example: `"POW:ACH:BWID:ACH 3.84MHz"`

Characteristics:

Range:	`100Hz ... 1GHz`
Unit:	`[Hz]`
*RST value:	`3.84 MHz`
SCPI:	device-specific

Query of results: `:[SENSe<1|2>:]POWer:ACHannel:BANDwidth:ACHannel?`

Result: `<100Hz ... 1GHz>`

:[SENSe<1|2>:]POWer:ACHannel:BANDwidth:ALTernate<1|2> <value>

This command defines the channel bandwidth of the first/second alternate adjacent channel of the radio transmission system. If the channel bandwidth of alternate adjacent channel 1 is changed, the bandwidth of alternate adjacent channel 2 is automatically set to the same value.

Example:
```
"POW:ACH:BWID:ALT1 3.84MHz"
"POW:ACH:BWID:ALT2 3.84MHz"
```

Characteristics:

Range:	`100Hz ... 1GHz`
Unit:	`[Hz]`
*RST value:	`3.84 MHz`
SCPI:	device-specific

Query of results: `:[SENSe<1|2>:]POWer:ACHannel:BANDwidth:ALTernate<1|2>?`

Result: `<100Hz ... 1GHz>`

:[SENSe<1|2>:] POWer:ACHannel:MODE ABSolute|RELative

This command toggles between absolute and relative adjacent channel measurement. For the relative measurement the reference value is set to the currently measured channel power by command `SENSe:POWer:ACHannel:REFerence:AUTO ONCE`.

ABSolute absolute adjacent channel measurement.

RELative relative adjacent channel measurement.

Example: `"POW:ACH:MODE ABS"`

Characteristics: *RST value: ABSolute
SCPI: device-specific

Query of results: :[SENSe<1|2>:]POWer:ACHannel:MODE?

Result: < ABSolute | RELative >

:[SENSe<1|2>:]POWer:ACHannel:PRESet MCACpower

This command adjusts the frequency span, the measurement bandwidths and the detector as required for the number of channels, the channel bandwidths and the channel spacings selected in the active power measurement. If necessary, adjacent-channel power measurement is switched on prior to the adjustment. To obtain valid results, a complete sweep with synchronization to the end of the sweep must be performed after the adjustment. Synchronization is possible only in the single-sweep mode.

Example: "POW:ACH:PRES MCAC"

Characteristics: *RST value: --
SCPI: device-specific

:[SENSe<1|2>:]POWer:ACHannel:PRESet:RLEVel

This command adapts the reference level to the measured channel power. This ensures, that the signal path of the instrument is not overloaded. Since the measurement bandwidth is significantly smaller than the signal bandwidth in channel power measurements, the signal path can be overloaded although the trace is still significantly below the reference level. If the measured channel power equals the reference level, the signal path is not overloaded.

Example: "POW:ACH:PRES:RLEV"

Characteristics: *RST value: --
SCPI: device-specific

:[SENSe<1|2>:]POWer:ACHannel:REFerence:TXCHannel:AUTO MINimum|MAXimum|LHIGhest

This command activates the automatic selection of a transmission channel to be used as a reference channel in relative adjacent-channel power measurements. The transmission channel with the highest power, the transmission channel with the lowest power, or the transmission channel nearest to the adjacent channels can be defined as a reference channel. The command is available only for multicarrier channel and adjacent-channel power measurements.

Example: "POW:ACH:REF:TXCH:AUTO MAX"
"POW:ACH:REF:TXCH:AUTO LHIG"

Features: Range:

MINimum	Transmission channel with the lowest power
MAXimum	Transmission channel with the highest power
LHIGhest	Lowermost transmission channel for the lower adjacent channels, uppermost transmission channel for the upper adjacent channels

Unit: []
*RST value: ---
SCPI: device-specific

:[SENSe<1|2>:]POWer:ACHannel:REFerence:TXCHannel:MANual <value>

This command selects a transmission channel to be used as a reference channel in relative adjacent-channel power measurements. The command is available only for multicarrier channel and adjacent-channel power measurements

Example: `"POW:ACH:REF:TXCH:MAN 1"`

Characteristics:

Range:	`<1 ... number of TX channels>`
Unit:	`[]`
*RST value:	`1`
SCPI:	device-specific

:[SENSe<1|2>:]POWer:ACHannel:SPACing:CHANnel <value>

This command defines the channel spacing for the carrier signals.

Example: `"POW:ACH:SPAC:CHAN 5MHz"`

Characteristics:

Range:	`100Hz ... 1GHz`
Unit:	`[Hz]`
*RST value:	`5MHz`
SCPI:	device-specific

Query of results: `:[SENSe<1|2>:]POWer:ACHannel:SPACing:CHANnel?`

Result: `<100Hz ... 1GHz>`

:[SENSe<1|2>:]POWer:ACHannel:SPACing[: ACHannel] <value>

This command defines the channel spacing of the adjacent channel to the TX channel. At the same time, the spacing of alternate adjacent channels 1 and 2 is set to the double or triple of the entered value.

Example: `"POW:ACH:SPAC:ACH 5MHz"`

Characteristics:

Range:	`100Hz ... 1GHz`
Unit:	`[Hz]`
*RST value:	`5MHz`
SCPI:	device-specific

Query of results: `:[SENSe<1|2>:]POWer:ACHannel:SPACing[:ACHannel]?`

Result: `<100Hz ... 1GHz>`

:[SENSe<1|2>:]POWer:ACHannel:SPACing:ALTernate<1|2> <value>

This command defines the spacing between the first (ALTernate1) or the second alternate adjacent channel (ALTernate2) and the TX channel.If the spacing to the alternate adjacent channel ALTernate1 is modified, the spacing to alternate adjacent channel 2 is set to 1.5 times the entered value.

Example:
`"POW:ACH:SPAC:ALT1 10MHz"`
`"POW:ACH:SPAC:ALT2 15MHz"`

Characteristics:

Range:	`100Hz ... 1GHz`
Unit:	`[Hz]`
*RST value:	`10MHz` (for ALTernate 1) `15MHz` (for ALTernate 2)
SCPI:	device-specific

Query of results: `:[SENSe<1|2>:]POWer:ACHannel:SPACing:ALTernate<1|2>?`

Result: `<100Hz ... 1GHz>`

:[SENSe<1|2>:]POWer:ACHannel:TXCHannel:COUNt <value>

This command selects the number of carrier signals. The command is available only for multicarrier channel and adjacent-channel leakage power measurements (`CALC:MARK:FUNC:POW:SEL MCAC`).

Example: `"POW:ACH:TXCH:COUN 4"`

Characteristics:
Range: `1...12`
Unit: `[]`
*RST value: `4`
SCPI: device-specific

Query of results: `:[SENSe<1|2>:]POWer:ACHannel:TXCHannel:COUNt?`

Result: `<1...12>`

:[SENSe<1|2>:] POWer:HSPeed ON|OFF

This command switches on or off the high-speed adjacent channel leakage power measurement. The measurement itself is performed in the time domain on the center frequencies of the individual channels. The command automatically switches to the time domain and back. A weighting filters with root raised cosine characteristic and 0.22 roll off is used for band limitation.

ON high-speed measurement with RRC filter in time domain.

OFF measurement with gaussian filters in frequency domain.

Example: `"POW:HSP ON"`

Characteristics:
*RST value: `OFF`
SCPI: device-specific

Query of results: `:[SENSe<1|2>:]POWer:HSPeed ?`

Result: `<1|0>`

:[SENSe<1|2>:]POWer:NCORrection ON|OFF

This command switches on or off the correction of the instrument inherent noise for ACLR measurement. On activating this function, a reference measurement of the instrument inherent noise is performed. The measured noise power is then subtracted from the power in the examined channel. The instrument inherent noise is then re-determined after any change of the center frequency, resolution bandwidth, sweep time and level setting by repeating the reference measurement in the new instrument setting.

ON inherent noise correction is switched on.

OFF inherent noise correction is switched off.

Example: `"POW:NCOR ON"`

Characteristics:
*RST value: `OFF`
SCPI: device-specific

Query of results: `:[SENSe<1|2>:]POWer:NCORrection ?`

Result: `<1|0>`

SENSe:SWEep – Subsystem

:[SENSe<1|2>:]SWEep:TIME <value>

This command defines the sweep time. If `SWEep:TIME` is directly programmed, automatic coupling to resolution bandwidth and video bandwidth is switched off.

Example: `"SWE:TIME <value>"`

Characteristics:

Range:	`0.005 ... 16000`
Unit:	`[s]`
*RST value:	`0.16`
SCPI:	device-specific

Query of results: `:[SENSe<1|2>:]SWEep:TIMe ?`

Result: `<0.005 ... 16000>`

STATus-QUEStionable:SYNC Register

This register contains information on the error situation in the code domain power analysis of the FS-K72/K74 option. It can be queried with the following commands:

COMMAND	PARAMETER	UNIT	COMMENT
STATus			
:QUEStionable			Option FS-K72/K74
:SYNC			
:CONDition ?	<numeric_value>	[]	
[:EVENT] ?	<numeric_value>	[]	

:STATUS:QUEStionable:SYNC:CONDition ?

This command reads the information on the error situation in the code domain power analysis of the FS-K72 option.

Example: ":STATUS:QUEStionable:SYNC:CONDition ?"

Characteristics: *RST value: OFF
SCPI: device-specific

Return value: (see Table 7-1)

:STATUS:QUEStionable:SYNC[:EVENT] ?

This command reads the information on the error situation in the code domain power analysis of the FS-K72 option. The value can only be read once.

Example: ":STATUS:QUEStionable:SYNC[:EVENT] ?"

Characteristics: *RST value: OFF
SCPI: device-specific

Return value: (see Table 7-1)

Table 7-1: Definition of the error bits of the SYNC register

Bit No.	Definition
0	Not used in FS-K72/K74.
1	**K72/K74 Frame Sync failed** This bit is set when synchronization is not possible within the application. Possible reasons: Incorrectly set frequency Incorrectly set level Incorrectly set scrambling code Incorrectly set values for Q-INVERT or SIDE BAND INVERT Invalid signal at input
2 to 4	Not used in the FS-K72 application.
5	**K72/K74 Incorrect Pilot Symbol** This bit is set when one or more of the received pilot symbols are not equal to the specified pilot symbols of the 3GPP standard. Possible reasons: Incorrectly sent pilot symbols in the received frame. Low signal to noise ratio (SNR) of the WCDMA signal. One or more code channels has a significantly lower power level compared to the total power. The incorrect pilots are detected in these channels because of low channel SNR. One or more channels are sent with high power ramping. In slots with low relative power to total power, the pilot symbols might be detected incorrectly (check the signal quality by using the symbol constellation display).
6 to 14	Not used in the FS-K72/K74 application.
15	This bit is always 0.

TRACe – Subsystem

COMMAND	PARAMETER	UNIT	COMMENT
TRACe			
:DATA?	FINal		
[:DATA]	TRACE1 | TRACE2 | ABITstream | PWCDp | CWCDp |		

:TRACe1[:DATA]? FINal1

This command returns the peak list. For each peak the following entries are given:

```
. <freq1>, <level1>, <delta level 1>, <freq2>, <level2>, <delta level 2>,
... <freq n>, <level n>, <delta level n>
```

Example: `":TRACe1[:DATA]? FINal1"`

Characteristics: *RST value: ---
SCPI: device-specific

Query of results: `:TRACe1[:DATA]? FINal1`

Result:
```
<freq> [Hz]          - frequency of the peak
<level>[dBm]         - absolute level of the peak
<delta level>       [dB]     - distance to the limit line
```

:TRACe[:DATA] TRACE1 | TRACE2 | ABITstream | PWCDp | CWCDp |

This command transfers trace data from the controller to the instrument; the query reads trace data from the instrument.

Example:
```
":TRAC TRACE1,"+A$    (A$: data list in current format)
":TRAC? TRACE1"
```

Characteristics: *RST value: -
SCPI: conforming

TRACE1, TRACE2, CTABle, PWCDp, CWCDp (K74) or ABITstream can be queried depending on the display mode.

TRACE1

CODE PWR ABSOLUTE / RELATIVE, CHANNEL TABLE (TRACE1)

Each channel is defined by the class, the channel number, the absolute level, the relative level and the timing offset. The class denotes the spreading factor of the channel.
Class 9 corresponds to the highest spreading factor (512, symbol rate 7.5 ksps), class 2 to the lowest admissible spreading factor (4, symbol rate 960 ksps).
Five values are transmitted for each channel.
<class>,<channel number>,<absolute level>,<relative level>,<timing offset>, ...

CODE PWR ABSOLUTE / RELATIVE: The channels are output in ascending order sorted by code number, i.e. in the same sequence they are displayed on screen.

CHANNEL TABLE: The channels are sorted by code class, i.e. the unassigned channels are transmitted last.

The units are:

Absolute level	dBm
Relative level	dB referenced to CPICH or total power
Timing offset	chips

The example shows the results of a query for three channels with the following configuration:
1st channel: spreading factor 512, channel number 7, timing offset 0
2nd channel: spreading factor 4, channel number 1, timing offset 256 chips
3rd channel: spreading factor 128, channel number 255, timing offset 2560 chips

This yields the following result: 9, 7, -40, -20, 0, 2, 1, -40, -20, 256, 7, 255, -40, -20, 2560
The channel order is the same as in the CDP diagram, i.e. it depends on their position in the code domain of spreading factor 512

PWCDp Can be set if CODE PWR ABSOLUTE / RELATIVE, CHANNEL TABLE is selected for trace 1. The pilot length is transmitted in addition to the values as transmitted for trace 1. The pilot length is specified in symbols.
Six values are transmitted for each channel:
< class>,<channel number>,<absolute level>,<relative level>,<timing offset> or <I/Q-mapping>, <pilot length>,...

CTABle Can be set if CODE PWR ABSOLUTE / RELATIVE, CHANNEL TABLE is selected for trace 1. The pilot length and the channel state (active, inactive) are transmitted in addition to the values transmitted for trace 1. The pilot length is specified in symbols.
Seven values are transmitted for each channel:
< class>,<channel number>,<absolute level>,<relative level>,<timing offset>,<pilot length>, <active|inactive>...

CWCDp Can be set if CODE PWR ABSOLUTE / RELATIVE, CHANNEL TABLE is selected for trace 1. The pilot length, channel state, channel type, modulation type and a reserved value are transmitted in addition to the values transmitted for trace 1. For each channel, 10 values are transmitted
<code class>,<channel number>,<absolute level>,<relative level>, <timing offset>, <pilot length>, <active flag>, <channel type>, <modulation type>, <reserved>...
The channels are output in ascending order sorted by code number, i.e. in the same sequence they are displayed on screen.

No.	Parameter	Range	Unit	Explanation
1)	<code class>	{2 ... 9}	[1]	Code class of the channel.
2)	<channel number>	{0 ... 511}	[1]	Code number of the channel.
3)	<absolute level>	{-∞ ... ∞}	[dBm]	Absolute level of the code channel at the selected channel slot. (The channel slot can be marked by the SELECTED CPICH slot.)
4)	< relative level >	{-∞ ... ∞}	[dB]	Relative level of the code channel at the selected channel slot referenced to CPICH or total power. (The channel slot can be marked by the SELECTED CPICH slot.)
5)	<timing offset>	{0 ... 38400}	[chips]	Timing offset of the code channel to the frame start. The value is measured in chips. The step width is 256 chips in the case of code class 2 to 8, and 512 chips in the case of code class 9.
6)	<pilot length>	{0,2,4,8,16}	[symbols]	Pilot length of the code channel. According to the 3GPP standard, the pilot length range depends on the code class.
7)	<active flag>	{0,1}	[1]	Flag to indicate whether a channel is active 0 - channel not active 1 - channel active
8)	<channel type>	{0 ... 9}	[1]	Channel type indication
		0 - DPCH		**D**edicated **P**hysical **Ch**annel of a standard frame
		1 - PICH		**P**aging **I**ndication **Ch**annel
		2 - CPICH		**C**ommon **P**ilot **Ch**annel

		3 - PSCH	Primary Synchronization Channel
		4 - SSCH	Secondary Synchronization Channel
		5 - PCCPCH	Primary Common Control Physical Channel
		6 - SCCPCH	Secondary Common Control Physical Channel
		7 - HS_SCCH	HSDPA: High Speed Shared Control Channel
		8 - HS_PDSCH	HSDPA: High Speed Physical Downlink Shared Channel
		9 - CHAN	Channel without any pilot symbols (QPSK modulated)
		10 - DPCH-CPRSD	Dedicated Physical Channel of compressed mode
9)	<modulation type>	{2,4,15}	[1] Modulation type of the code channel at the selected channel slot. (The channel slot can be marked by adjusting SELECT CPICH slot.)
		2 - QPSK	Modulation type QPSK.
		4 - 16QAM	Modulation type 16QAM.
		15 - NONE	There is no power in the selected channel slot [slot is switched OFF]. (According to 3GPP, the power of an HSDPA channel can be switched every 2 ms, i.e. 3 slots.)
10)	<reserved>	{0}	[1] Reserved for future functionality.

ABITstream

Can be set only if CALC2:FEED "XTIM:CDP:BSTReam" is selected (in the lower bit stream window). This command returns the bit streams of all 15 slots one after the other. The output format may be REAL, UINT or ASCII. The number of bits of a 16QAM-modulated channel is twice that of a QPSK-modulated channel.
The output format is equal to that of the ":TRACe1:DATa? TRACE2" command in case of an activated bitstream display. The only difference is the number of symbols which are evaluated. The ABITSTREAM command evaluates all symbols of one frame. One value is transferred per bit (range 0,1,). Each symbol contains of two (QPSK) or four (16QAM) consecutive bits. The number of symbols is not constant and may vary depending on the selected channel and its symbol modulation type. The bit stream may contain invalid (symbols without power).
If the analyzer is equipped with FS-K72 only, the values and numbers of the bits are as follows:

Unit: []
Range: {0,1,6,9}
Bits per symbol: $N_{BitPerSymb} = 2$
Number of symbols: $N_{Symb} = 150*2^{(8\text{-Code Class})}$
Number of bits: $N_{Bit} = N_{Symb} * N_{BitPerSymb}$
Format: $Bit_{00}, Bit_{01}, Bit_{10}, Bit_{11}, Bit_{20}, Bit_{21}, \ldots$, $Bit_{NSymb\,0}, Bit_{NSymb\,1}$
Explanation:
0 - Low state of a transmitted bit
1 - High state of a transmitted bit
6 - Bit of a symbol of a suppressed slot of a DPCH in Compressed Mode (DPCH-CPRSD)
9 - Bit of a suppressed symbol of a DPCH (e.g. TFCI off)

If the analyzer is equipped additionally with FS-K74, the values and numbers of the bits are as follows:

Unit: []
Range: {0,1,6,7,8,9}
Bits per symbol: $N_{BitPerSymb} = \{2,4\}$
Max. bits per symbol: $N_{BitPerSymb\_MAX} = MAX\left\{N_{BitPerSymb}(slot)\right\}_{slot=1}^{15}$
Symbols per slot: $N_{Symb\_Slot} = 10*2^{(8\text{-Code Class})}$
Symbols per frame: $N_{Symb\_Frame} = 15 * N_{Symb\_Slot} = 150*2^{(8\text{-Code Class})}$
Number of bits: $N_{Bit} = N_{Symb\_Frame} * N_{BitPerSymb\_MAX}$

Format (QPSK): $Bit_{00}, Bit_{01}, Bit_{10}, Bit_{11}, Bit_{20}, Bit_{21}, \ldots.$,
$Bit_{NSymb\_Frame\ 0}, Bit_{NSymb\_Frame\ 1}$

Format (16QAM): $Bit_{00}, Bit_{01}, Bit_{02}, Bit_{03}, Bit_{10}, Bit_{11}, Bit_{12}, Bit_{13}, \ldots\ldots$,
$Bit_{NSymb\_Frame\ 0}, Bit_{NSymb\_Frame\ 1}, Bit_{NSymb\_Frame\ 2}$,
$Bit_{NSymb\_Frame\ 3}$

Explanation:
- 0 - Low state of a transmitted bit
- 1 - High state of a transmitted bit
- 6 - Bit of a symbol of a suppressed slot of a DPCH in Compressed Mode (DPCH-CPRSD)
- 7 - Bit of a switched-off symbol of an HS-PDSCH channel
- 8 - Reserved value of a QPSK symbol bit in a frame which includes also 16QAM symbols.
- 9 - Bit of a suppressed symbol of a DPCH (e.g. TFCI off)

The values 7 and 8 are only used in case of a varying modulation type of an HS-PDSCH channel. In this case the number of bits per symbol ($N_{BitPerSymb}$) varies too. However, the length of the transmitted bit vector (N_{Bit}) depends only of the maximum number of bits per symbol in that frame. That means, if the modulation type changes throughout the frame this will not influence the number of biots being transmitted.

Example 1: Some slots of the frame are 16QAM modulated, other are QPSK modulated and some are switched OFF (NONE).
If one or more slots of the frame are 16QAM modulated, 4 bits per symbol are transmitted. In any slot of the frame with QPSK modulation, the first two of the four bits are marked by the number 8 and the last two represent the transmitted QPSK symbol. If no power is transmitted in a slot, 4 entries per symbol of value 7 are transmitted.

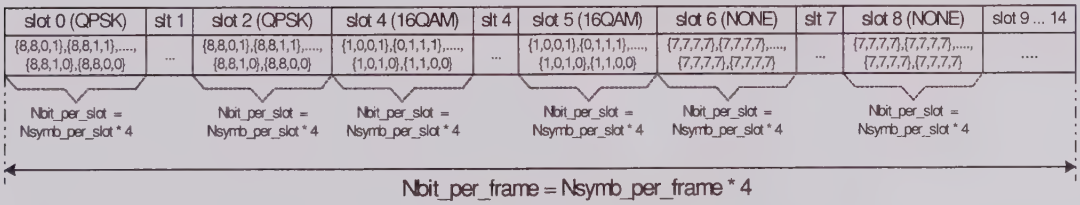

IEEE response: 8,8,1,0,....,8,8,0,1,1,1,0,1,....,0,1,1,0,7,7,7,7,...7,7,7,7

Example 2: Some slots of the frame are QPSK modulated and some are switched OFF.
If one or more slots of the frame are QPSK modulated and no slot is 16QAM modulated, 2 bits per symbol are transmitted. If no power is transmitted in a slot, 2 entries per symbol of value 7 are transmitted.

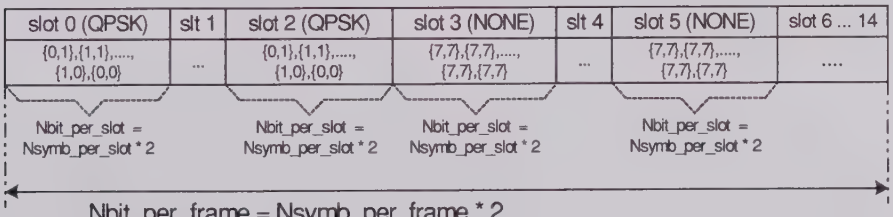

IEEE response: 1,1,0,1,....,0,1,1,0,7,7,7,7,...7,7,7,7

Third case: Some slots of a DPCH are suppressed because of compressed mode transmittion. The bits of the suppressed slots are marked by the digit '6'. In this case always 2 bits per symbol are transmitted.

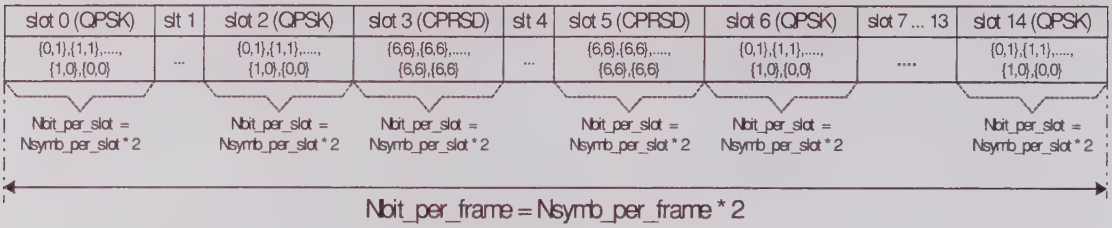

IEEE response: 1,1,0,1,....,0,1,1,0,6,6,6,6,...6,6,6,6,1,1,0,1,....,0,1,1,0

For TRACE1 or TRACE2, the following measured values are transferred depending on the display mode:

CODE DOMAIN ERROR POWER (TRACE1)

Output: Five values are transmitted for each code class 9 channel. The channels are sorted by code number

Format: <code class>$_1$, <code number>$_1$, <CDEP>$_1$, <channel flag>$_1$, <code class>$_2$, <code number>$_2$, <CDEP>$_2$, <channel flag>$_2$,

,....,

<code class>$_{512}$, <code number>$_{512}$, <CDEP>$_{512}$, <channel flag>$_{512}$

Unit: < [1] >, < [1] >, < [dB] >,< [1] >

Range: < 8 >, < 0...511 >, < -∞ ... ∞ >, < 0 ; 1 >

Quantity: 512

Explanation:

code class: [1] Highest code class of an downlink signal. It is always set to 9 (CC9).

code number: [1] Code number of the evaluated CC9 channel.

CDEP: [dB] Code domain error power value of the CC9 channel.

channel flag: [1] Denotes whether the CC9 channel belongs to an assigned code channel:

Range:

0b00	0d0	- CC9 is inactive.
0b01	0d1	- CC9 channel belongs to an active code channel.
0b11	0d3	- CC9 channel belongs to an active code channel with sent pilot symbols incorrect.

POWER VS SLOT (TRACE2)

Sixteen (16) pairs of slots (slot number of CPICH) and level values (for 16 slots) are always transferred.
<slot number>, <level value in dB>, <slot number>, <level value in dB>, ...

RESULT SUMMARY (TRACE2)

The results of the RESULT SUMMARY are output in the following order:

<composite EVM>, <peak CDE>, <carr freq error>, <chip rate error>, <total power>, <trg to frame>, <EVM peak channel>, <EVM mean channel>, <class>, <channel number>, <power abs. channel>, <power rel. channel>, <timing offset>, <I/Q offset>, <I/Q imbalance>

The units are:

EVM peak channel/mean channel, composite EVM, I/Q offset/imbalance: %
Peak CDE, total power and power abs. channel: dB
Power rel. Channel: dB referenced to CPICH or total power
Carr freq error: Hz
Chip rate error: ppm
Timing offset: chips
Trg to frame: µs

COMPOSITE EVM PEAK and CODE DOMAIN ERR (TRACE2)

Fifteen (15) pairs of slot (slot number of CPICH) and values are always transferred.
COMPOSITE EVM: <slot number>, <value in %>, ...
PEAK CODE DOMAIN ERR: <slot number>, <level value in dB>, ...

COMPOSITE CONSTELLATION

The real and the imaginary components of the chip constellation at the selected slot are transferred. The values are normalized to the square root of the average power at the selected slot:

Output:	List of I/Q values of all chips per slot
Format:	Re_1, Im_1, Re_2, Im_2, ..., Re_{2560}, Im_{2560}
Unit:	[1]
Quantity:	2560

POWER VERSUS SYMBOL

The power of each symbol at the selected slot is transferred. The values indicate the difference to the reference power in dB. The number of the symbols depends on the spreading factor of the selected channel.

Output:	List of symbol power relative to the reference power
Format:	Val_1, Val_2, ..., Val_{NOF}
Unit:	[dB]
Quantity:	$NOF_{Symbols} = 10 \cdot 2^{(8-Code\,Class)}$

SYMBOL CONSTELLATION(TRACE2)

The real and the imaginary components are transferred as a pair:
<re 0>, <im 0>, <re 1>, <im 1>, ..., <re n>, <im n>

The number of level values depends on the spreading factor:

Spreading factor 512	5 values
Spreading factor 256	10 values
Spreading factor 128	20 values
Spreading factor 64	40 values
Spreading factor 32	80 values
Spreading factor 16	160 values
Spreading factor 8	320 values
Spreading factor 4	640 value

SYMBOL EVM (TRACE2)

The number of level values depends on the spreading factor:

Spreading factor 512	5 values
Spreading factor 256	10 values
Spreading factor 128	20 values
Spreading factor 64	40 values
Spreading factor 32	80 values
Spreading factor 16	160 values
Spreading factor 8	320 values
Spreading factor 4	640 value

BITSTREAM (TRACE2)

The bit stream of one slot is transferred. One value is transferred per bit (range 0, 1). Each symbol contains two consecutive bits in the case of a QPSK modulated slot and 4 consecutive bits in the case of a 16QAM modulated slot. The number of symbols is not constant and may vary for each sweep. Specific symbols in the bit stream may be invalid depending on the channel type and the bit rate (symbols without power). The assigned invalid bits are marked by on of the digits "6", "7" or "9".
If The analyzer is equipped with FS-K72 only, the values and numbers of the bits are as follows:

Unit: []

Range: {0,1,6,9}
Bits per symbol: $N_{BitPerSymb} = 2$
Number of symbols: $N_{Symb} = 10*2^{(8\text{-Code Class})}$
Number of bits: $N_{Bit} = N_{Symb} * N_{BitPerSymb}$
Format: $Bit_{00}, Bit_{01}, Bit_{10}, Bit_{11}, Bit_{20}, Bit_{21}, \ldots$,
$Bit_{NSymb\ 0}, Bit_{NSymb\ 1}$

Explanation:
0 - Low state of a transmitted bit
1 - High state of a transmitted bit
6 - Bit of a symbol of a suppressed slot of a DPCH in Compressed Mode (DPCH-CPRSD)
9 - Bit of a suppressed symbol of a DPCH (e.g. TFCI off)

If the analyzer is equipped additionally with FS-K74, the values and numbers of the bits are as follows:

Unit: []
Range: {0,1,6,7,9}
Bits per symbol: $N_{BitPerSymb} = \{2,4\}$
Symbols per slot: $N_{Symb\_Slot} = 10*2^{(8\text{-Code Class})}$
Number of bits: $N_{Bit} = N_{Symb\_Slot} \cdot N_{BitPerSymb}$
Format (QPSK): $Bit_{00}, Bit_{01}, Bit_{10}, Bit_{11}, Bit_{20}, Bit_{21}, \ldots$,
$Bit_{NSymb\_Frame\ 0}, Bit_{NSymb\_Frame\ 1}$
Format (16QAM): $Bit_{00}, Bit_{01}, Bit_{02}, Bit_{03}, Bit_{10}, Bit_{11}, Bit_{12}, Bit_{13}, \ldots$,
$Bit_{NSymb\_Frame\ 0}, Bit_{NSymb\_Frame\ 1}, Bit_{NSymb\_Frame\ 2}$,
$Bit_{NSymb\_Frame\ 3}$

Explanation:
0 - Low state of a transmitted bit
1 - High state of a transmitted bit
6 - Bit of a symbol of a suppressed slot of a DPCH in Compressed Mode (DPCH-CPRSD)
7 - Bit of a switched-off symbol of an HS-PDSCH channel
9 - Bit of a suppressed symbol of a DPCH (e.g. TFCI off)

Table of Softkeys with Assignment of IEC/IEEE Commands

3G FDD BS

```
INSTrument:SELect BWCDpower|WCDPower
```

POWER

```
:CONFigure<1>:WCDPower:MEASurement POWer
```

Query of results

```
:CALCulate<1>:MARKer<1>:FUNCtion:POWer:RESult? CPOWer
```

ADJUST REF LVL

```
:[SENSe<1|2>:]POWer:ACHannel:PRESet:RLEVel
```

ACLR

```
:CONFigure<1>:WCDPower:MEASurement ACLR
```

Query of results:

```
:CALCulate<1>:MARKer<1>:FUNCtion:POWer:RESult? ACPower
```

NO. OF ADJ CHAN

```
:SENSe<1>:POWer:ACHannel:ACPairs 1
```

Query of results:

```
:SENSe<1>:POWer:ACHannel:ACPairs?
```

ADJUST SETTINGS

```
:SENSe<1>:POWer:ACHannel:PRESet ACPower
```

SWEEP TIME

```
:SENSe<1>:SWEep:TIME <value>
```

Query of results:

```
:SENSe<1>:SWEep:TIME ?
```

Result:

```
<value> [sec]
```

NOISE CORR ON OFF

```
:SENSe<1>:POWer:NCORrection ON | OFF
```

Query of results:

```
:SENSe<1>:POWer:NCORrection ?
```

Result:

```
<0 | 1>
```

FAST ACLR ON OFF

```
:SENSe<1>:POWer:HSPeed ON | OFF
```

Query of results:

```
:SENSe<1>:POWer:HSPeed ?
```

Result:

```
<0 | 1>
```

DIAGRAMM FULL SIZE

```
----
```

ADJUST REF LVL

```
:SENSe<1>:POWer:ACHannel:PRESet:RLEVel
```

ACLR LIMIT CHECK

```
:CALCulate<1>:LIMit1:ACPower ON | OFF
```

Query of results:

```
:CALCulate<1>:LIMit1:ACPower ?
```

Result:

```
<0 | 1>
```

Query of results:

```
:CALCulate<1>:LIMit1:ACPower:ACHannel:RESult?
```

Result:

$<PASSED_{Left\ SB}\ |\ FAILED_{Left\ SB}\ ,\ PASSED_{Right\ SB}\ |\ FAILED_{Right\ SB}>$

Query of results:

```
:CALCulate<1>:LIMit1:ACPower:ALTernate<1..2>:RESult?
```

Result:

$<PASSED_{Left\ SB}\ |\ FAILED_{Left\ SB}\ ,\ PASSED_{Right\ SB}\ |\ FAILED_{Right\ SB}>$

EDIT ACLR LIMIT

:CALCulate<1>:LIMit1:ACPower:ACHannel:[RELative] <Val_{left},Val_{right}>
Query of results: :CALCulate<1>:LIMit1:ACPower:ACHannel:[RELative] ?
Result: <Val_{left},Val_{right}> [dBc]

:CALCulate<1>:LIMit1:ACPower:ACHannel:[RELative]:STATe ON
Query of results: :CALCulate<1>:LIMit1:ACPower:ACHannel:[RELative]:STATe ?
Result: <0 | 1>

:CALCulate<1>:LIMit1:ACPower:ALTernate<1..2>:[RELative] <Val_{left},Val_{right}>
Query of results: :CALCulate<1>:LIMit1:ACPower:ACHannel:[RELative] ?
Result: <Val_{left},Val_{right}> [dBc]

:CALCulate<1>:LIMit1:ACPower:ALTernate<1..2>:[RELative]:STATe ON
Query of results: :CALCulate<1>:LIMit1:ACPower:ACHannel:[RELative]:STATe ?
Result: <0 | 1>

:CALCulate<1>:LIMit1:ACPower:ACHannel:ABSolute <Val_{left},Val_{right}>
Query of results: :CALCulate<1>:LIMit1:ACPower:ACHannel:ABSolute ?
Result: <Val_{left},Val_{right}> [dBm]

:CALCulate<1>:LIMit1:ACPower:ACHannel:ABSolute:STATe ON
Query of results: :CALCulate<1>:LIMit1:ACPower:ACHannel:ABSolute:STATe ?
Result: <0 | 1>

:CALCulate<1>:LIMit1:ACPower:ALTernate<1..2>:ABSolute <Val_{left},Val_{right}>
Query of results: :CALCulate<1>:LIMit1:ACPower:ACHannel:ABSolute ?
Result: <Val_{left},Val_{right}> [dBm]

:CALCulate<1>:LIMit1:ACPower:ALTernate<1..2>:ABSolute:STATe ON
Query of results: :CALCulate<1>:LIMit1:ACPower:ACHannel:ABSolute:STATe ?
Result: <0 | 1>

CHANNEL BANDWIDTH

:SENSe<1>:POWer:ACHannel:BWIDth <Value> Hz|kHz|MHz|GHz
Query of results: :SENSe<1>:POWer:ACHannel:BWIDth ?
Result: <Value> [Hz]

ADJ CHAN BANDWIDTH

:SENSe<1>:POWer:ACHannel:BWIDth:ACHannel <Value> Hz|kHz|MHz|GHz
Query of results: :SENSe<1>:POWer:ACHannel:BWIDth:ACHannel ?
Result: <Value> [Hz]

:SENSe<1>:POWer:ACHannel:BWIDth:ALTernate<1..2> <Value> Hz|kHz|MHz|GHz
Query of results: :SENSe<1>:POWer:ACHannel:BWIDth:ALTernate<1..2> ?
Result: <Value> [Hz]

ADJ CHAN SPACING

:SENSe<1>:POWer:ACHannel:SPACing[:ACHannel] <Value> Hz|kHz|MHz|GHz
Query of results: :SENSe<1>:POWer:ACHannel:SPACing[:ACHannel] ?
Result: <Value> [Hz]

:SENSe<1>:POWer:ACHannel:SPACing:ALTernate<1..2> <Value> Hz|kHz|MHz|GHz
Query of results: :SENSe<1>:POWer:ACHannel:SPACing:ALTernate<1..2> ?
Result: <Value> [Hz]

ACLR ABS REL

:SENSe<1>:POWer:ACHannel:MODE ABSolute | RELative
Query of results: :SENSe<1>:POWer:ACHannel:MODE ?
Result: <ABS | REL>

CHAN PWR / Hz

:CALCulate1:MARKer1:FUNCtion:POWer:RESult:PHZ ON|OFF
Query of results: :CALCulate1:MARKer1:FUNCtion:POWer:RESult:PHZ ?
Result: <0 | 1>

MULTI CARR ACLR

CONFigure<1>:WCDPower[:BTS]:MEASurement MCACIr

CP / ACP CONFIG

NO. OF ADJ CHAN

```
:[SENSe<1|2>:]POWer:ACHannel:ACPairs   <value>
Query of results:    :[SENSe<1|2>:]POWer:ACHannel:ACPairs?
Range:               <0|1|2|3>
```

NO. OF TX CHAN

```
:[SENSe<1|2>:]POWer:ACHannel:TXCHannel:COUNt   <value>
Query of results:    :[SENSe<1|2>:]POWer:ACHannel:TXCHannel:COUNt?
Range:               <1 ... 12>
```

CHANNEL BANDWIDTH

```
:[SENSe<1|2>:]POWer:ACHannel:BANDwidth[:CHANnel]  <value>
:[SENSe<1|2>:]POWer:ACHannel:BANDwidth:ACHannel <value>
:[SENSe<1|2>:]POWer:ACHannel:BANDwidth:ALTernate<1|2> <value>
Range:               <100Hz ... 1GHz>
```

CHANNEL SPACING

```
:[SENSe<1|2>:]POWer:ACHannel:SPACing:CHANnel  <value>
:[SENSe<1|2>:]POWer:ACHannel:SPACing[: ACHannel] <value>
:[SENSe<1|2>:]POWer:ACHannel:SPACing:ALTernate<1|2> <value>
Range:               <100Hz ... 1GHz>
```

ACP REF SETTINGS

```
:[SENSe<1|2>:]POWer:ACHannel:REFerence:TXCHannel:MANual   <value>
:[SENSe<1|2>:]POWer:ACHannel:REFerence:TXCHannel:AUTO
                                                MINimum|MAXimum|LHIGhest
```

CP / ACP ABS REL

```
:[SENSe<1|2>:] POWer:ACHannel:MODE   ABSolute|RELative
```

CHAN PWR / HZ

```
:CALCulate<1|2>:MARKer1:FUNCtion:POWer:RESult:PHZ   ON|OFF
```

ADJUST SETTINGS

```
:[SENSe<1|2>:]POWer:ACHannel:PRESet   MCACpower
```

ACP LIMIT CHECK

```
CALCulate<1|2>:LIMit1:ACPower[:STATe]   ON | OFF
CALCulate<1|2>:LIMit1:ACPower:ACHannel:RESult?
CALCulate<1|2>:LIMit1:ACPower:ALTernate<1|2>:RESult?
```

EDIT ACP LIMIT

```
CALCulate<1|2>:LIMit1:ACPower[:STATe]   ON | OFF
CALCulate<1|2>:LIMit1:ACPower:ACHannel[:RELative]       <value>,<value>
CALCulate<1|2>:LIMit1:ACPower:ACHannel[:RELative]:STATe   ON | OFF
CALCulate<1|2>:LIMit1:ACPower:ACHannel:ABSolute         <value>,<value>
CALCulate<1|2>:LIMit1:ACPower:ACHannel:ABSolute:STATe ON | OFF
CALCulate<1|2>:LIMit1:ACPower:ALTernate<1|2>[:RELative] <value>,<value>
CALCulate<1|2>:LIMit1:ACPower:ALTernate<1|2>[:RELative]:STATe   ON | OFF
CALCulate<1|2>:LIMit1:ACPower:ALTernate<1|2>:ABSolute   <value>,<value>
CALCulate<1|2>:LIMit1:ACPower:ALTernate<1|2>:ABSolute:STATe ON | OFF
```

SWEEP TIME

```
:[SENSe<1|2>:]SWEep:TIME   <value>
```

NOISE CORR ON OFF

```
:[SENSe<1|2>:]POWer:NCORrection   ON|OFF
```

FAST ACP ON OFF

```
:[SENSe<1|2>:] POWer:HSPeed   ON|OFF
```

DIAGRAM FULL SIZE

```
:DISPlay[:WINDow<1|2>]:SIZE  LARGe | SMALl
```

ADJUST REF LVL

```
:[SENSe<1|2>:]POWer:ACHannel:PRESet:RLEVel
```

SPECTRUM EM MASK

```
:CONFigure:WCDPower:MEASurement ESPectrum
```

Query of results: `:CALCulate<1>:LIMit<1>:FAIL?`

LIMIT LINE AUTO

```
:CALCulate<1>:LIMit<1>:ESPectrum:MODE AUTO
```

LIMIT LINE MANUAL

```
:CALCulate<1>:LIMit<1>:ESPectrum:MODE MANual
:CALCulate<1>:LIMit<1>:ESPectrum:VALue <numeric_value>
```

LIMIT LINE USER

```
:CALCulate:LIMit<1>:NAME <string>
:CALCulate:LIMit<1>:UNIT DBM
:CALCulate:LIMit<1>:CONTrol[:DATA] <num_value>, <num_value>, ...
:CALCulate:LIMit<1>:CONTrol:DOMain FREQuency
:CALCulate:LIMit<1>:CONTrol:TRACe 1
:CALCulate:LIMit<1>:CONTrol:OFFset <num_value>
:CALCulate:LIMit<1>:CONTrol:MODE   RELative

:CALCulate:LIMit<1>:UPPer[:DATA] <num_value>, <num_value>..
:CALCulate:LIMit<1>:UPPer:STATe   ON | OFF
:CALCulate:LIMit<1>:UPPer:OFFset <num_value>
:CALCulate:LIMit<1>:UPPer:MARGin <num_value>
:CALCulate:LIMit<1>:UPPer:MODE  ABSolute
:CALCulate:LIMit<1>:UPPer:SPACing LINear
```

Note

1 -If the y values are entered by means of the `:CALCulate:LIMit<1>:LOWer[:DATA]` command, the limit check result is "failed" if the limit line is underrange.

1 -If a user-defined limit line is activated, it has priority over limit lines selected with AUTO and MANUAL.

RESTORE STD LINES

```
:CALCulate:LIMit:ESPectrum:RESTore
```

PEAK SEARCH

```
:CALCULATE<1|2>:PEAKsearch
```

PEAKS PER RANGE

```
:CALCULATE<1|2>:PEAKsearch:SUBRanges  <value>
Query of Results:     :CALCULATE<1|2>:PEAKsearch:SUBRanges?
Result:               <value>
Range:                1 ... 50
```

MARGIN

```
:CALCULATE<1|2>:PEAKsearch:MARGin <value>
Query of Results:    :CALCULATE<1|2>:PEAKsearch:MARGin?
Result:              <value>
Range:               -200dB ... 200 dB
```

VIEW PEAK LIST

```
:TRACe1[:DATA]? FINAll
Result:     <freq1>, <level1>, <delta level 1>,
            <freq2>, <level2>, <delta level 2>,
                        ...
            <freq n>, <level n>, <delta level n>
```

SORT BY FREQUENCY

```
---
```

SORT BY DELTA LIM

```
---
```

ASCII FILE EXPORT

```
:MMEMory:STORe1:FINal 'A:\final.dat'
```

DECIM SEP . ,

```
:FORMat:DEXPort:DSEParator POINt | COMMa
```

PAGE UP

```
---
```

PAGE DOWN

```
---
```

ADJUST REF LVL

```
:[SENSe<1|2>:]POWer:ACHannel:PRESet:RLEVel
```

OCCUPIED BANDWIDTH

```
:CONFigure<1>:WCDPower:MEASurement OBANdwidth
```

Query of results: `:CALCulate<1>:MARKer<1>:FUNCtion:POWer:RESult? OBANdwidth`

% POWER BANDWIDTH

```
:SENSe<1>:POWer:BANDwidth <value> PCT
```

Query of results: `:SENSe<1>:POWer:BANDwidth ?`

Result: `<value> [%]`

ADJUST REF LVL
:SENSe1:POWer:ACHannel:PRESet:RLEVel

ADJUST SETTINGS
:SENSe1:POWer:ACHannel:PRESet OBWidth

STATISTICS
:CONFigure:WCDPower:MEASurement CCDF or
:CALCulate:STATistics[:BTS]:CCDF[:STATe] ON
Query of results: CALCulate:MARKer:X?

APD
:CALCulate1:STATistics:APD:STATe ON
Query of results: :CALCulate1:STATistics:APD:STATe?
Result: <0|1>

CCDF
:CALCulate1:STATistics:CCDF:STATe ON
Query of results: :CALCulate1:STATistics:CCDF:STATe?
Result: <0|1>

PERCENT MARKER
:CALCulate<1>:MARKer1:Y:PERCent <value> PCT
Query of results: :CALCulate<1>:MARKer1:Y:PERCent ?
Result: <0..100> [%]

NO OF SAMPLES
:CALCulate<1>:STATistics:NSAMples <value>
Query of results: :CALCulate<1>:STATistics:NSAMples ?
Result: <value>

SCALING
:CALCulate<1>:STATistics:NSAMples <value>
Query of results: :CALCulate<1>:STATistics:NSAMples ?
Result: <value>

X-AXIS REF LEVEL
:CALCulate<1>:STATistics:SCALe:X:RLEVel <value> dBm
Query of results: :CALCulate<1>:STATistics:SCALe:X:RLEVel ?
Result: <value> [dBm]

X-AXIS RANGE
:CALCulate<1>:STATistics:SCALe:X:RANGe <value> dBm
Query of results: :CALCulate<1>:STATistics:SCALe:X:RANGe ?
Result: <value> [dBm]

Y-AXIS MAX VALUE
:CALCulate<1>:STATistics:SCALe:Y:UPPer <value>
Query of results: :CALCulate<1>:STATistics:SCALe:Y:UPPer?
Result: <value> Range: [1E-8...1]

Y-AXIS MIN VALUE
:CALCulate<1>:STATistics:SCALe:Y:LOWer <value>
Query of results: :CALCulate<1>:STATistics:SCALe:Y:LOWer ?
Result: <value> Range: [1E-9...0.1]

ADJUST SETTINGS
:CALCulate<1>:STATistics:SCALe:AUTO ONCE

DEFAULT SETTINGS
:CALCulate<1>:STATistics:PRESet

ADJUST REF LVL
:CALCulate<1>:STATistics:PRESet:RLEVel

ADJUST SETTINGS
:CALCulate<1>:STATistics:SCALe:AUTO ONCE

CONT MEAS
:INITiate<1>:CONTinuous ON
Query of results: :INITiate<1>:CONTinuous ?
Result: <1 | 0>

SINGLE MEAS
:INITiate<1>:IMMediate
:INITiate<1>:CONTinuous OFF
Query of results: :INITiate<1>:CONTinuous ?
Result: <0 | 1>

:INITiate<1>:IMMediate

CODE DOM POWER

```
:INSTrument<1>[:SELect] WCDPower
```
or
```
:CONFigure:WCDPower:MEASurement WCDPower
```

Query of results:

```
:TRACe:DATA?   TRACE1 | TRACE2 | ABITstream |
               PWCDp | CTABle | CWCDp
```

or
```
:CALCulate<1|2>:MARKer<1>:FUNCtion:WCDPower:RESult?
        PTOTal | FERRor |TFRame | TOFFset | MACCuracy |
        PCDerror | EVMRms | EVMPeak | CERRor | CSLot | SRATe |
        CHANnel | CDPabsolute | CDPRelative | IQOFfset |
        IQIMbalance | MTYPe |
```

or marker function (in marker submenu)

CHAN CONF

```
--
```

CODE CHAN AUTOSEARCH

```
:CONFigure:WCDPower[:BTS]:CTABle[:STATe] OFF
```

CODE CHAN PREDEFINED

```
:CONFigure:WCDPower[:BTS]:CTABle[:STATe] ON
:CONFigure:WCDPower[:BTS]:CTABle:SELect  <channel table name>
```

EDIT CHAN CONF TABLE

CHAN TABLE HEADER

```
:CONFigure:WCDPower[:BTS]:CTABle:NAME "channel table name"
:CONFigure:WCDPower[:BTS]:CTABle:COMMent "Comment for new table"
```

CHAN TABLE VALUES

```
:CONFigure:WCDPower[:BTS]:CTABle:NAME "channel table name"
:CONFigure:WCDPower[:BTS]:CTABle:DATA <numeric_value>
```

ADD SPECIAL

```
--
```

INSERT LINE

```
--
```

DELETE LINE

```
--
```

MEAS CHAN CONF TABLE

```
--
```

SAVE TABLE

```
--
```
(automatic if using remote control)

SORT TABLE

```
--
```

NEW CHAN CONF TABLE

please refer to EDIT CHAN CONF TABLE

DEL CHAN CONF TABLE

```
:CONFigure:WCDPower[:BTS]:CTABle:NAME "channel table name"
:CONFigure:WCDPower[:BTS]:CTABle:DELete
```

COPY CHAN CONF TABLE

```
:CONFigure:WCDPower[:BTS]:CTABle:NAME "channel table name"
:CONFigure:WCDPower[:BTS]:CTABle:COPY "new channel table name"
```

SETTINGS

```
--
```

SCRAMBLING CODE

```
:[SENSe:]CDPower:LCODe[:VALue] #H0 ... #H5fff<hex>
```

INACT CHAN THRESH

```
:[SENSe:]CDPower:ICTReshold -50 dB ... +10 dB
```

CODE PWR ABS REL

Abs. scaling: :CALCulate<1>:FEED "XPOWer:CDP"
:CALCulate<1>:FEED "XPOWer:CDP:ABSolute"

Rel. scaling: :CALCulate<1>:FEED "XPOWer:CDP:RATio"

POWER REF TOT CPICH

:[SENSe:]CDPower:PREFerence TOTal | CPICh

COMP MODE ON OFF

[:SENSe<1>]:CDPower:PCONtrol SLOT|PILot
Query of results: [:SENSe<1>]:CDPower:PCONtrol ?
Result: <1|0>

SYNC TYPE CPICH SCH

:[SENSe:]CDPower:STYPe CPICHh | SCHannel

ANT DIV ON OFF

:[SENSe:]CDPower:ANTenna OFF | 1 | 2

ANT NO. 1 2

:[SENSe:]CDPower:ANTenna OFF | 1 | 2

POWER DIFF ON OFF

:[SENSe<1|2>:]CDPower:PDIFf ON|OFF
Query of results: :[SENSe<1|2>:]CDPower:PDIFf ?
Result: <1|0>

MULTI FRM CAPTURE

CAPTURE LENGTH

:[SENSe:]CDPower:IQLength <numeric value>

Range:	FSU / FSP-B70 *(free run)*:	<numeric value>	*[1 ... 2]*
	FSU / FSP-B70 *(ext. trig)*:	<numeric value>	*[1 ... 3]*
	FSQ:	<numeric value>	*[1 ... 100]*
Unit:	[]		
Default:	1		

FRAME TO ANALYZE

:[SENSe:]CDPower:FRAMe[:VALue] <numeric value>

This command selects one frame of the captured data, which is evaluated.

Range:	<numeric value>	*[0 ... CAPTURE_LENGTH - 1]*
Unit:	[]	
Default:	0	

MULT CARR ON OFF

:CONFigure:WCDPower[:BTS]:MCARier:STATe ON | OFF

AUTO SCALE ON OFF

:CONFigure:WCDPower[:BTS]:ASCale:STATe ON | OFF

INVERT Q ON OFF

:[SENSe:]CDPower:QINVert ON | OFF

SIDE BAND NORM INV

:[SENSe:]CDPower:SBAND NORMal | INVerse

NORMALIZE ON OFF

:[SENSe:]CDPower:NORMalize ON | OFF

RESULTS

--

CODE DOM POWER

:CALCulate<1>:FEED 'XPOW:CDP'
:CALCulate<1>:FEED 'XPOW:CDP:ABS'
:CALCulate<1>:FEED 'XPOW:CDP:RAT'

COMPOSITE EVM

:CALCulate2:FEED "XTIM:CDP:MACCuracy"

PEAK CODE DOMAIN ERR

```
:CALCulate2:FEED "XTIM:CDP:ERR:PCDomain"
```

POWER VS SLOT

```
:CALCulate2:FEED "XTIM:CDP:PVSLot"
```

RESULT SUMMARY

```
:CALCulate2:FEED "XTIM:CDP:ERR:SUMMary"
```

Query of results:

```
:CALCulate:MARKer:FUNCtion:WCDPower[:BTS]:RESult?
 PTOTal | FERRor | TFRame | TOFFset | MACCuracy | PCDerror | EVMRms |
EVMPeak | CERRor | CSLOt | SRATe | CHANnel | CDPabsolute | CDPRelative
| IQOFfset | IQIMbalance | MTYPe
```

COMPOSITE CONST

```
:CALCulate<1>:FEED "XTIM:CDP:COMP:CONStellation"
```

Query of results: `TRACe<1>:DATa? TRACe2`
Format: $Re_1, Im_1 \mid Re_2, Im_2 \mid \; \mid Re_{2560}, Im_{2560}$
Unit: [1]
Quantity: 2560

SELECT CHANNEL

```
:[SENSe:]CDPower:CODE 0...511
```

SELECT CPICH SLOT

```
:[SENSe:]CDPower:SLOT 0 ... 14
```

ADJUST REF LVL

```
SENS:POW:ACH:PRES:RLEV
```

CODE DOM ERROR

```
:CALCulate<1>:FEED "XPOWer:CDEP"
```

Query of result: :TRACe<1>:DATa? TRACe1

Output: CDEP list of each CC9 channel
Format: <code class>$_1$, <code number>$_1$, <CDEP>$_1$, <channel flag>$_1$, <code class>$_2$, <code number>$_2$, <CDEP>$_2$, <channel flag>$_2$, ,....., <code class>$_{512}$, <code number>$_{512}$, <CDEP>$_{512}$, <channel flag>$_{512}$

Unit: < [1] >, < [1] >, < [dB] >,< [1] >
Range: < 9 > , < 0...511 >, < -∞ ... ∞ >, < 0 ; 1 ; 3>
Quantity: 512

CHANNEL TABLE

```
:CALCulate<1>:FEED "XTIM:CDP:ERR:CTABle"
```

POWER VS SYMBOL

```
:CALCulate<1>:FEED "XTIM:CDP:PVSYmbol"
```

Query of results: `TRACe<1>:DATa? TRACe2`
Format: $Val_1 \mid Val_2 \mid \; \mid Val_{NOF}$
Unit: [dB]
Quantity: $NOF_{Symbols} = 10 \cdot 2^{(8-CodeClass)}$

SYMBOL CONST

```
:CALCulate2:FEED "XTIM:CDP:SYMB:CONStellation"
```

SYMBOL EVM

```
:CALCulate2:FEED "XTIM:CDP:SYMB:EVM"
```

BITSTREAM

```
:CALCulate2:FEED "XTIM:CDP:BSTReam"
```

8 Performance Test

- Switch off the FSU before removing or inserting modules.
- Check the setting of the AC supply voltage selector (230 V) prior to switching on the unit.
- Measure the parameters after a warm-up time of at least 30 min. and the completion of system error correction of the FSU and SMIQ. Only then is compliance with specifications ensured.
- Unless specified otherwise, all settings are made after a PRESET.
- Conventions for settings on the FSU during the measurement:

[***<Key>***]	Press a key on the front panel, e.g. [SPAN].
[<SOFTKEY>]	Press a softkey, e.g. [MARKER -> PEAK].
[<nn unit>]	Enter a value and terminate by entering the unit, e.g. [12 kHz].
{<nn>}	Enter values indicated in one of the following tables.

- Successive entries are separated by [:], e.g. [SPAN: 15 kHz].
- The values stated below in this document are not guaranteed values. Only the data sheet specifications are binding.

Required Measuring Equipment and Accessories

Table 8-1 Required measuring equipment and accessories

Item	Instrument type	Recommended characteristics	Recommended equipment	R&S Order No.	Use
1	Signal generator	Vector signal generator for generating cdmaOne signals	SMIQ with options: SMIQB42 SMIQB20 SMIQB11	1125.5555.xx 1104.7936.02 1125.5190.02 1085.4502.04	

Test Procedure

The performance test refers exclusively to results of the code domain power.
It is not necessary to check the POWER-, ACLR- and SPECTRUM results since they are covered by the performance test of the base unit.

Default settings on the SMIQ:

[PRESET]
[LEVEL : *0 dBm]*
[FREQ: *2.1175 GHz]*
DIGITAL STD
WCDMA 3GPP
TEST MODELS ...
TEST1_32
SELECT BS/MS
BS 1 ON
STATE: ON

Trigger output: *RADIO FRAME*
Check set channels against the following table:

CHNO	TYPE	SYM.R	CH.CD	POW	DATA	TOFFS	PILOT	TPC	MC	STATE
0	P-CPICH	15	0	-10.0					OFF	ON
2	P-SCH	15		-13.0					OFF	ON
3	S-SCH	15		-13.0					OFF	ON
4	P-CCPCH	15	1	-10.0	PN9					ON
6	PICH	15	16	-15.0	PATT	120				ON
11	DPCH	30	2	-13.0	PN9	86	8	PATTOFF		ON
12	DPCH	30	11	-13.0	PN9	134	8	PATTOFF		ON
13	DPCH	30	17	-14.0	PN9	52	8	PATTOFF		ON
14	DPCH	30	23	-15.0	PN9	45	8	PATTOFF		ON
15	DPCH	30	31	-17.0	PN9	143	8	PATTOFF		ON
16	DPCH	30	38	-14.0	PN9	112	8	PATTOFF		ON
17	DPCH	30	47	-16.0	PN9	59	8	PATTOFF		ON
18	DPCH	30	55	-18.0	PN9	23	8	PATTOFF		ON
19	DPCH	30	62	-16.0	PN9	1	8	PATTOFF		ON
20	DPCH	30	69	-19.0	PN9	88	8	PATTOFF		ON
21	DPCH	30	78	-17.0	PN9	30	8	PATTOFF		ON
22	DPCH	30	85	-15.0	PN9	18	8	PATTOFF		ON
23	DPCH	30	94	-17.0	PN9	30	8	PATTOFF		ON
24	DPCH	30	102	-22.0	PN9	61	8	PATTOFF		ON
25	DPCH	30	113	-20.0	PN9	128	8	PATTOFF		ON
26	DPCH	30	119	-24.0	PN9	143	8	PATTOFF		ON
27	DPCH	30	7	-20.0	PN9	83	8	PATTOFF		ON
28	DPCH	30	13	-18.0	PN9	25	8	PATTOFF		ON
29	DPCH	30	20	-14.0	PN9	103	8	PATTOFF		ON
30	DPCH	30	27	-14.0	PN9	97	8	PATTOFF		ON
31	DPCH	30	35	-15.0	PN9	56	8	PATTOFF		ON
32	DPCH	30	41	-19.0	PN9	104	8	PATTOFF		ON
33	DPCH	30	51	-18.0	PN9	51	8	PATTOFF		ON
34	DPCH	30	58	-17.0	PN9	26	8	PATTOFF		ON
35	DPCH	30	64	-22.0	PN9	137	8	PATTOFF		ON
36	DPCH	30	74	-19.0	PN9	65	8	PATTOFF		ON
37	DPCH	30	82	-19.0	PN9	37	8	PATTOFF		ON
38	DPCH	30	88	-16.0	PN9	125	8	PATTOFF		ON
39	DPCH	30	97	-18.0	PN9	149	8	PATTOFF		ON
40	DPCH	30	108	-15.0	PN9	123	8	PATTOFF		ON
41	DPCH	30	117	-17.0	PN9	83	8	PATTOFF		ON
42	DPCH	30	125	-12.0	PN9	5	8	PATTOFF		ON

all other channels STATE OFF

Default settings on the FSU:

[PRESET]
[CENTER: *2.1175 GHz]*
[REF: *10 dBm]*
[3G FDD BS]
[TRIG *EXTERN]*
[SETTINGS SCRAMBLING CODE 0]
[DISPLAY CHANNEL TABLE]

Test setup and other settings:

- Connect external trigger input of the FSU to the SMIQ
- Connect external reference output of the FSU to the SMIQ

SMIQ

UTILITIES

REF OSC

SOURCE: EXT

[SETUP:

REFERENCE INT]

FSU

The display of the FSU should show the following:

Channel Table SR 30 ksps
Chan Code 69
CF 2.1175 GHz CPICH Slot 0 Chan Slot 7

Channel Table

Type	Symb Rate	Chan#	Status	TFCI	PilotL	Pwr Abs	Pwr Rel	T Offs
CPICH	15.0 ksps	0	active	---	---	-10.19	-0.00	---
PSCH	-.- ksps	---	active	---	---	-16.29	-6.10	---
SSCH	-.- ksps	---	active	---	---	-15.85	-5.67	---
PCCPCH	15.0 ksps	1	active	---	---	-10.18	0.01	---
------	-.- ksps	---	inactv	---	---	-.--	-.--	---
PICH	15.0 ksps	16	active	---	---	-18.20	-8.02	30720
DPCH	30.0 ksps	69	active	ON	8	-19.16	-8.97	22528
DPCH	30.0 ksps	74	active	ON	8	-19.20	-9.01	16640
DPCH	30.0 ksps	78	active	ON	8	-17.19	-7.00	7680
DPCH	30.0 ksps	82	active	ON	8	-19.19	-9.00	9472

Result Summary SR 30 ksps
Chan Code 69
CF 2.1175 GHz CPICH Slot 0 Chan Slot 7

Result Summary

GLOBAL RESULTS			
Total Power	-0.26 dBm	Carrier Freq Error	-83.91 mHz
Chip Rate Error	0.01 ppm	Trigger to Frame	0.00 s
IQ Offset	0.19 %	IQ Imbalance	0.06 %
Composite EVM	1.41 % rms	Pk CDE (15.0 ksps)	-57.83 dB rms
CPICH Slot No	0	No of Active Chan	35
CHANNEL RESULTS			
Symbol Rate	30.00 ksps	Timing Offset	22528 Chips
Channel Code	69	Channel Slot No	7
No of Pilot Symb	8		
Channel Power Rel	-8.97 dB	Channel Power Abs	-19.16 dBm
Symbol EVM	1.10 % rms	Symbol EVM	1.78 % Pk

Date: 14.DEC.2001 13:39:42

9 Glossary

CPICH	Common pilot channel (spreading code number 0 at spreading factor 128). The channel constantly contains the symbol (1,1) throughout the total length of the 3GPP FDD frame. For the measurements, the CPICH (Primary CPICH) is used for synchronization. For this reason, the CPICH must be contained in the signal to be measured.
Composite EVM	In accordance with the 3GPP specifications, the squared error between the real and imaginary components of the test signal and an ideal reference signal is determined (EVM referenced to the total signal) in a composite EVM measurement.
DPCH	Dedicated physical channel, data channel. The data channels, which can be sent at different transmission rates, are automatically recognized during the measurement.
Inactive channel threshold	Minimum power that a single channel must have as compared to the total signal in order to be recognized as an active channel.
PCCPCH	Primary common control physical channel (spreading code number 1 at spreading factor 128). The channel is used for synchronizing the measurements. For this reason, it must be contained in the signal to be measured.
Peak code domain error	In accordance with the 3GPP specifications, the error between the test signal and the ideal reference signal is projected onto the classes of the different spreading factors in the case of a peak code domain measurement.
PICH	Paging indication channel. This special channel is defined in the test models to 3GPP for measurements on base station signals. Since it does not contain any pilot symbols, it cannot automatically be recognized during measurement. Therefore, this channel must be deactivated for CDP measurements.
SCH	Synchronization channel, divided into P-SCH (primary synchronization channel) and S-SCH (secondary synchronization channel). The two channels are required for synchronizing the measurement. Therefore, they must always be contained in the signal to be measured.
Timing offset	Offset between the start of the first slot of a channel and the start of the analyzed 3GPP FDD frame (in multiples of 256 chips).

10 Index

*

* (enhancement label) 96

A

ACLR 30
ACP measurement 30
Adjacent-channel power 30
  number of channels 39
Amplitude power distribution 51
Amplitude probability distribution function 51, 52
APD function 52
Attenuation 92
Averaging 96

B

Bandwidth
  Occupied 49
Bit stream 75

C

Carrier freq error 66
CCDF
  Complementary cumulative distribution function 51
CCDF function 52
CDP rel. 80
Center frequency 91
  Step size 91
Chan # 72, 80
Chan pow rel. / abs 67
Channel 77
  power 42
  bandwidth 40
  Bandwidth 34, 35
  number 39
  Number 31
  Power
    Absolute/relative 36
  spacing 41
  Spacing 35
  Status 80
Channel assignment table 70
Channel code 67
Channel number 80
Channel power
  Relative 80
Channel slot No 67
Channel, active 84, 150
Chip rate error 66
Clear/Write mode 96
Code domain power 68
Code domain power 59
Commands
  Assignment to softkeys 139
  Description 99
Common pilot channel 94, 150
Composite EVM 62, 66, 150
Correction
  inherent noise 37
CPICH 150
CPICH slot 77
CPICH slot No 66
Culmulative distribution function 52

D

Default
  Scales of x and y axis 54
Default setting
  Preset 11
Display range
  Frequency 91
Distribution function 52
Distribution function of signal amplitudes 51
DPCH 150

F

Fast power measurement 38
Fast power measurement 32
Frequency
  Center 91
  Offset 91

H

Hotkey
  3G FDD BS 26
  CHAN CONF 26, 78
  EXIT 3GPP 26
  RESULTS 26, 57
  SETTINGS 26, 83

I

I/Q imbalance 66
I/Q offset 66
Inactive channel threshold 150
Inherent noise, Correction 37

K

Key
  AMPT 92
  BW 95
  DISP 98
  FREQ 91
  LINES 98
  MARKER 93
  MEAS 28, 95
  MKR→ 94
  SPAN 91
  SWEEP 95
  TRACE 96
  TRIG 95

L

Level
  Reference 92
Limit
  ACP measurement 43
  Probability range 53
Limit check
  ACLR measurement 33
  ACP measurement 43

M

Marker
  Peak ... 94
  Zoom ... 93
Max hold ... 96
Maximum search ... 94
Menu overview ... 26
Min hold ... 96
Modulation accuracy ... 62
Modulation type ... 67

N

No of active channel ... 66
No of pilot bits ... 67
Noise, Correction ... 37
Number
  Pilot bits ... 67

O

Offset
  Frequency ... 91
  Reference level ... 92

P

PCCPCH ... 150
Peak code domain error ... 63, 66, 150
Peak search ... 94
Performance test ... 147
PICH ... 150
Pilot bits ... 80
PilotL ... 72
Pk CDE ... 66
Power
  Adjacent-channel power ... 30
  Channel power ... 29
  Ref. to 1 Hz bandwidth ... 36
Power bandwidth
  Percentage ... 50
Power group ... 64
Power measurement ... 29
  Fast ... 32, 38
Power of 3GPP FDD signal ... 44
Preset ... 11
Primary common control physical channel ... 94, 150
Pwr Abs ... 72
Pwr Rel ... 72

R

RECENT ... 78
Reference level ... 92
  channel power ... 38
  Channel power ... 50, 77
  Offset ... 92
Remote control ... 99
RF attenuation ... 92

S

Sample number ... 52
Scaling
  x and y axis (signal statistic) ... 53
SCCPCH ... 24
SCH ... 150
Scrambling code ... 83
Search
  Peak ... 94
Selection
  Channel ... 77
  Slot ... 77
Sensitivity
  APD measurement ... 54
  CCDF measurement ... 54
Signal amplitudes, distribution function ... 51
Signal statistics ... 51
Slot number
  Channel ... 67
  CPICH ... 66
Softkey
  % POWER BANDWIDTH ... 50
  3GPP BTS ANALYZER ... 119
  ACLR ... 28, 30, 113
  ACLR LIMIT CHECK ... 33
  ACP LIMIT CHECK ... 43
  ACP REF SETTINGS ... 41
  ADD SPECIAL ... 81
  ADJ CHAN BANDWIDTH ... 35, 40
  ADJ CHAN SPACING ... 35, 41
  ADJUST REF LVL ... 29, 33, 38, 48, 50, 77, 92
  ADJUST SETTINGS ... 50, 54
  ADJUST SETTINGS (power measurements) ... 42
  ALL MARKER OFF ... 93
  ANT DIV ON/OFF ... 87
  ANT NO. 1/2 ... 88
  APD ON/OFF ... 52
  AVERAGE ... 96
  BITSTREAM ... 75, 100, 132
  CAPTURE LENGTH ... 89
  CCDF ... 111, 113
  CCDF ON/OFF ... 52
  CENTER ... 91
  CHAN PWR / HZ ... 36, 42
  CHAN TABLE HEADER ... 115
  CHAN TABLE VALUES ... 115
  CHANNEL BANDWIDTH ... 34
  CHANNEL TABLE ... 70, 100, 132
  CLEAR/WRITE ... 96
  CODE CHAN AUTOSEARCH ... 78, 114
  CODE CHAN PREDEFINED ... 78, 114
  CODE DOM ERROR ... 100
  CODEDOMERROR ... 68
  CODE DOM POWER ... 100
  CODE DOM POWER ... 28, 59
  CODE PWR ABSOLUTE ... 132
  CODE PWR RELATIVE ... 132
  COMP MODE ON/OFF ... 86
  COMPOSITE EVM ... 62, 100, 113, 132
  COMPRESSED MODE ... 122
  CONT MEAS ... 54
  COPY CHAN CONF TABLE ... 82, 115
  CP/ACP ABS/REL ... 36, 42
  CP/ACP CONFIG ... 39
  DEFAULT SETTINGS ... 54
  DEL CHAN CONF TABLE ... 82, 116
  DELETE LINE ... 81
  DIAGRAM FULL SIZE ... 33
  EDIT ACLR LIMIT ... 34
  EDIT ACP LIMITS ... 43, 104
  EDIT CHAN CONF TABLE ... 79, 114
  ESG OPT 101 ... 46, 47, 48, 89, 90
  FAST ACLR ON/OFF ... 32
  FAST ACP ON/OFF ... 38
  FRAME TO ANALYZE ... 89
  FREQUENCY OFFSET ... 91
  FULL SIZE DIAGRAM ... 38

HEADER/VALUES 80
INACT CHAN THRESH 84, 123
INSERT LINE 81
INSTALL OPTION 9
INVERT Q 90, 122
LIMIT LINE AUTO 45, 106
LIMIT LINE MANUAL 45, 106
LIMIT LINE USER 45, 106
MARKER -> CPICH 94, 107
MARKER -> PCCPCH 94, 107
MARKER 1 to 4 93
MARKER NORM/DELTA 93
MARKER ZOOM 93
MAX HOLD 96
MEAS CHAN CONF TABLE 81
MIN HOLD 96
MULT CARR ACP 37
MULTI FRAME CAPTURE 88
NEW CHAN CONF TABLE 82, 114
NEXT MODE LEFT/RIGHT 94
NEXT PEAK 94
NO OF SAMPLES 52, 111
NO. OF ADJ CHAN 31, 39
NO. OF TX CHAN 39
NOISE CORR ON/OFF 32, 37
NORMALIZE ON / OFF 90, 121
OCCUPIED BANDWIDTH 28, 49, 113
OPTIONS 9
PEAK 94
PEAK CODE DOMAIN ERR 63, 100, 132
PEAK MODE MIN/MAX 94
PERCENT MARKER 52
POW DIFF ON/OFF 88
POWER 28, 29, 113
POWER REF TOT / CPICH 85, 123
POWER VS SLOT 64, 100, 132
REF LEVEL 92
REF LEVEL OFFSET 92
REF VALUE POSITION 92
RESTORE STD LINES 46
RESULT DISPLAY 100, 132
RESULT SUMMARY 66, 100, 132
RF ATTEN AUTO 92
RF ATTEN MANUAL 92
SAVE TABLE 81
SCALING 53
SCRAMBLING CODE 83, 122
SCREEN 97
SELECT CHANNEL 77, 121
SELECT CPICH SLOT 77, 122
SELECT MARKER 94
SELECT PCDE SF 121
SIDE BAND NORM / INV 90, 122
SINGLE MEAS 54
SORT TABLE 82
SPECTRUM 113
SPECTRUM EM MASK 28, 44, 113
STATISTICS 28, 51
SWEEP COUNT 96
SWEEP TIME 32
SYMBOL CONST 74, 100, 132
SYMBOL EVM 75, 100, 132
SYNC TYPE CPICH/SCH 87
TIME DOMAIN 113
VIEW 96
X-AXIS RANGE 53
X-AXIS REF LEVEL 53
Y MAX 112
Y MIN 112
Y PER DIV 92
Y-AXIS MAX VALUE 53
Y-AXIS MIN VALUE 53
Specifications 147
Spectrum emission mask 44
Spreading code 67
Spreading factor 121
Status 72, 80
Stepsize
Center frequency 91
Symbol constellation 74
Symbol error vector magnitude 75
Symbol EVM Pk / rms 67
Symbol rate 67, 72, 80

T

T Offs 72
Taste
FILE 98
MKR FCTN 95
Test models 24
Test setup 22
TFCI 72
TFCI symbols 80
Timing offset 67, 80, 150
Total power 36, 66
Trace
Average 96
Clear/Write 96
Freeze 96
Max hold 96
Min hold 96
Trigger to frame 66

U

Use TFCI 80

V

View trace 96

Z

Zoom 93
Amplitude 96